

[manuals.plus](#) /

› [weelikeit](#) /

› [weelikeit P36W Tablet User Manual](#)

weelikeit Weelikeit P36W tablet

weelikeit P36W Tablet User Manual

Model: Weelikeit P36W tablet

1. INTRODUCTION

Welcome to the weelikeit P36W Tablet User Manual. This guide provides detailed instructions on how to set up, operate, and maintain your new Android 14 tablet. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

2. PRODUCT OVERVIEW

The weelikeit P36W is a high-performance Android 14 tablet designed for a seamless user experience. It features a vibrant 10.95-inch FHD Incell display, a powerful Octa-Core Unisoc T606 processor, and ample storage for all your needs.

Key Features:

- Display:** 10.95-inch FHD Incell Screen (1200x1920 pixels)
- Processor:** Octa-Core Unisoc T606 (2 GHz)
- Memory:** 14GB RAM (6GB + 8GB Expansion)
- Storage:** 128GB ROM (Expandable up to 1TB via MicroSD card)
- Operating System:** Android 14
- Cameras:** 5MP Front, 13MP Rear
- Battery:** 7000mAh (approx. 10 hours average use)
- Connectivity:** 2.4GHz & 5GHz Dual-Band Wi-Fi, Bluetooth 5.0, GPS
- Audio:** Dual Speakers, 3.5mm Audio Jack



Figure 2.1: Overview of weelikeit P36W Tablet features including cameras, RAM, ROM, processor, screen resolution, Wi-Fi, Bluetooth, and battery.

3. WHAT'S IN THE Box

Upon unboxing your weelikeit P36W Tablet, you should find the following items:

- 1x weelikeit Android Tablet
- 1x Power Adapter
- 1x Type-C USB Cable
- 1x Protective Film (pre-installed)
- 1x User Manual (this document)



Figure 3.1: The weelikeit P36W Tablet along with its power adapter, Type-C cable, and user manual.

4. SETUP

4.1 Initial Power On

To power on your tablet for the first time, press and hold the Power button located on the top edge of the device until the weelikeit logo appears. The tablet comes with a protective film pre-installed on the screen.

4.2 Language and Region Selection

Follow the on-screen prompts to select your preferred language and region. This will configure the tablet's basic settings.

4.3 Wi-Fi Connection

Connect your tablet to a Wi-Fi network to access the internet. Go to **Settings > Network & internet > Wi-Fi**, select your network, and enter the password if required. The tablet supports both 2.4GHz and 5GHz Wi-Fi bands for stable and fast connections.



Figure 4.1: The tablet screen showing the 5G WiFi connection, indicating strong and fast internet access.

4.4 Google Account Setup

Sign in with your Google account or create a new one. This is essential for downloading apps from the Google Play Store, syncing data, and accessing Google services.

4.5 Unboxing and Setup Video

Video 4.1: An official seller video demonstrating the unboxing and initial setup process of the weelikeit P36W tablet, including powering on and navigating the initial setup screens.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

Your tablet uses a touch-based interface. Tap to select, swipe to scroll, and pinch to zoom. The navigation bar at the bottom of the screen provides Home, Back, and Recent Apps buttons.

5.2 App Installation

Download and install applications from the Google Play Store. Simply open the Play Store app, search for your desired app, and tap 'Install'.



Figure 5.1: The tablet screen showcasing various entertainment applications, highlighting its capability for media consumption.

5.3 Media Consumption

The 10.95-inch FHD Incell screen provides a clear and immersive viewing experience for videos and movies. The dual speakers enhance audio quality.

Video 5.1: An official seller video demonstrating the smooth video playback capabilities of the tablet, ideal for watching movies and other media content.

6. CAMERA USAGE

The weelikeit P36W tablet is equipped with a 5MP front camera for selfies and video calls, and a 13MP rear camera for capturing high-quality photos and videos.

6.1 Taking Photos and Videos

Open the Camera app from your home screen or app drawer. Select photo or video mode, frame your shot, and tap the shutter button to capture. The 13MP rear camera includes a flash for low-light conditions.



Figure 6.1: Individuals using the tablet's camera to capture various moments, illustrating its dual camera functionality.

7. CONNECTIVITY

7.1 Wi-Fi

The tablet supports dual-band Wi-Fi (2.4GHz and 5GHz) for fast and reliable internet access. Ensure your Wi-Fi router is within range for optimal performance.

7.2 Bluetooth 5.0


Connect wireless accessories such as headphones, keyboards, or speakers via Bluetooth. Go to **Settings > Connected devices > Bluetooth** to pair new devices.

7.3 GPS

The built-in GPS module allows for accurate location tracking and navigation. This feature is useful for mapping applications and location-based services.

New upgraded version of Android 14

New upgraded version of Android 14 tablet is equipped with a powerful T606 architecture and an Octa-Core CPU, providing smooth and fast performance. It uses a low-power 12nm process to ensure the lowest power consumption and heat generation.

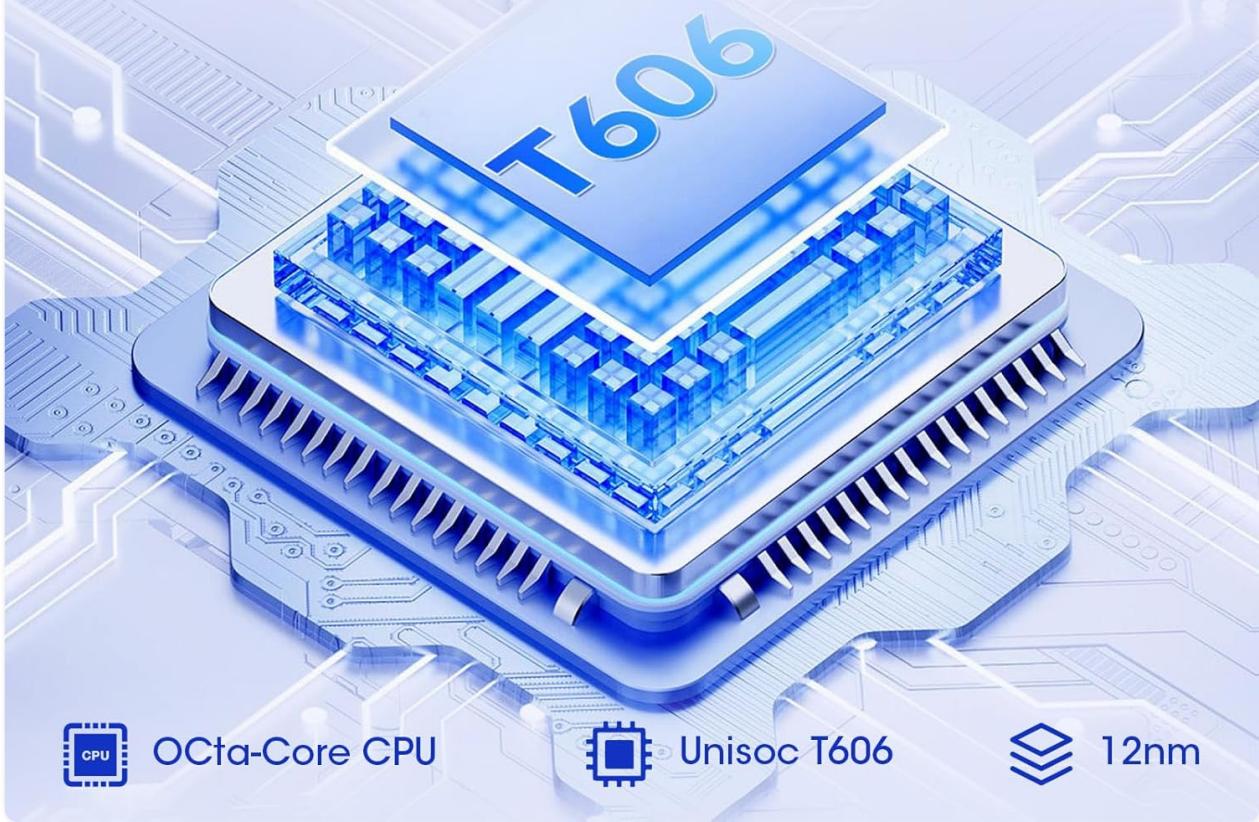

Octa-Core CPU



Unisoc T606



12nm

Figure 7.1: The tablet screen showing a GPS navigation map, demonstrating its integrated GPS functionality for travel and navigation.

8. STORAGE MANAGEMENT

Your tablet comes with 128GB of internal storage. If you require more space, you can expand it up to 1TB using a MicroSD card (sold separately).

8.1 Inserting a MicroSD Card

Locate the SIM/MicroSD card tray on the side of the tablet. Use the provided SIM ejector tool to open the tray. Carefully place the MicroSD card into the designated slot and reinsert the tray.

8.2 Managing Files

 
Use the pre-installed Files app to view, organize, and manage your documents, photos, videos, and other files stored on the tablet and MicroSD card.



7000mAh



5-8 Hours



Type-c

7000mAh large-capacity battery and intelligent power saving technology,

long standby time, Make your trip hassle-free, full of and enjoyable!

7000mAh



Figure 8.1: The tablet screen illustrating its storage capacity and the option to expand storage with a TF card.

9. BATTERY INFORMATION

The tablet is equipped with a large 7000mAh battery, providing approximately 10 hours of average battery life for mixed usage.

9.1 Charging the Tablet

Connect the provided Type-C USB cable to the tablet's USB-C port and the other end to the power adapter. Plug the adapter into a wall outlet. A charging indicator will appear on the screen.

9.2 Battery Optimization

To extend battery life, reduce screen brightness, disable Wi-Fi or Bluetooth when not in use, and close background applications.

10. MAINTENANCE

10.1 Cleaning the Device

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

10.2 Software Updates

Regularly check for and install system updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**

10.3 Screen Protection

The tablet comes with a pre-installed protective film. For additional protection, consider using a tempered glass screen protector or a protective case.

11. TROUBLESHOOTING

11.1 Tablet Not Powering On

Ensure the tablet has sufficient battery charge. Connect it to the power adapter and wait a few minutes before attempting to power it on again. If the issue persists, try holding the power button for 10-15 seconds for a forced restart.

11.2 Wi-Fi Connection Issues

Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router and the tablet. Forget the network and reconnect. Ensure you are entering the correct password.

11.3 Slow Performance

Close unnecessary background apps. Clear cached data from apps (Settings > Apps > [App Name] > Storage > Clear cache). Consider uninstalling unused apps or moving large files to a MicroSD card.

11.4 Factory Reset

If you encounter persistent software issues, a factory reset may resolve them. **Warning:** This will erase all data on your tablet. Back up important data before proceeding. Go to **Settings > System > Reset options > Erase all data (factory reset)**.

12. SPECIFICATIONS

Feature	Description
Model	Weelikeit P36W tablet
Display	10.95-inch IPS FHD Incell (1200x1920 pixels)
Processor	Octa-Core Unisoc T606 (2 GHz)
RAM	14GB (6GB + 8GB Expansion)
ROM	128GB (Expandable up to 1TB via MicroSD card)
Operating System	Android 14
Front Camera	5MP

Rear Camera	13MP
Battery	7000mAh (approx. 10 hours average life)
Wi-Fi	2.4GHz & 5GHz Dual-Band
Bluetooth	Bluetooth 5.0
GPS	Built-in GPS module
Dimensions	10.07 x 6.61 x 0.29 inches
Weight	2 pounds

13. WARRANTY AND SUPPORT

Your weelikeit P36W Tablet comes with a one-year warranty from the date of purchase. If you encounter any quality issues or have questions regarding your tablet, please contact the reliable seller's support team. They are committed to providing satisfactory and professional solutions within 24 hours.

For customer service, please refer to the contact information provided with your purchase or on the official weelikeit website.