



Manuals.plus /

› Uuoeebb /

› Uuoeebb Baby Walker with Wheels, Music and Lights - Instruction Manual

## Uuoeebb B0DFCJY1MF

# Uuoeebb Baby Walker with Wheels, Music and Lights - Instruction Manual

Model: B0DFCJY1MF

## 1. INTRODUCTION

Thank you for choosing the Uuoeebb Baby Walker. This manual provides essential information for the safe assembly, operation, and maintenance of your baby walker. Please read it thoroughly before use and keep it for future reference. This walker is designed to provide a safe and engaging environment for babies aged 6-12 months, supporting their development and mobility.



Figure 1: Uuoeebb Baby Walker Overview

## 2. IMPORTANT SAFETY INFORMATION

Your child's safety is paramount. Always adhere to the following safety guidelines:

- **Never leave your child unattended** in the walker. Always maintain direct supervision.
- Ensure the child's feet can touch the floor when seated in the walker at the lowest height setting.
- Keep the walker away from stairs, steps, uneven surfaces, and heat sources.
- Do not use the walker if any components are damaged or missing. Regularly inspect for wear and tear.
- The walker is designed for children who can sit up unassisted and weigh less than 26 lbs (12 kg) and are shorter than 32 inches (81 cm).
- The full wrap-around anti-fall cushion and side fall prevention strips are designed to enhance safety, but do not replace supervision.
- Ensure all locking mechanisms are securely engaged before placing your child in the walker.

## Upgraded Anti-Fall Cushion



Figure 2: Upgraded Anti-Fall Cushion for enhanced safety

## Prevent O-Legs

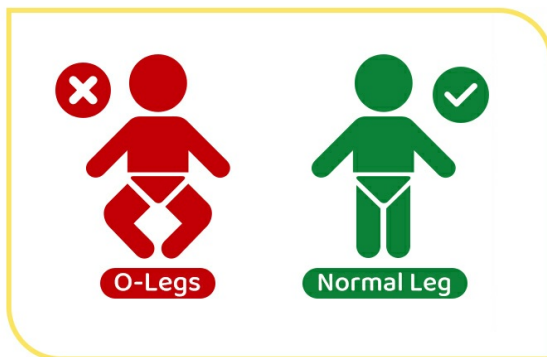


Figure 3: Proper height adjustment helps prevent O-legs

### 3. PRODUCT FEATURES

The Uuoeebb Baby Walker is designed with multiple features to ensure your child's comfort, safety, and entertainment:

- **Music and Lights Tray Design:** Features a detachable music box with various songs, piano notes, and lights. Includes a steering wheel, piano keys, and a spinning ball for interactive play. (Requires AA batteries, not included).
- **Full Wrap-around Anti-fall Cushion:** Enhanced load-bearing capacity and side fall prevention strips to reduce the risk of falling and provide all-around protection.
- **Universal Wheels and Brake Design:** Equipped with 8 universal wheels for 360° swivel movement and 4 parking brakes for stability when needed.
- **7-Position Height Adjustment:** Patented one-touch height adjustment with 3-speed car body height and 4-speed seat cushion adjustment to accommodate babies of different ages and heights, promoting healthy growth and preventing O-legs.
- **Easy Folding and Storage:** Designed for quick and easy folding without additional tools, allowing for minimal storage space and portability for travel.

# Development Music Education Toys Tray



Attractive Fun Toys

5 Songs Music

Flashing Lights

Figure 4: Detachable Music and Lights Activity Tray

# 7 Gear Adjustment Height

Suitable for babies of different height



Figure 5: 7-Position Height Adjustment Mechanism

# Convenient One-touch Folding Operation

The baby walker with wheels easy to assemble & foldable



Figure 6: Convenient One-touch Folding Operation

## 4. COMPONENTS LIST

Please ensure all the following components are present in your package:

- Main Walker Frame (with 8 universal wheels and 4 parking brakes)
- Seat Cushion (pre-installed or separate)
- Detachable Music and Lights Activity Tray
- User Manual (this document)



Figure 7: Key Components of the Baby Walker

## 5. SETUP AND ASSEMBLY

The Uuoeebb Baby Walker is designed for easy assembly. Follow these steps to set up your walker:

1. **Unfold the Walker:** Place the folded walker on a flat surface. Locate the folding lever (refer to Figure 6, step 2). Hold the lever and gently pull the top frame upwards until the walker locks into its open position. Ensure it is fully extended and stable.
2. **Adjust Height (Initial):** Press the height adjustment button (refer to Figure 6, step 1) and set the walker to the desired initial height. Ensure all four legs are at the same level and securely locked.
3. **Install Seat Cushion:** If the seat cushion is not pre-installed, carefully attach it to the walker frame according to the loops and fasteners provided. Ensure it is securely fastened.
4. **Attach Activity Tray:** Align the detachable music and lights activity tray with the designated slots on the walker's front tray. Press down firmly until it clicks into place.
5. **Insert Batteries (for Activity Tray):** Open the battery compartment on the underside of the activity tray. Insert the required AA batteries (not included), ensuring correct polarity. Close the compartment securely.
6. **Final Check:** Before placing your child in the walker, double-check all connections, locks, and adjustments to ensure they are secure and stable.

## 6. OPERATING INSTRUCTIONS

### 6.1. Height Adjustment

The walker features a 7-position height adjustment system to grow with your child:

- **Car Body Height (3 levels):** To adjust the overall height of the walker, press the button on the side of the main frame (as shown in Figure 5). Adjust the frame up or down to one of the three available positions. Ensure both sides are adjusted equally and lock into place.
- **Seat Cushion Adjustment (4 levels):** The seat cushion itself can be adjusted to four different depths to provide optimal support and prevent O-legs. Adjust the straps or fasteners under the seat to achieve the desired depth.
- Always ensure your child's feet can comfortably touch the floor when seated, with a slight bend in the knees.

### 6.2. Music and Lights Activity Tray

The detachable activity tray provides engaging entertainment:

- **Power On/Off:** Locate the power switch on the activity tray to turn it on or off.
- **Music and Lights:** Press the various buttons (piano keys, steering wheel buttons) on the tray to activate different songs, piano notes, and flashing lights.
- **Detaching the Tray:** To remove the tray for cleaning or for the 'Music Plate Mode', locate the release tabs on either side of the tray and gently pull upwards.

### 6.3. Using the Brakes

The walker is equipped with 4 parking brakes for stability:

- To engage a brake, push down on the brake lever located near each wheel.
- To release a brake, lift the lever upwards.
- Use the brakes when you need the walker to remain stationary, such as during meal times or when placing/removing your child.

### 6.4. Seated, Walk, and Music Plate Modes

The walker offers versatile usage modes:

- **Seated Mode (6-12 months):** For infants learning to sit and develop back muscles. Ensure the child is securely seated with the activity tray in place.
- **Walk Mode (13-24 months):** As your child begins to practice walking, they can use the walker to aid their mobility. Ensure the height is adjusted appropriately for walking.
- **Music Plate Mode (6-24 months):** The detachable activity tray can be removed and placed on the floor for independent play, encouraging auditory and cognitive development.



Figure 8: Seated, Walk, and Music Plate Modes

## 7. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and safety of your baby walker:

- **Cleaning:** Wipe plastic and metal parts with a damp cloth and mild soap. Do not use abrasive cleaners. The seat cushion can be removed and hand-washed with mild detergent, then air-dried.
- **Storage:** When not in use, fold the walker (refer to Figure 6) and store it in a dry, cool place away from direct sunlight. It can be conveniently hung on a wall or placed under a bed.
- **Battery Replacement:** Replace batteries in the activity tray when sounds become distorted or lights dim. Always use new AA batteries and dispose of old batteries responsibly.
- **Regular Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Inspect wheels for debris and smooth operation. Check the seat cushion and frame for any tears, cracks, or damage.

## 8. TROUBLESHOOTING

If you encounter any issues with your Uuoeebb Baby Walker, refer to the following table:

Problem	Possible Cause	Solution
Walker does not fold/unfold smoothly.	Locking mechanism engaged or debris.	Ensure the folding lever is fully engaged/disengaged. Check for any obstructions in the folding mechanism.
Activity tray not working.	Batteries low or incorrectly inserted.	Replace batteries with new AA batteries, ensuring correct polarity. Ensure the tray is securely attached to the walker.
Wheels not rotating freely.	Debris caught in wheels or brakes engaged.	Remove any hair or debris from the wheels. Ensure all parking brakes are disengaged.
Walker feels unstable.	Height adjustment not locked or uneven.	Ensure all height adjustment points are securely locked at the same level. Check all connections for tightness.

## 9. PRODUCT SPECIFICATIONS

Attribute	Specification
Model Number	B0DFCJY1MF
Product Dimensions (L x W x H)	4.3 x 24.41 x 24.41 inches (folded/unfolded max)
Material Type	Plastic, Fabric
Item Weight	10.68 pounds
Recommended Age Range	6-12 Months (or until child can walk unassisted)
Battery Requirement (Activity Tray)	AA Batteries (not included)
Height Adjustment	7 Positions (3 body, 4 seat)
Color	Black
Country of Origin	China

## 10. WARRANTY AND CUSTOMER SUPPORT

Uuoeebb is committed to providing high-quality products. For any questions, concerns, or assistance with your baby walker, please contact our customer support team. Refer to the product packaging or the retailer's website for specific warranty details and contact information.

You can also visit the official Uuoeebb Store on Amazon for more information and support:[Uuoeebb Store](#)