



Manuals.plus /

› AGPTEK /

› AGPTEK 64GB MP3 Player User Manual

## AGPTEK A65

# AGPTEK 64GB MP3 Player User Manual

Model: A65

## INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your AGPTEK 64GB MP3 Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience.

## Package Contents

- AGPTEK 64GB MP3 Player (Rose Red)
- Earphone
- USB Charging Cable
- User Manual



Image: Front and side view of the AGPTEK 64GB MP3 Player in Rose Red, highlighting its compact size and integrated clip.

## SETUP

### 1. Initial Charging

Before first use, fully charge the MP3 player. Connect the device to a computer's USB port or a compatible USB wall adapter using the provided USB cable. The charging indicator will show progress and turn off when fully charged. A full charge typically takes approximately 1.5 hours.

# BLUETOOTH 5.3

Wireless Connectivity



Image: The MP3 player connected to a laptop via USB cable, illustrating the charging and data transfer process. A microSD card is also shown next to the player, indicating expandable storage.

## 2. Loading Music and Files

Connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk. You can drag and drop music files (MP3, WMA, APE, FLAC, WAV, DRM, ACELP, M4A, AAC) and other supported files (TXT for e-books, JPG/BMP for photos) directly into the player's internal storage or an inserted TF card (up to 128GB, not included).

- **Internal Memory:** 64GB
- **Expandable Memory:** Supports up to 128GB TF card

## OPERATING INSTRUCTIONS

### Basic Controls

The MP3 player features physical buttons for navigation and control. Refer to the diagram below for button layout and functions.

# ALL IN ONE



Image: Front view of the AGPTEK MP3 Player, showing the screen and control buttons. The buttons include menu, navigation (up, down, left, right), play/pause, and back/return.

- **Menu Button:** Access main menu options.
- **Navigation Buttons (Up/Down/Left/Right):** Scroll through menus, adjust volume (Up/Down), skip tracks (Left/Right).
- **Play/Pause Button:** Start or pause playback, confirm selection.
- **Back/Return Button:** Go back to the previous screen or menu.

## Music Playback

From the main menu, select "Music" to browse your audio files. You can navigate by artist, album, genre, or all songs. The player supports Hi-Fi lossless sound quality.



Image: The MP3 player screen showing the "Music" icon and interface, indicating active music playback.

## Bluetooth Connectivity

The MP3 player features Bluetooth 5.3 for wireless audio streaming. To pair with Bluetooth headphones or speakers:

1. Go to the "Bluetooth" menu.
2. Turn on Bluetooth.
3. Select "Search Device" to find available Bluetooth devices.
4. Choose your device from the list to pair.

**Note: This device cannot connect to cellphones or car systems via Bluetooth. An audio line can be used for wired connections.**

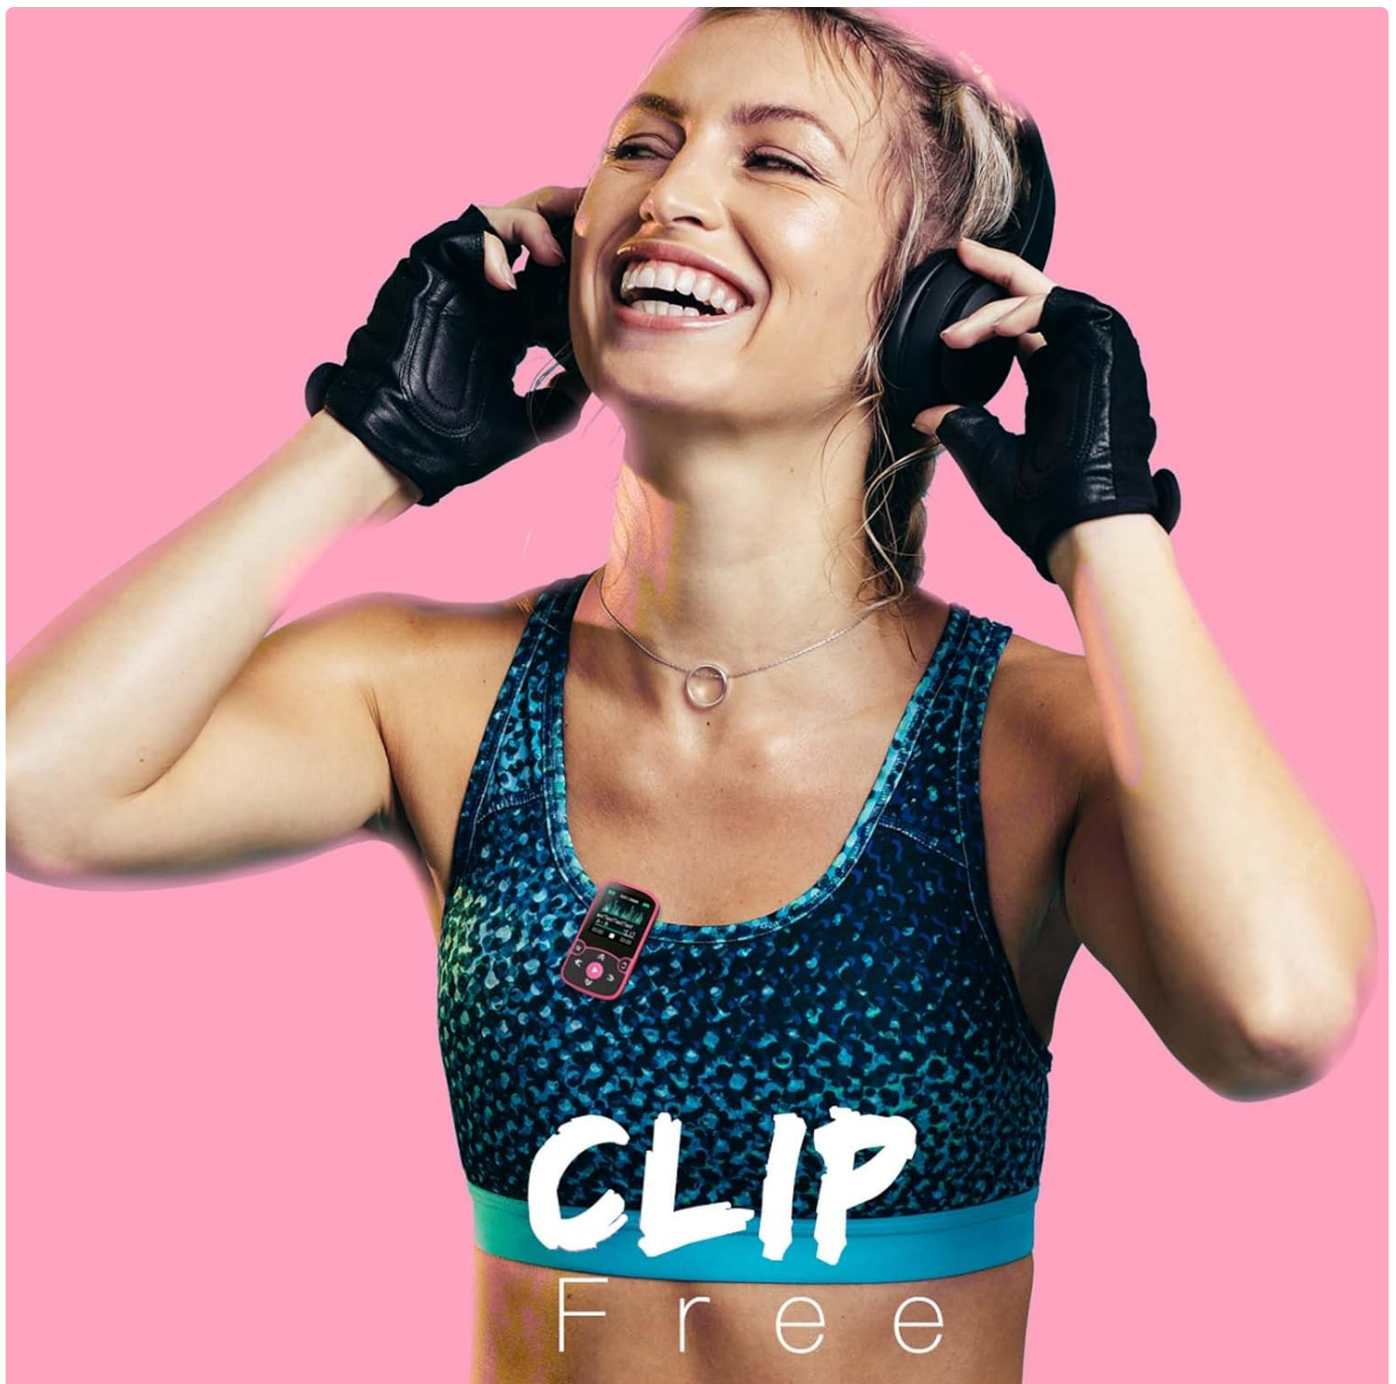 


Image: The MP3 player screen displaying the Bluetooth icon, indicating wireless connectivity. An orange headphone icon and a pink speaker icon are shown nearby, representing compatible Bluetooth audio devices.

### **FM Radio**

Plug in wired earphones (acting as an antenna) to use the FM radio function. Navigate to the "FM Radio" option in the main menu. You can auto-scan for stations or manually tune.

### **Voice Recorder**

The built-in voice recorder allows you to capture audio. Access this feature from the main menu. Recordings are saved in a dedicated folder.

### **Pedometer Mode**

Activate the Pedometer Mode to track your steps, distance, and calories during physical activity. This feature is ideal for sport and running.

# PEDOMETER FUNCTION

Steps Distance Calories Velocity

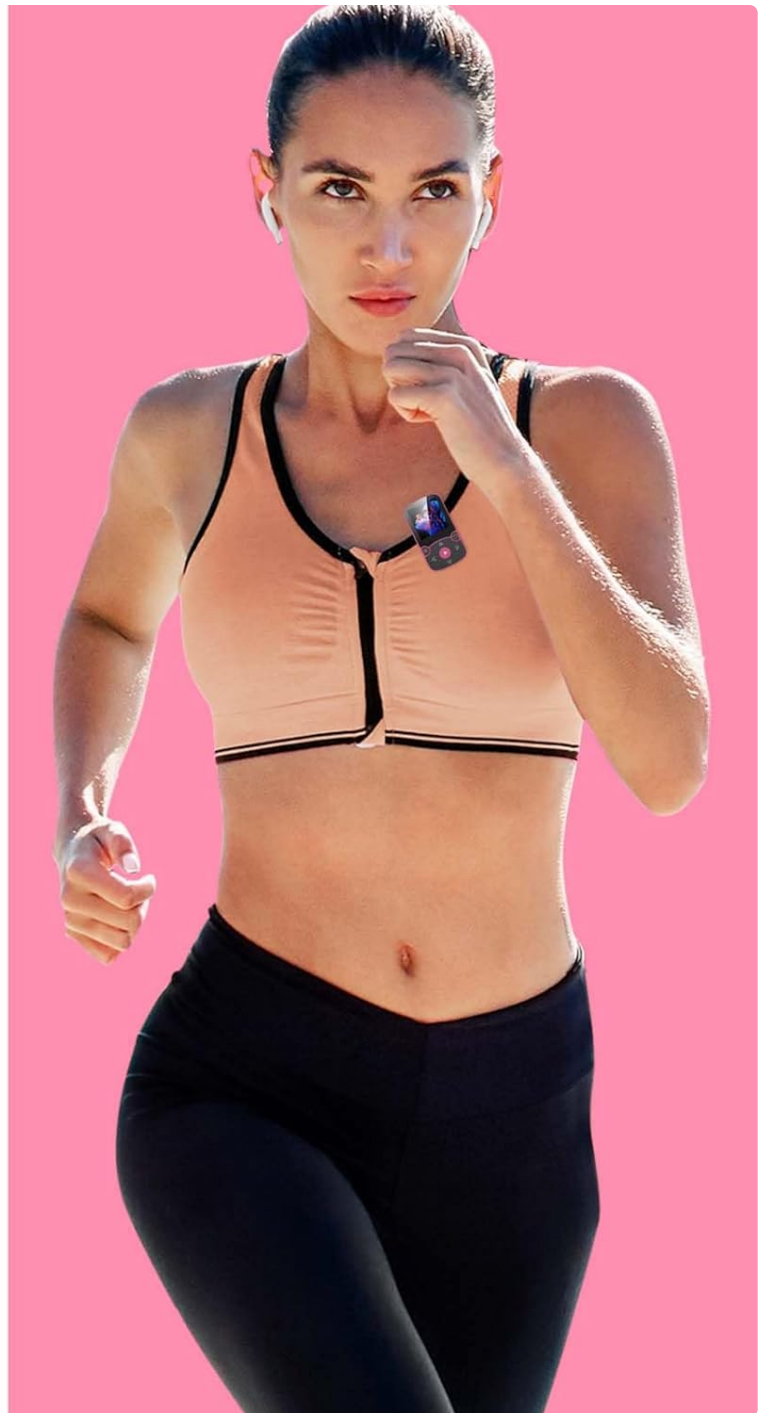 
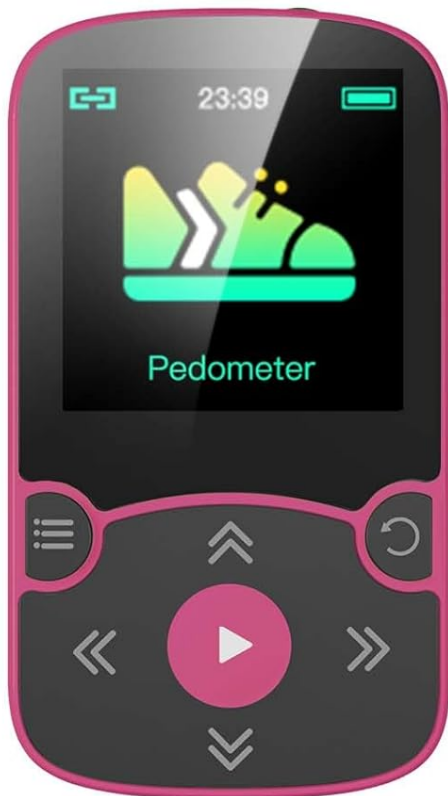 


Image: The MP3 player screen showing the "Pedometer" icon and interface, with text indicating its function for tracking steps, distance, calories, and velocity. A person running is shown next to the device.

## E-book Function

The device supports E-book reading in TXT format only. Transfer TXT files to the player and access them via the "E-book" menu.

## Other Functions

The MP3 player also includes features such as photo browsing, A-B repeat for audio, alarm clock, calendar, file folders, built-in speaker, and time screen-saver.

## MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or extreme temperatures.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Avoid dropping or subjecting the device to strong impacts.

- Store the device in a cool, dry place when not in use for extended periods.
- Regularly back up important files to prevent data loss.

## TROUBLESHOOTING

Problem	Possible Solution
Device does not turn on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, try resetting the device (refer to manual for reset instructions, if available, or hold power button for 10-15 seconds).
Cannot connect to computer.	Check the USB cable and port. Try a different USB port or computer. Ensure the device is in data transfer mode if prompted.
Bluetooth pairing fails.	Ensure the MP3 player and the Bluetooth device are in pairing mode and within range. Delete previous pairings and try again. Remember, it cannot connect to phones or cars via Bluetooth.
Poor sound quality.	Check earphone connection. Ensure audio files are not corrupted. Adjust equalizer settings if available.
Screen is dim or unreadable.	Adjust screen brightness in settings. Avoid direct sunlight when viewing the screen.

## SPECIFICATIONS

- **Model:** A65
- **Internal Memory:** 64GB
- **Expandable Memory:** Supports up to 128GB TF Card
- **Bluetooth Version:** 5.3
- **Supported Audio Formats (Earphones):** MP3, WMA, APE, FLAC, WAV, DRM, ACELP
- **Supported Audio Formats (Bluetooth):** MP3, WMA, WAVE, FLAC, APE, M4A, AAC
- **Supported E-book Format:** TXT
- **Screen Size:** 1.5 Inches
- **Display Technology:** LCD
- **Battery:** 1 Lithium Polymer battery (required)
- **Product Dimensions:** 0.47 x 1.42 x 2.36 inches
- **Item Weight:** 1.06 oz
- **Manufacturer:** AGPTEK
- **Special Features:** Video Playback, Voice Recorder, E-book, FM Radio, Clip Design, Pedometer Mode, Built-in Speaker, Time Screen-saver, A-B Repeat, Alarm Clock, Calendar, File Folders.

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official AGPTEK website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

**Manufacturer:** AGPTEK

**Website:** [www.agptek.com](http://www.agptek.com)

