

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Lifelong](#) /

› [Lifelong Electric Food Warmer LLEFW09 Instruction Manual](#)

Lifelong LLEFW09

Lifelong Electric Food Warmer LLEFW09 Instruction Manual

Model: LLEFW09 | 250W Roll-Up Silicone Heating Mat

1. INTRODUCTION

Thank you for choosing the Lifelong Electric Food Warmer LLEFW09. This appliance is designed to keep your food warm and ready to serve, featuring a roll-up silicone heating mat with adjustable temperature control and an auto shut-off function. Please read this manual thoroughly before use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs if provided.
- To protect against electrical hazards, do not immerse the power cord, plugs, or the appliance itself in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not cover the heating mat with flammable materials.

3. PRODUCT OVERVIEW

The Lifelong Electric Food Warmer LLEFW09 is a versatile heating mat designed for keeping food warm. Its roll-up design allows for easy storage and portability.

Key Features:

- **Rapid Full Surface Heating:** Ensures quick and even heat distribution across the entire mat.
- **Three Temperature Settings:** Adjustable to 60°C, 80°C, and 100°C for various food types.
- **Safe Silicone Construction:** Made from high-quality, heat-resistant silicone for durability and safety.
- **Compact and Foldable:** Easy to store and transport.
- **Energy Efficient:** Operates at 250W.
- **4-Hour Auto Shut-Off:** Enhances safety and energy saving.
- **Versatile Usage:** Suitable for warming food, dough fermentation, thawing, and more.

Components:

- Silicone Heating Mat
- Integrated Control Panel with Touch Buttons and LED Display
- Power Cord



Figure 3.1: The Lifelong Electric Food Warmer LLEFW09, showing its rolled-up form for storage and its flat form with various food items being kept warm. The power cord is also visible.

Lifelong

Whole Surface Heating

Even heating, wide coverage,
and freely place tableware

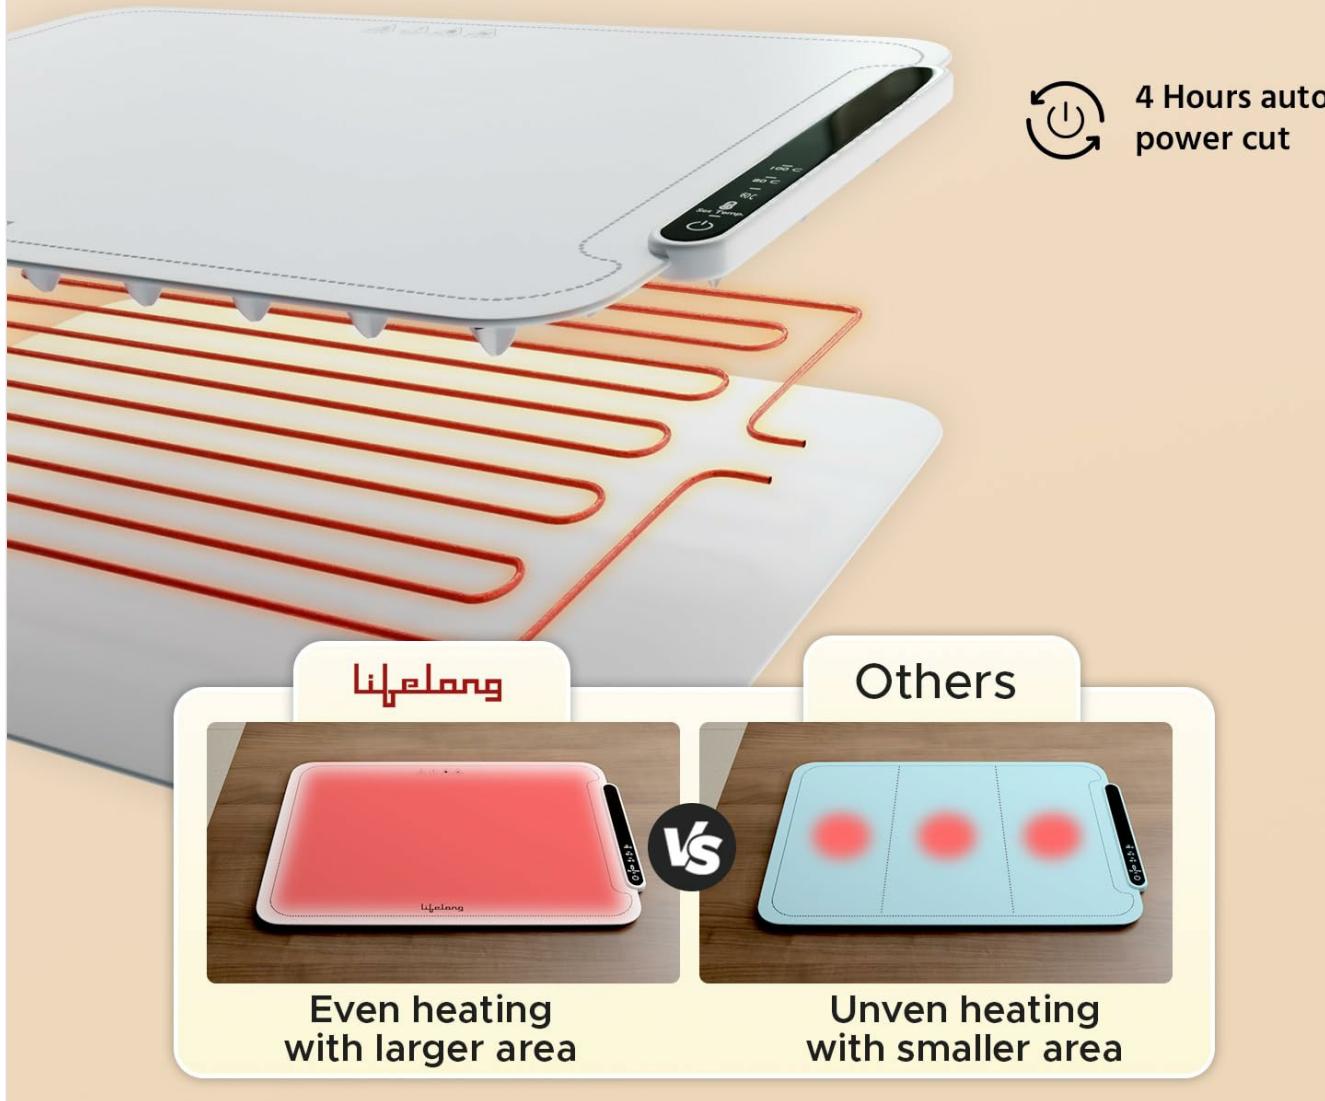


Figure 3.2: Illustration demonstrating the full-surface, even heating capability of the Lifelong Electric Food Warmer compared to other warmers that may have uneven heating areas. This model ensures consistent warmth across the entire mat.

4. SETUP

- Unpack:** Carefully remove the food warmer and all accessories from the packaging. Retain packaging for future storage or transport.
- Placement:** Unroll the silicone heating mat and place it on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the mat for ventilation and to prevent accidental contact with other objects.
- Power Connection:** Insert the power cord into the designated port on the control panel of the food warmer, then plug the other end into a standard electrical outlet. Ensure the outlet voltage matches the appliance's requirements (220-240V, 50/60Hz).

5. OPERATION

- Power On:** Press the power button on the control panel. The LED display will illuminate, indicating the warmer is active.

- Select Temperature:** Touch the temperature control button to cycle through the available settings: 60°C, 80°C, and 100°C. Select the desired temperature based on the food type and required warmth. The LED display will show the selected temperature.
- Place Food:** Place heat-safe dishes or containers directly onto the silicone heating mat. Ensure the containers are suitable for direct heat contact. The warmer supports vessels made of metal, glass, cast iron, ceramic, enamelware, and stainless steel.
- Automatic Shut-Off:** For safety and energy efficiency, the food warmer is equipped with a 4-hour automatic shut-off function. After 4 hours of continuous operation, the unit will power off automatically. To continue warming, simply power it on again and select your desired temperature.
- Power Off:** To turn off the warmer manually, press and hold the power button until the LED display turns off. Unplug the appliance from the wall outlet when not in use.



Figure 5.1: A detailed view of the control panel, highlighting the touch buttons for power and temperature selection (60°C, 80°C, 100°C). The LED panel indicates the current setting.

Lifelong



Supports Vessels of all Materials



Metal



Glass



Cast Iron



Ceramic



Enamelware



Stainless Steel

Figure 5.2: This image illustrates the compatibility of the heating mat with various types of vessels, including metal, glass, cast iron, ceramic, enamelware, and stainless steel, allowing for flexible use with your existing cookware.



Dough Fermentation



Warm Facial Mask



Thawing



Drying Clothes

Figure 5.3: Demonstrates the versatile applications of the food warmer beyond just keeping food warm, such as assisting with dough fermentation, warming facial masks, thawing frozen food, and even drying small clothing items.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your Lifelong Electric Food Warmer.

- Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- Cleaning the Surface:** The silicone mat is water-resistant, stain-resistant, and oil-drop resistant. Wipe the surface with a soft, damp cloth. For stubborn stains, a mild detergent can be used. Ensure no liquid enters the control panel area.
- Do Not Immerse:** Never immerse the entire unit, power cord, or plug in water or any other liquid.
- Drying:** Ensure the warmer is completely dry before storing or reconnecting to power.
- Storage:** The flexible silicone design allows the mat to be rolled up for compact storage. Store in a cool, dry place away from direct sunlight.



Easy to Clean



Water Resistant



Stain Resistant



Oil Drop Resistant



Non-Slip Silicone Foot Pad

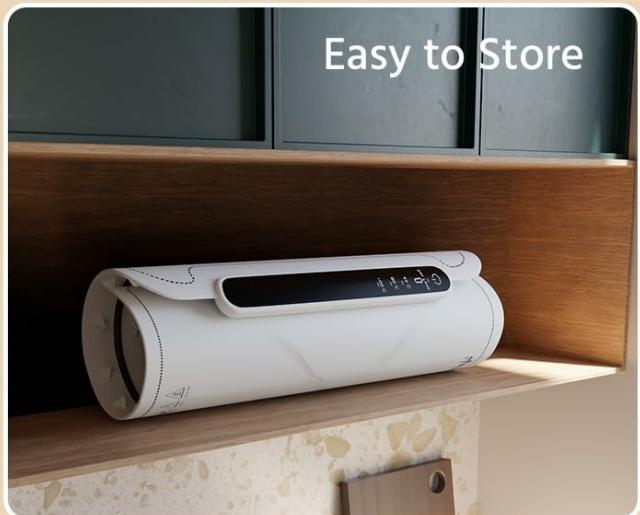


Figure 6.1: This composite image demonstrates the ease of cleaning the mat, its non-slip silicone foot pads for stability, and how it can be rolled up for convenient, space-saving storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Warmer does not turn on.	No power supply; Power cord not properly connected; Appliance malfunction.	Check if the power cord is securely plugged into both the warmer and the wall outlet. Test the outlet with another appliance. If the issue persists, contact customer support.
Food is not warming sufficiently.	Incorrect temperature setting; Food container not heat-conductive; Mat overloaded.	Increase the temperature setting. Ensure food containers are made of heat-conductive materials (e.g., ceramic, glass, metal). Avoid placing too many items or excessively large items that prevent even heat distribution.

Problem	Possible Cause	Solution
Warmer turns off unexpectedly.	4-hour auto shut-off activated; Overheating protection.	This is a normal safety feature. If you need to continue warming, simply power the unit on again. If it shuts off frequently before 4 hours, ensure proper ventilation and contact customer support.
Unpleasant odor during initial use.	New product odor from manufacturing materials.	It is normal for new electrical appliances to emit a slight odor during the first few uses. Ensure good ventilation in the area. The odor should dissipate with continued use.

8. SPECIFICATIONS

Attribute	Detail
Model Number	LLEFW09
Power Consumption	250 Watts
Dimensions (L x W x H)	47.3 x 32.4 x 2 Centimeters
Item Weight	1 kg
Material	Silicone
Color	Beige
Temperature Settings	60°C, 80°C, 100°C
Maximum Temperature	100°C
Auto Shut-Off	4 Hours
Power Source	Corded Electric
Included Components	1N Food Warmer, 1N User Manual cum Warranty Card, 1N Powercord
Country of Origin	China



Keep Food Warm For Hours

Preserve the temperature and the taste of food



Heat resistant



Figure 8.1: The Lifelong Electric Food Warmer mat displaying its physical dimensions of 47.3 cm in length and 32.4 cm in width, with various food containers placed on it.

9. WARRANTY AND SUPPORT

Your Lifelong Electric Food Warmer LLEFW09 comes with a **1-year warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical support, or any product-related inquiries, please contact Lifelong Customer Service:

Email: customercare@lifelongonline.com

Phone: +91 9711558877

Manufacturer/Importer: Lifelong Online Retail Private Limited, 5th Floor, Unit No. 508, DLF South Court, Saket District Center, Saket New Delhi, India - 110017

Please retain your purchase receipt for warranty validation.

Related Documents - LLEFW09

	<p><u>Lifelong Gas Stove 4 Burners LLGS27 User Manual Safety, Specifications & Warranty</u></p> <p>Comprehensive user manual for the Lifelong Gas Stove 4 Burners (Model LLGS27). Includes introduction, safety precautions, care and maintenance, gas leak information, detailed specifications, troubleshooting guide, and warranty terms.</p>
	<p><u>Lifelong Foot Massager Instruction Manual and Warranty Card</u></p> <p>User guide and warranty details for the Lifelong Foot Massager (#FootRelief). Learn about its features, operation, health benefits, safety precautions, and warranty terms for optimal foot health and relaxation.</p>
	<p><u>Lifelong FitPro Treadmill (LLTM09) User Manual</u></p> <p>User manual for the Lifelong FitPro Treadmill (LLTM09), providing detailed instructions on installation, operation, maintenance, and troubleshooting. Features include a 2.5 HP peak motor, adjustable speed, and safety features.</p>
	<p><u>Lifelong Air Fryer User Manual LLHFD423/LLHFD429</u></p> <p>User manual for the Lifelong Air Fryer LLHFD423/LLHFD429, detailing its features, usage instructions, cleaning, troubleshooting, technical specifications, and warranty information. Learn how to use your air fryer for healthier cooking with little to no oil.</p>
	<p><u>Lifelong Soft Touch Rechargeable Multi-Trimmer for Women - User Manual and Warranty</u></p> <p>Comprehensive user manual and warranty details for the Lifelong Soft Touch Rechargeable Multi-Trimmer for Women. Includes product features, operating instructions, cleaning, maintenance, and warranty terms and conditions.</p>
	<p><u>Lifelong Smart Body Fat Scale LLWS36 User Manual and Guide</u></p> <p>Comprehensive guide to the Lifelong Smart Body Fat Scale LLWS36, covering product features, installation, app connection, operation, troubleshooting, and warranty information.</p>