



[Manuals.plus](#) /

› [Shark](#) /

› Shark SpeedStyle Pro Hair Dryer System User Manual

Shark HD731C

Shark SpeedStyle Pro Hair Dryer System User Manual

Model: HD731C

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your Shark SpeedStyle Pro Professional Performance High-Velocity Hair Dryer System. Please read all instructions carefully before use and retain this manual for future reference.

The Shark SpeedStyle Pro is designed to deliver professional-grade hair drying and styling with high-velocity airflow, minimizing heat damage. It is suitable for straight and wavy hair types and includes specialized attachments for various styling needs.



Figure 1.1: Shark SpeedStyle Pro Hair Dryer and Included Attachments.

This image displays the main components of the Shark SpeedStyle Pro system, including the hair dryer unit and its three primary styling attachments: the Turbo Concentrator, the QuickSmooth Brush, and the FrizzFighter Finishing Tool. These components work together to provide versatile styling options.

2. IMPORTANT SAFETY INFORMATION

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. As with most electrical appliances, electrical parts are electrically live even when the switch is off.
- Always unplug the appliance immediately after using.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, unplug it immediately. Do not reach into the water.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
 - An appliance should never be left unattended when plugged in.
 - Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- Attachments may be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating.
- While using the appliance, keep your hair away from the air inlets.
- Do not operate with a voltage converter.

3. PACKAGE CONTENTS

Verify that all items are present in your package. If any items are missing or damaged, please contact customer support.

- Shark SpeedStyle Pro Hair Dryer (Model HD731C)
- Turbo Concentrator Attachment
- QuickSmooth Brush Attachment
- FrizzFighter Finishing Tool Attachment
- User Manual (this document)



Figure 3.1: What's Inside the Box.

This image illustrates the Shark SpeedStyle Pro hair dryer along with its three included attachments, laid out to show the complete contents of the product packaging.

4. PRODUCT FEATURES AND COMPONENTS

Familiarize yourself with the main features and components of your Shark SpeedStyle Pro.

4.1. Hair Dryer Unit

- **High-Velocity Airflow:** Delivers powerful and fast drying.
- **IQ Speed Styling & Drying Suite:** Automatically adjusts heat and airflow for optimal styling with each accessory.
- **Scalp Shield Mode:** Reduces air temperature for scalp comfort and root drying, protecting new hair growth from extreme heat.
- **No Heat Damage Technology:** Measures and regulates temperature 1,000 times per second to prevent damage.

- **Lightweight Design:** Ergonomically designed for comfortable use.

4.2. Attachments

- **Turbo Concentrator:** Designed for sleek, straight styles and fast, effortless drying. Features a 360° rotatable nozzle.
- **QuickSmooth Brush:** For voluminous, straight styles. Dries, volumizes, and smooths simultaneously using a combination of volumizing and smoothing boar bristles.
- **FrizzFighter Finishing Tool:** Instantly smooths frizz and flyaways for a polished finish.



Figure 4.1: IQ Speed Styling & Drying Suite.

This image illustrates the Shark SpeedStyle Pro hair dryer and its three intelligent attachments, highlighting how each accessory is designed for specific styling outcomes, with the system automatically adjusting settings for optimal performance.

5. SETUP

Before first use, ensure the hair dryer is properly set up.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the hair dryer and all attachments for any signs of damage. Do not use if damaged.
3. **Connect Power:** Plug the power cord into a standard electrical outlet. Ensure the voltage matches the specifications of the appliance.
4. **Attach Accessories:** To attach an accessory, align the accessory with the nozzle of the hair dryer and push it on until it clicks securely into place. To remove, pull the accessory straight off.

6. OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your Shark SpeedStyle Pro.

6.1. Basic Operation

1. **Power On/Off:** Press the power button to turn the hair dryer on or off.
2. **Adjust Airflow:** Use the airflow control button to select your desired speed setting (low, medium, high).
3. **Adjust Temperature:** Use the temperature control button to select your desired heat setting (cool, low, medium, high).

4. **Cold Shot:** Press and hold the cold shot button for a burst of cool air to set your style.

6.2. Using Scalp Shield Mode

The Scalp Shield mode is designed to protect new hair growth from extreme heat and provide comfort during root drying.

1. While the hair dryer is on, press the dedicated Scalp Shield button.
2. The device will automatically adjust the air temperature to an optimal safe level for your scalp.
3. This mode is compatible with all accessories.



Figure 6.1: Activating Scalp Shield Mode.

This image demonstrates how to easily activate the Scalp Shield mode on the Shark SpeedStyle Pro hair dryer with the touch of a button, ensuring optimal temperature for scalp protection.



Figure 6.2: Scalp Shield Technology.

This diagram visually explains how the Scalp Shield technology works to protect new hair growth and the scalp from extreme heat, promoting hair health.

6.3. Using Attachments

The IQ Speed Styling & Drying Suite intelligently adjusts heat and airflow settings when an attachment is connected.

6.3.1. Turbo Concentrator

- Attach the Turbo Concentrator for focused airflow.
- Use for fast drying and creating sleek, straight styles.
- The nozzle can be rotated 360° to direct airflow as needed.



Figure 6.3: Turbo Concentrator Results.

This image shows a comparison of hair before and after using the Turbo Concentrator, demonstrating its effectiveness in achieving fast, sleek, and straight styles.

6.3.2. QuickSmooth Brush

- Attach the QuickSmooth Brush.
- Use to dry, volumize, and smooth hair simultaneously.
- Ideal for creating bouncy, voluminous, and straight styles.



Figure 6.4: QuickSmooth Brush Results.

This image presents a before-and-after view of hair styled with the QuickSmooth Brush, illustrating its ability to dry, volumize, and smooth hair for a bouncy, voluminous look.

6.3.3. FrizzFighter Finishing Tool

- Attach the FrizzFighter Finishing Tool.
- Use to instantly smooth frizz and flyaways.
- Apply to dry hair for a polished, ultimate finish.



Figure 6.5: FrizzFighter Finishing Tool Results.

This image displays the transformation of hair before and after using the FrizzFighter Finishing Tool, highlighting its effectiveness in smoothing frizz and flyaways for a refined finish.

7. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your Shark SpeedStyle Pro.

7.1. Cleaning

- **Always unplug** the hair dryer before cleaning.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Air Inlet Filter:** Regularly check and clean the air inlet filter at the back of the dryer to prevent lint and hair buildup, which can affect performance. Gently remove any debris using a soft brush or cloth.
- **Attachments:** Clean attachments with a damp cloth. For the QuickSmooth Brush, remove any trapped hair from the bristles.

- **Do not immerse** the hair dryer or any attachments in water or other liquids.

7.2. Storage

- Allow the hair dryer and attachments to cool completely before storing.
- Store the appliance in a cool, dry place, out of reach of children.
- Do not wrap the power cord tightly around the appliance, as this can cause damage to the cord.

8. TROUBLESHOOTING

If you encounter issues with your Shark SpeedStyle Pro, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Hair dryer does not turn on.	Not plugged in; power outlet issue; damaged cord/plug.	Ensure plug is fully inserted. Test outlet with another device. Inspect cord for damage; if damaged, do not use and contact customer support.
Weak airflow or overheating.	Air inlet filter is blocked with lint/hair.	Unplug the dryer and clean the air inlet filter as described in the Maintenance section.
Attachments do not stay on.	Attachment not fully clicked into place; attachment or nozzle damaged.	Ensure attachment is pushed firmly until it clicks. Inspect attachment and nozzle for any visible damage.
Hair dryer suddenly stops during use.	Overheating protection activated.	Unplug the dryer and allow it to cool down for at least 10-15 minutes. Check and clean the air inlet filter.

If the problem persists after attempting these solutions, please contact Shark customer support.

9. SPECIFICATIONS

Feature	Detail
Model Number	HD731C
Brand	Shark
Wattage	1750W
Product Dimensions	16.51 x 4.78 x 20.09 cm (approx.)
Weight	1.51 kg (approx.)
Hair Type Compatibility	Straight & Wavy Hair (as per product variant)
Country of Origin	China

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Shark website or the warranty card included with your product.

- **Online Support:** Visit the official Shark website for FAQs, troubleshooting guides, and product registration.
- **Contact Customer Service:** Refer to your product packaging or the Shark website for contact details (phone number, email).
- **Proof of Purchase:** Keep your receipt or proof of purchase for warranty claims.

Note: Warranty terms and conditions may vary by region.

