

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

**Walker Edison BR6DSLDRWH-T**

# Walker Edison Sloane 6-Drawer Groove Handle Solid Wood Dresser

Model: BR6DSLDRWH-T | Color: White

## INTRODUCTION

This manual provides essential information for the assembly, operation, maintenance, and troubleshooting of your Walker Edison Sloane 6-Drawer Groove Handle Solid Wood Dresser. Please read these instructions carefully before beginning assembly or use to ensure safe and proper handling of the product.



Image: The Walker Edison Sloane 6-Drawer Groove Handle Solid Wood Dresser in white, showcasing its six drawers and modern design.

## SAFETY INFORMATION

## **WARNING: Furniture Tip-Over Hazard**

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Always install tip-over restraint devices provided with the furniture.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not place televisions or other heavy objects on top of this product unless it is specifically designed to accommodate them.

Failure to follow these warnings can result in death or serious injury.

Additional safety guidelines:

- Keep all hardware and small parts out of reach of children.
- Assemble the unit on a soft, non-abrasive surface to prevent scratches.
- Ensure all connections are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the recommended weight capacity for drawers or the top surface.

## **PACKAGE CONTENTS**

Before beginning assembly, ensure all parts and hardware are present. Refer to the detailed parts list in the official User Guide (PDF) for exact quantities and identification.

Typical components include:

- Top Panel
- Side Panels (Left and Right)
- Bottom Panel
- Back Panel(s)
- Drawer Fronts (6)
- Drawer Side Panels
- Drawer Back Panels
- Drawer Bottom Panels
- Legs (4)
- Support Beams/Braces
- Hardware Packet (screws, dowels, cam locks, drawer slides, anti-tip kit, etc.)

If any parts are missing or damaged, please contact customer support immediately.

## **SETUP AND ASSEMBLY**

Assembly is required for this product. It is recommended to have two people for assembly to ensure stability and ease of handling. Please follow the step-by-step instructions provided in the official User Guide (PDF) for detailed diagrams and specific hardware usage.

**Tools Required (not included):**

- Phillips Head Screwdriver
- Hammer or Rubber Mallet (for dowels)

**General Assembly Steps (refer to PDF for specifics):**

- Unpack and Organize:** Carefully remove all components from the packaging. Lay them out on a clean, soft surface to prevent damage. Identify each part using the labels and the parts list in the PDF manual.
- Assemble the Main Frame:** Begin by connecting the side panels to the bottom and top panels using the specified hardware (e.g., dowels, cam locks, screws). Ensure all connections are snug.
- Attach Back Panel:** Secure the back panel(s) to the main frame. This often adds significant stability to the unit.
- Assemble Drawers:** For each of the six drawers, connect the front, side, and back panels. Slide the drawer bottom into the grooves. Attach the drawer slides to the drawer box.
- Attach Legs:** Securely fasten the four legs to the bottom of the dresser frame.
- Install Drawer Slides:** Attach the corresponding drawer slides to the inside of the dresser frame.
- Insert Drawers:** Carefully slide each assembled drawer into its designated slot on the dresser frame. Ensure they glide smoothly.
- Install Anti-Tip Kit:** Securely attach the anti-tip restraint to the back of the dresser and to a wall stud, following the instructions provided with the kit. This is a critical safety step.

For detailed visual instructions, please download the official User Guide (PDF) from the following link: [Walker Edison Sloane Dresser User Guide \(PDF\)](#)



Image: The assembled white dresser positioned in a bedroom, demonstrating its functional aesthetic.

## OPERATING INSTRUCTIONS

The Walker Edison Sloane 6-Drawer Dresser is designed for storing clothing, linens, and other personal items. Its six spacious drawers provide ample organization.

- Drawer Operation:** To open a drawer, gently pull on the integrated groove handle. To close, push the drawer firmly until it is fully seated within the frame. Avoid slamming drawers to prevent damage to the slides and frame.
- Weight Distribution:** Distribute weight evenly across the drawers. Place heavier items in lower drawers to enhance stability.

stability and reduce the risk of tipping.

- **Top Surface Use:** The top surface can be used for decorative items, lamps, or other lightweight objects. Do not place excessively heavy items on the top surface.



Image: A close-up view of an open drawer, revealing the interior storage space and the groove handle design.

## CARE AND MAINTENANCE

Proper care will help maintain the appearance and longevity of your dresser.

- **Cleaning:** Wipe the dresser surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Humidity:** Maintain a consistent humidity level in the room to prevent wood from expanding or contracting, which

can lead to cracks or warping.

- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten as needed to maintain structural integrity.

## TROUBLESHOOTING

If you encounter any issues with your dresser, refer to the following common solutions:

Problem	Possible Cause	Solution
Dresser is wobbly	Loose fasteners; uneven floor	Ensure all screws and cam locks are tightened. Place shims under legs if the floor is uneven.
Drawers do not slide smoothly	Misaligned drawer slides; obstruction; excessive weight	Check that drawer slides are correctly installed and aligned. Remove any obstructions. Reduce weight in the drawer.
Drawers do not close completely	Obstruction; misaligned drawer front; overfilled drawer	Check for items blocking the drawer. Ensure the drawer front is properly attached. Do not overfill drawers.
Visible gaps between panels	Loose connections; incorrect assembly	Re-check all connections and ensure they are fully tightened. Review assembly steps in the PDF manual.

## PRODUCT SPECIFICATIONS

- **Brand:** Walker Edison
- **Model Name:** Sloane 6-Drawer Groove Handle Dresser
- **Model Number:** BR6DSLDRWH-T
- **Color:** White
- **Product Dimensions:** 19"D x 52"W x 32.88"H
- **Item Weight:** 88 Pounds
- **Material:** Solid Pine Wood
- **Finish Type:** Painted
- **Assembly Required:** Yes
- **Number of Drawers:** 6
- **Product Care Instructions:** Wipe with Dry Cloth
- **Warranty Type:** Limited

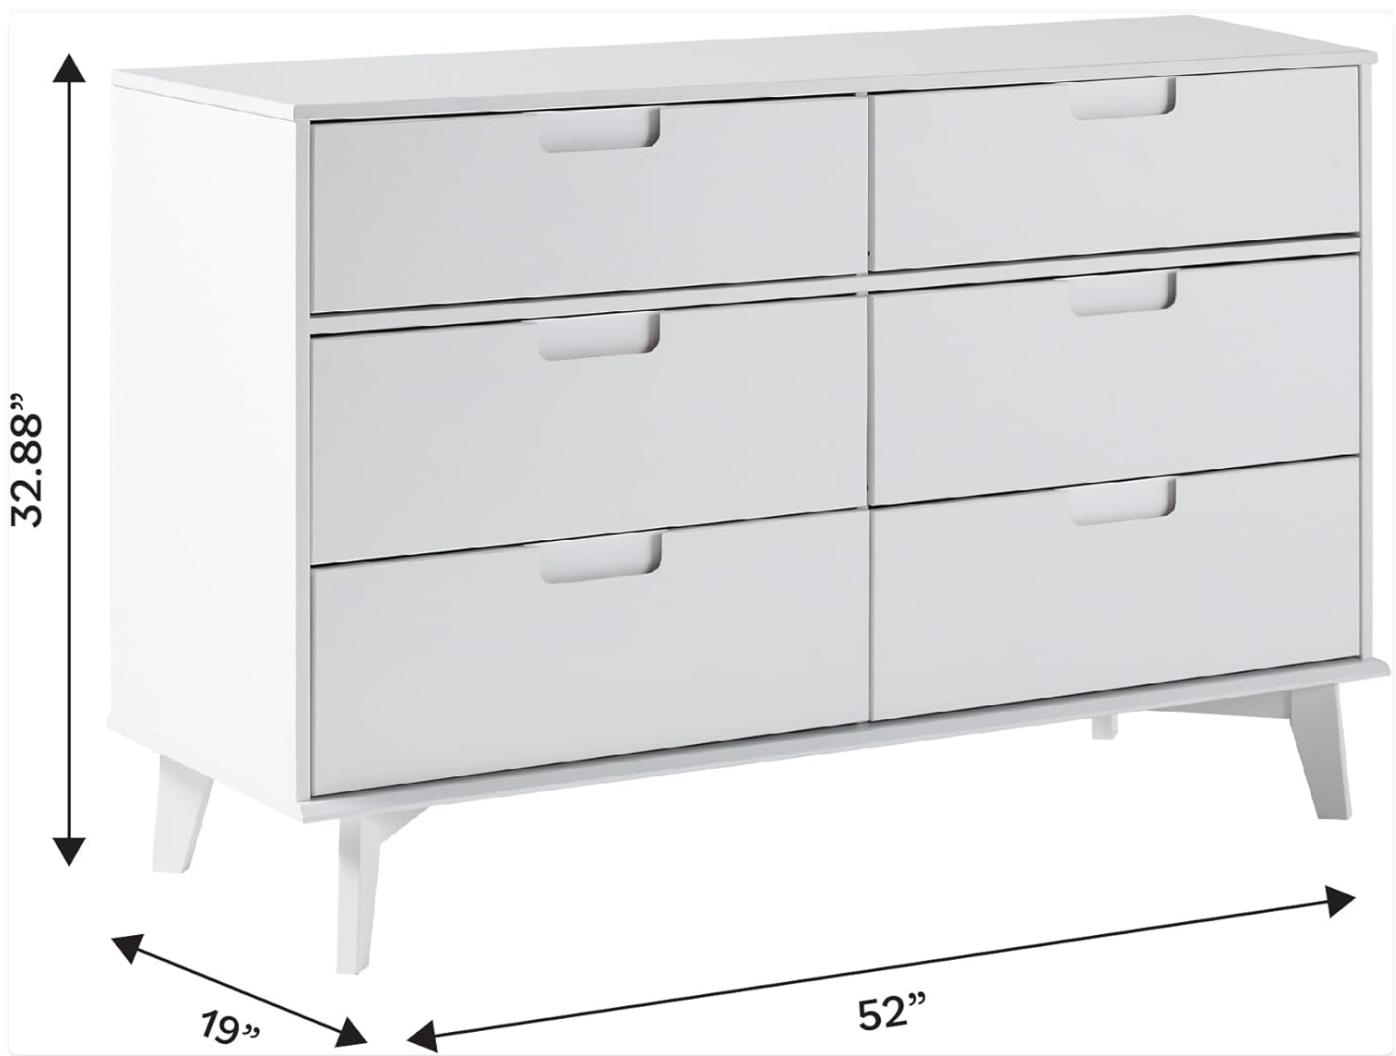


Image: Diagram illustrating the overall dimensions of the dresser: 19 inches deep, 52 inches wide, and 32.88 inches high.

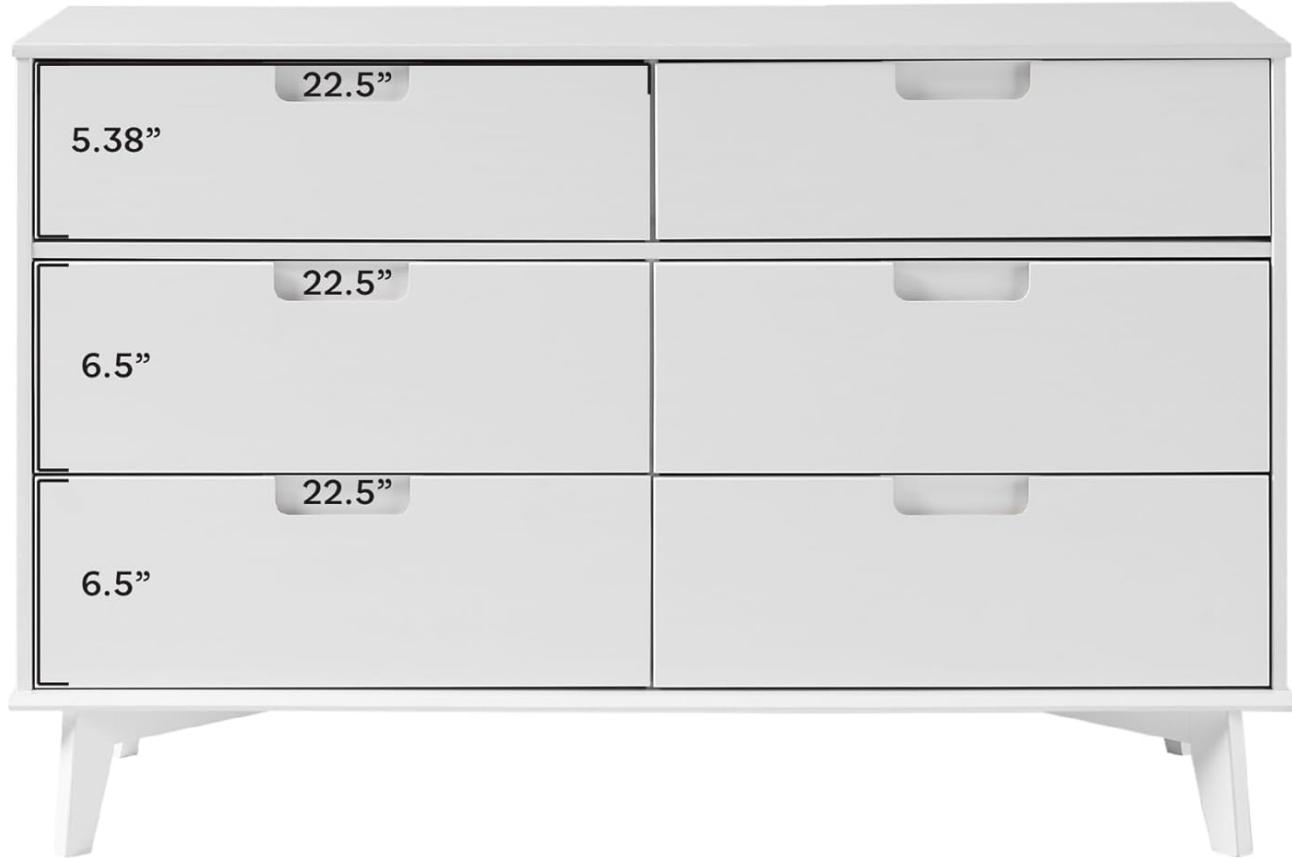


Image: Diagram showing the internal dimensions of the dresser drawers. The top two drawers are 5.38 inches high, and the four lower drawers are 6.5 inches high, all with a width of 22.5 inches.

## WARRANTY AND CUSTOMER SUPPORT

Your Walker Edison Sloane 6-Drawer Dresser comes with a limited warranty. Please refer to the warranty documentation included with your purchase for specific terms and conditions.

For replacement parts, assembly assistance, or any other inquiries, please contact Walker Edison customer support:

- **Phone:** 1-801-433-3008
- **Email:** [service@walker Edison.com](mailto:service@walker Edison.com)

Replacement parts are available. Please contact Walker Edison within 30 days of delivery for any issues.

# QUESTIONS?

## We can help you.



**1-801-433-3008**

or email **service@walkeredison.com**


Replacement parts now available.

Please contact Walker Edison within 30 days of delivery.

Image: Graphic displaying Walker Edison customer support contact details: phone number 1-801-433-3008 and email service@walkeredison.com.

© 2025 Walker Edison. All rights reserved.

### Related Documents

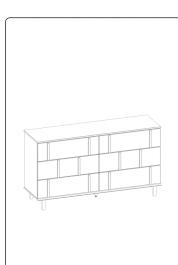

[Walker Edison Bronx 6-Drawer Dresser Assembly Guide](#)

Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.



### [Walker Edison Isla 6 Drawer Solid Wood Dresser Assembly Guide](#)

Detailed assembly instructions and parts list for the Walker Edison Isla 6 Drawer Solid Wood Dresser. This guide helps users efficiently assemble their furniture with clear steps and safety tips.



### [Walker Edison BR1GROVN Nightstand Assembly Instructions](#)

Detailed assembly instructions for the Walker Edison BR1GROVN Nightstand, including parts list, hardware list, and step-by-step guidance for furniture assembly.



### [Walker Edison KOAD1D Round Dining Table Assembly Instructions](#)

Step-by-step assembly instructions for the Walker Edison KOAD1D round dining table. Includes parts list, hardware list, and assembly guidelines.