

## Cutting Edge CXE1-2001-HYP

# Cutting Edge Foil Shaver CXE1-2001-HYP User Manual

## INTRODUCTION

---

This manual provides essential instructions for the safe and effective use of your Cutting Edge Foil Shaver, model CXE1-2001-HYP. This electric shaver is designed for men, featuring hypoallergenic titanium foil cutters for a close, smooth, and irritation-free shave. It includes a rechargeable battery for cordless operation and a pop-up trimmer for detailing.

## SAFETY INFORMATION

---

**Please read all safety warnings carefully before using this product.**

- Risk of cuts from the blades: Handle the shaver head with care. Do not press excessively hard against the skin.
- Importance of cleaning for skin irritation prevention: Regularly clean the shaver head and foils to prevent bacterial buildup and skin irritation.
- Precautions for using near water or while charging: Do not use the shaver in the shower or bath. Ensure the shaver is completely dry before charging. Do not charge near water.
- Refer to user manual for specific safety instructions: Always follow the guidelines provided in this manual.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- Cutting Edge Foil Shaver (Model CXE1-2001-HYP)
- Rechargeable USB Power Cord
- Cleaning Brush
- Protective Cap
- Instruction Manual (this document)



Image displaying the accessories included with the shaver: a USB charging cable, a small cleaning brush, and a protective foil cap.

## SETUP

---

### Charging the Shaver

1. Before first use, fully charge the shaver for approximately 8 hours.
2. Connect the provided USB power cord to the shaver's charging port and plug the USB end into a compatible USB power adapter (not included) or a USB port.
3. The charging indicator light will illuminate during charging.
4. A full charge provides up to 45 minutes of cordless shaving time.



Front view of the Cutting Edge Foil Shaver, displaying the main foil head and the power switch.

## OPERATING INSTRUCTIONS

---

### Shaving Your Face

1. Ensure your face is clean and dry for optimal results.
2. Press the power button to turn on the shaver.
3. Hold the shaver at a right angle (90 degrees) to your skin.
4. Gently stretch your skin with your free hand to make the hairs stand upright.
5. Move the shaver in short, straight strokes against the direction of hair growth. Avoid circular motions.
6. Do not press too hard; the hypoallergenic titanium foils are designed to cut effectively with light pressure.
7. After shaving, press the power button to turn off the shaver.

### Using the Pop-Up Trimmer

The integrated pop-up trimmer is ideal for detailing sideburns, shaping beards, and maintaining a clean neckline.

1. Locate the trimmer release switch on the side of the shaver.

2. Slide the switch upwards to extend the pop-up trimmer.
3. Turn on the shaver.
4. Use the trimmer to create precise lines and edges.
5. After use, turn off the shaver and push the trimmer back into its housing until it clicks into place.



Side view of the Cutting Edge Foil Shaver with the integrated pop-up trimmer extended, ready for use.

## MAINTENANCE

---

### Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off and unplug the shaver before cleaning.
2. Remove the foil head assembly by gently pressing the release buttons (if applicable) or pulling it upwards.
3. Carefully tap out any loose hair from the foil head and the cutter block.
4. Use the provided cleaning brush to remove remaining hair particles from the foils and cutters. Do not use the brush on the foils themselves, as this can damage them. Brush only the cutter blades.
5. Rinse the foil head and cutter block under running water if the shaver is designed for wet cleaning.

Ensure they are completely dry before reattaching.

6. Reattach the foil head assembly securely.

## Storage

Store the shaver in a cool, dry place. Always place the protective cap over the foil head when not in use to prevent damage.

## TROUBLESHOOTING

---

- **Shaver not turning on:** Ensure the shaver is charged. If it's fully charged and still not working, contact customer support.
- **Poor shaving performance:** Ensure the foils and cutters are clean and free of debris. The foils may need replacement after extended use.
- **Skin irritation:** Ensure the shaver head is clean. Shave on clean, dry skin. Avoid pressing too hard. If irritation persists, consult a dermatologist.
- **Charging light not illuminating:** Check the USB cable and power source connection. Try a different USB port or adapter.

## SPECIFICATIONS

---

<b>Brand</b>	Cutting Edge
<b>Model Name</b>	CXE1-2001-HYP
<b>Item Model Number</b>	CXE1-2001-HYP
<b>UPC</b>	805106845506
<b>Power Source</b>	Battery Powered
<b>Special Features</b>	Hypoallergenic, Rechargeable, Pop-Up Trimmer
<b>Recommended Uses</b>	Face
<b>Run-Time</b>	Up to 45 minutes (on a single charge)
<b>Package Dimensions</b>	8 x 5.5 x 2 inches
<b>Item Weight</b>	12.8 ounces



Rear view of the Cutting Edge Foil Shaver, showing the product label with model number CXE1-2001-HYP, input voltage, and 'Made in China' information.

## WARRANTY AND SUPPORT

---

This Cutting Edge product is covered by a manufacturer's warranty. For specific warranty details, please refer to the documentation included with your purchase or visit the official Cutting Edge website. For technical support, replacement parts, or any inquiries, please contact Cutting Edge customer service.