

SINCHER SCV15

SINCHEREU SCV15 Corded 3-in-1 Stick Vacuum Cleaner User Manual

Model: SCV15

1. INTRODUCTION

Thank you for purchasing the SINCHEREU SCV15 Corded 3-in-1 Stick Vacuum Cleaner. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new vacuum cleaner. Please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Always disconnect from the electrical outlet before cleaning or servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

3. PACKAGE CONTENTS

Carefully unpack your SINCHEREU SCV15 vacuum cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.



Image: The SINCHEREU SCV15 vacuum cleaner shown with its various components and accessories, including the main motor, extension wand, floor brush, crevice tool, and dusting brush.

3 in 1 Versatile Cleaning

VACUUM CLEANER

Multiple accessories & handheld conversion



Image: A visual representation of the included components: Main motor, long handle suction (extension wand), small round brush, wall hanging bracket, and two HEPA filters.

- Main Motor Unit (with dust cup and filter installed)
- Extension Wand (long handle suction)
- Floor Brush Head
- Crevice Tool
- Dusting Brush (small round brush)
- Wall Mounting Bracket
- HEPA Filters (x2)
- User Manual

4. ASSEMBLY

The SINCHEREU SCV15 can be assembled in various configurations for different cleaning tasks.

4.1. Assembling the Stick Vacuum

1. Insert the extension wand into the main motor unit until it clicks securely into place.
2. Attach the floor brush head to the other end of the extension wand until it clicks securely.
3. Ensure all connections are firm before use.

4.2. Assembling the Handheld Vacuum

1. Detach the extension wand from the main motor unit by pressing the release button.
2. Attach either the crevice tool or the dusting brush directly to the main motor unit until it clicks securely.



Image: The vacuum cleaner displayed in various configurations, illustrating its 3-in-1 versatility as a stick vacuum and a handheld unit with different attachments.

5. OPERATION

5.1. Powering On/Off

Plug the power cord into a suitable electrical outlet. Press the power button located on the main motor unit to turn the vacuum cleaner on. Press it again to turn it off.

5.2. Using the Floor Brush Head

The floor brush head is designed for multi-surface cleaning. It features an adjustable brush for different floor types.

DUAL-POSITION CARPET/FLOOR BRUSH

Bristles Retracted-For carpets



Bristles Extended-For hard floors



Image: A close-up view of the vacuum's floor brush head, demonstrating the mechanism to retract bristles for carpets and extend them for hard floors.

- **For Carpets:** Ensure the bristles are retracted. This setting allows for optimal suction and prevents tangling on carpet fibers.
- **For Hard Floors (Hardwood, Tile, Marble):** Extend the bristles. This helps to sweep fine dust and debris without scratching delicate surfaces.



Image: The vacuum cleaner's floor head positioned over various surfaces including hardwood, low-pile carpet, and tile, highlighting its multi-surface cleaning capability.

5.3. Using Attachments (Handheld Mode)

APPLICABLE TO VARIOUS SCENARIOS



Image: A collage showing the handheld vacuum being used in various scenarios, such as cleaning car interiors, furniture, and tight spaces with the crevice tool and dusting brush.

- **Crevice Tool:** Ideal for cleaning tight corners, edges, and narrow gaps in furniture or car interiors.
- **Dusting Brush:** Suitable for delicate surfaces, upholstery, curtains, and removing dust from shelves or keyboards.

5.4. Cord Management

The 5-meter power cord provides ample reach for cleaning larger areas without frequently changing outlets. Ensure the cord is not tangled or obstructed during use.



5M CABLE

For Free Sweeping of
Larger Areas

Image: A woman is shown vacuuming stairs with the SINCHEREU SCV15, demonstrating the reach provided by its 5-meter power cord.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1. Emptying the Dust Cup

The 0.8L dust cup should be emptied regularly, especially when the debris reaches the MAX fill line.

1. Ensure the vacuum cleaner is unplugged.
2. Press the dust cup release button to detach the dust cup from the main motor unit.

3. Position the dust cup over a trash bin. Press the bottom release button to open the dust cup and empty its contents.
4. Close the dust cup lid and reattach the dust cup to the main motor unit until it clicks.

EASY TO EMPTY DUSTIN

Removable Dustbin



Image: A hand demonstrating the removal of the transparent dustbin from the main unit, showing the ease of emptying.



Image: A woman is shown easily emptying the contents of the vacuum cleaner's dustbin directly into a trash receptacle.

6.2. Cleaning the Filters

The SINCHEREU SCV15 features a 4-stage advanced filtration system with washable HEPA filters. Regular cleaning of the filters is crucial for maintaining suction power and preventing secondary pollution.

FOUR-STAGE ADVANCED FILTRATION SYSTEM



Image: A detailed diagram illustrating the four-stage filtration system, including cyclone filtration, cylinder filtration, high-efficiency filtration, and sponge filtration, all leading to the dust cup.



Image: A step-by-step guide showing how to clean the filters: 1. One-click empty, 2. Remove the filter, 3. Washable cleaning filters, 4. Dry before use.

1. Unplug the vacuum cleaner.
2. Remove the dust cup as described above.
3. Twist and pull out the filter assembly from the dust cup.
4. Separate the HEPA filter and sponge filter from the assembly.
5. Rinse the HEPA filter and sponge filter under cool running water until the water runs clear. Do not use detergent.
6. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or heat to dry.
7. Once completely dry, reassemble the filters and place them back into the dust cup, then reattach the dust cup to the main motor unit.

Note: It is recommended to clean the filters every 2-4 weeks, depending on usage. Replace HEPA filters every 3-6 months for best performance.

7. STORAGE

The SINCHEREU SCV15 comes with a wall-mounted bracket for convenient storage.

1. Choose a suitable location on a wall for mounting the bracket.
2. Securely attach the wall mounting bracket using appropriate screws and anchors (not included).
3. Hang the vacuum cleaner on the bracket for compact and accessible storage.



Image: A woman is sitting with her dog while the SINCHEREU SCV15 vacuum cleaner is neatly stored on its wall-mounted bracket in the background, demonstrating convenient storage.

8. TROUBLESHOOTING

If you encounter any issues with your vacuum cleaner, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; Power outlet not working; Power button not pressed.	Ensure power cord is securely plugged in; Test outlet with another appliance; Press the power button firmly.
Low suction power.	Dust cup full; Filters clogged; Nozzle/hose blocked; Attachments not properly secured.	Empty dust cup; Clean or replace filters; Check for and remove blockages; Ensure all attachments are securely connected.
Unusual noise during operation.	Blockage in nozzle/hose/brush roll; Dust cup not properly installed.	Check for and remove any blockages; Ensure dust cup is securely attached.
Dust escaping from vacuum.	Dust cup not properly closed/installed; Filters missing or damaged.	Ensure dust cup is correctly closed and attached; Check that filters are properly installed and undamaged.

9. SPECIFICATIONS

Feature	Detail
Model Name	SCV15
Brand	SINCHER
Type	Corded Stick Vacuum Cleaner (3-in-1)
Power Source	Corded Electric
Motor Power	600W
Suction Power	21KPa
Filtration System	4-Stage Advanced Filtration with HEPA Filter
Dust Cup Capacity	0.8L
Noise Level	≤ 80dB
Cord Length	5 meters

Feature	Detail
Item Weight	3.07 Kilograms
Surface Recommendation	Hardwood, Carpet, Tile, Marble
Color	Corded Black

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact SINCHER customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the [SINCHER Store on Amazon](#).