

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EnHomee](#) /

› [EnHomee 49.2" Wide Dresser with Hanging Rack, 6 Drawers, LED Lights, and Charging Station User Manual](#)

## EnHomee Dresser with Rack

# EnHomee 49.2" Wide Dresser with Hanging Rack, 6 Drawers, LED Lights, and Charging Station User Manual

MODEL: DRESSER WITH RACK

### 1. Product Overview

The EnHomee 49.2" Wide Dresser is a versatile storage solution designed for various living spaces. It combines a six-drawer fabric dresser with an integrated hanging rack, offering ample space for clothing and accessories. Key features include built-in LED lighting for ambiance and a convenient charging station with AC outlets and USB ports.



Image: The EnHomee 49.2" Wide Dresser in black, showcasing its six fabric drawers, open hanging rack with clothes, and the top surface with a charging station and decorative items. The LED lights under the hanging rack are illuminated.

## 2. Package Contents

Before assembly, ensure all components are present. Carefully unpack all items and compare them with the list below:

- Metal Frame Components (various sizes for dresser and hanging rack)
- Wooden Top Panels
- Fabric Drawers (6 total: 2 small, 4 large)
- Charging Station Unit
- Adjustable Foot Pads
- Assembly Hardware (screws, bolts, Allen wrench)
- S-Hooks
- Anti-Tipping Kit
- Screwdriver
- Drawer Knobs

- LED Light Strip (pre-installed or separate)

### 3. Setup Instructions

Follow these steps carefully for proper assembly. It is recommended to assemble the dresser on a soft, clean surface to prevent scratches. Ensure all connections are secure before use.

1. **Attach Adjustable Foot Pads:** Insert the adjustable foot pads into the bottom of all vertical metal frame components. Adjust them to level the dresser on uneven floors.
2. **Assemble Side Frames:** Connect the vertical metal frame components using the horizontal support bars. Use the provided screws and Allen wrench to tighten all connections.
3. **Install Hanging Rack Base:** Secure the grid panel to the bottom of the hanging rack section of the frame.
4. **Connect Main Sections:** Join the dresser frame section with the hanging rack frame section using the top horizontal bars. Ensure these connections are firm.
5. **Attach Wooden Top Panels:** Place the wooden top panels onto the assembled frame. Secure them using the provided screws and screwdriver.
6. **Install Charging Station:** Mount the charging station unit to the designated area on the side of the hanging rack frame using the provided screws. Ensure it is firmly attached.
7. **Install Back Support Bars:** Attach the X-shaped back support bars to the rear of the dresser frame. These bars enhance the overall stability of the unit.
8. **Assemble and Insert Drawers:** Unfold each fabric drawer and insert its bottom panel. Attach the drawer knobs to the front of each drawer. Once assembled, slide the drawers into their respective slots in the dresser frame.
9. **Install Anti-Tipping Kit:** For safety, especially in households with children or pets, install the anti-tipping kit. Secure the dresser to a wall using the provided hardware and follow the specific instructions included with the kit.

## Double reinforced ribs for greater stability

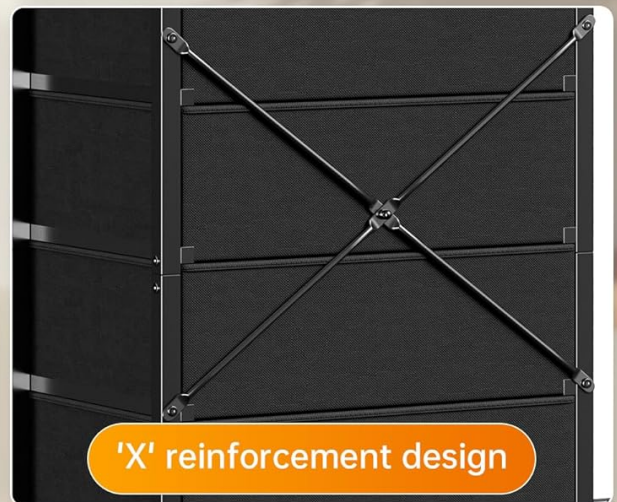 
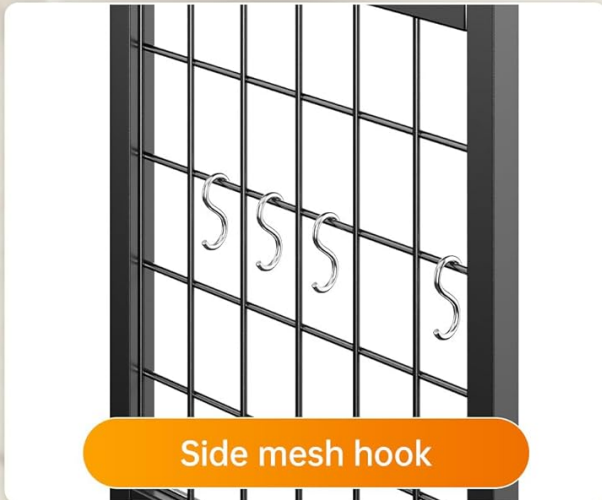 


Image: A composite image detailing the dresser's safety features: a side mesh panel with hooks, an anti-tipping device, adjustable feet for leveling, and an 'X' reinforcement design for structural stability.

### 4. Operating Instructions

This dresser is designed for ease of use and organization.

- **Using the Drawers:** The six fabric drawers (two small, four large) are designed for smooth operation. Pull gently on the knobs to open and push to close. The large capacity allows for organized storage of various items.



Image: The dresser with several drawers pulled open, revealing neatly folded clothes and accessories, demonstrating its multi-functional classification and storage capacity.

- **Utilizing the Hanging Rack:** The integrated hanging rack is suitable for hanging clothes to prevent wrinkles. The side mesh panel can be used with S-hooks to hang bags or other items. The bottom grid provides additional space for shoes or storage boxes.



Image: A detailed view of the dresser's dimensions, highlighting the hanging rack section with clothes and the bottom grid for shoes, along with drawer capacity information.

- **LED Lighting System:** The dresser includes LED lights under the hanging rack. These lights can be controlled via a remote (if provided) to change colors, adjust brightness, and select dynamic modes, enhancing the room's ambiance.

Your browser does not support the video tag.

Video: A demonstration of the dresser's LED lighting feature, showing various color changes and lighting effects under the hanging rack, controlled by a remote.

- **Charging Station:** The built-in charging station features two AC outlets (125V/12A) and two USB ports (5V/3A) for convenient charging of electronic devices. Ensure the dresser's main power cord is plugged into a wall outlet.



2 AC Outlets  
**125V/12A**



2 USB Ports  
**5V/3A**



Power Cord  
**6.6-FT**

Image: A close-up of the integrated charging station, featuring two standard AC outlets and two USB ports, with a device plugged in for charging.

## 5. Maintenance

To maintain the appearance and longevity of your EnHomee dresser, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the wooden surfaces and metal frame with a dry, soft cloth. For fabric drawers, spot clean with a damp cloth and mild detergent if necessary, then air dry. Avoid harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust all surfaces to prevent buildup.
- **Drawer Care:** Avoid overloading drawers to ensure smooth operation and prevent damage to the fabric.
- **Stability Check:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

## 6. Troubleshooting

If you encounter any issues with your dresser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Overloaded drawer, misaligned, or debris in tracks.	Reduce contents, ensure drawer is correctly inserted, check for obstructions.
LED lights are not working.	Power cord unplugged, remote battery dead, or light strip connection loose.	Check power connection, replace remote battery, ensure light strip is securely plugged in.
Charging station is not providing power.	Dresser power cord unplugged, or device cable is faulty.	Verify dresser is plugged into a live wall outlet, test with a different device cable.
Dresser feels unstable.	Screws are loose, or adjustable feet are uneven.	Tighten all assembly screws, adjust foot pads to level the dresser on uneven floors. Ensure anti-tipping kit is installed.

## 7. Specifications

- **Dimensions:** 49.2" W x 15.8" D x 47.2" H
- **Item Weight:** 37.3 pounds
- **Material:** Quality iron frame, wooden top surface, fabric drawers
- **Drawer Capacity:** 6 drawers (2 small, 4 large)
- **Charging Station:**
  - 2 AC Outlets: 125V/12A
  - 2 USB Ports: 5V/3A
  - Power Cord Length: 6.6 FT
- **LED Lights:** Multi-color options, dynamic modes, adjustable speed and brightness.
- **Safety Features:** Anti-tipping mechanism, adjustable foot pads, X-reinforcement design.



Image: A visual representation of the dresser's key dimensions, including width, depth, and height, along with weight capacity for the top surface and hanging rod.

## 8. Safety Information

For your safety and to prevent damage to the product, please adhere to the following:

- Always install the anti-tipping mechanism to secure the dresser to a wall, especially in households with children or pets.
- Do not overload drawers or the hanging rack beyond recommended weight limits.
- Ensure the dresser is placed on a level surface. Use the adjustable foot pads to correct any unevenness.
- Keep liquids away from the charging station to prevent electrical hazards.
- Do not allow children to climb on the dresser.

## Double reinforced ribs for greater stability

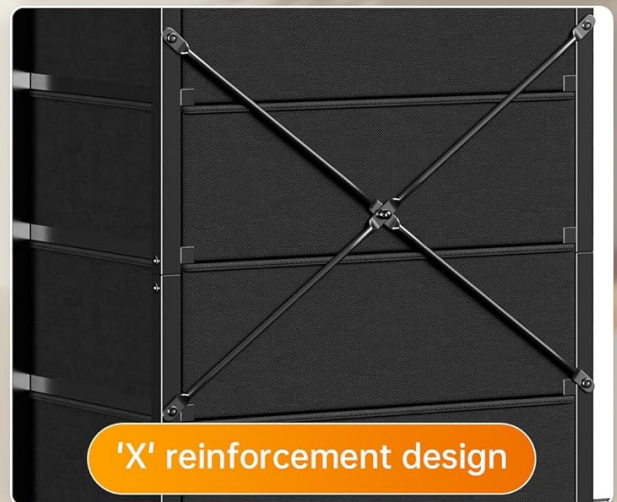 
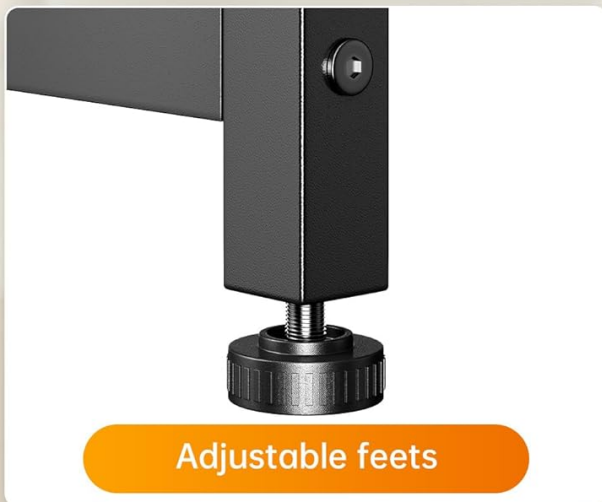 
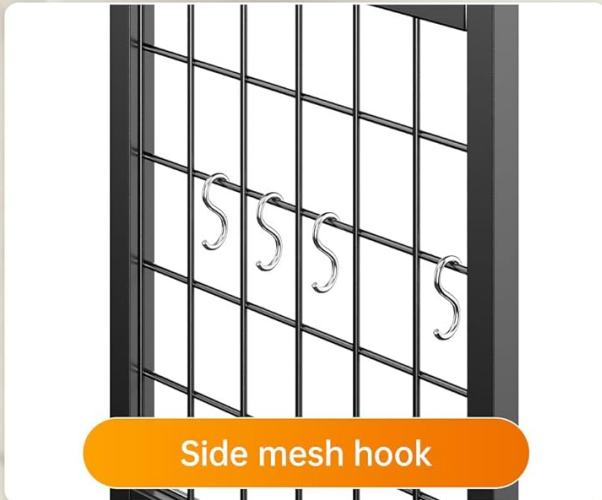 


Image: A composite image detailing the dresser's safety features: a side mesh panel with hooks, an anti-tipping device, adjustable feet for leveling, and an 'X' reinforcement design for structural stability.

### 9. Warranty and Support

For warranty information, product support, or to report missing/damaged parts, please contact EnHomee customer service directly. Refer to your purchase documentation or the EnHomee official website for contact details.

Please retain your proof of purchase for any warranty claims.