



Manuals.plus /

- › onerbl /
- › Onerbl AC-DC Adapter Instruction Manual for Povasee Jumper Starters

onerbl AC-DC Adapter

Onerbl AC-DC Adapter Instruction Manual

For Povasee Li-ion Battery Jumper Starters

INTRODUCTION

Thank you for choosing the Onerbl AC-DC Adapter. This adapter is designed to provide reliable power for charging your Povasee Li-ion battery jumper starter from standard electrical outlets. Please read this manual carefully before use to ensure safe and optimal performance of your device.

SAFETY INFORMATION

- **Indoor Use Only:** This adapter is intended for indoor use in dry locations. Do not expose to rain, moisture, or extreme temperatures.
- **Proper Voltage:** Ensure the wall outlet voltage matches the adapter's input requirements (typically 100-240V AC).
- **Avoid Damage:** Do not use the adapter if the cord or plug is damaged. Do not attempt to open or repair the adapter.
- **Ventilation:** Ensure adequate ventilation around the adapter during use. Do not cover it with cloths or other materials.
- **Children and Pets:** Keep the adapter out of reach of children and pets.
- **Disconnect When Not in Use:** Unplug the adapter from the power outlet when not in use or during electrical storms.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Onerbl AC-DC Adapter
- 2 x USB Cable

SETUP

1. **Connect the Adapter:** Plug the AC-DC adapter into a standard wall electrical outlet.

2. **Connect USB Cable:** Insert one end of the provided USB cable into the output port of the Onerbl AC-DC adapter.
3. **Connect to Jumper Starter:** Connect the other end of the USB cable to the appropriate charging input port on your Povasee Li-ion battery jumper starter. Ensure the connection is secure.



Image: The Onerbl AC-DC Adapter connected to its cables, ready for use. This image illustrates the compact design and the connection points for the USB cables.

OPERATING INSTRUCTIONS

1. **Initiate Charging:** Once connected, your Povasee jumper starter should begin charging. Refer to your jumper starter's manual for specific charging indicators (e.g., LED lights, display).
2. **Monitor Charging:** Allow the jumper starter to charge fully. Charging times may vary depending on the jumper starter model and its current battery level.
3. **Disconnect:** Once charging is complete, disconnect the USB cable from the jumper starter, then unplug the AC-DC adapter from the wall outlet.

MAINTENANCE

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the surface.

Do not use liquid cleaners or solvents.

- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly around the adapter.
- **Inspection:** Periodically inspect the adapter and cables for any signs of damage, such as frayed wires or cracked casing. Discontinue use if damage is found.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Adapter not providing power.	No power from outlet; loose connection; damaged adapter.	Check wall outlet with another device. Ensure all connections are secure. If damaged, discontinue use and replace.
Jumper starter not charging.	Incorrect cable; jumper starter issue; adapter incompatibility.	Ensure you are using the correct USB cable. Verify the jumper starter's charging port is functional. Confirm adapter compatibility with your specific Povasee model.

SPECIFICATIONS

- **Product Type:** AC-DC Adapter
- **Input:** 100-240V AC (Standard Wall Outlet)
- **Output:** Compatible with 5VDC and 12VDC devices (e.g., Povasee A20, A30, A50, A40 series jumper starters)
- **Manufacturer:** Shenzhen Waweis Technology Co., Ltd
- **ASIN:** B0DFGNKP1Y

WARRANTY AND SUPPORT

This Onerbl AC-DC Adapter comes with a standard manufacturer's warranty. For specific warranty details, returns, or technical support, please refer to the product listing or contact the seller directly through your purchase platform. Keep your purchase receipt for warranty claims.

