

EnHomee Dresser with Rack

EnHomee 49.2" W Dresser User Manual

Model: Dresser with Rack

Brand: EnHomee

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your EnHomee 49.2" W Dresser. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

SAFETY INFORMATION

- Always follow assembly instructions carefully.
- Ensure all screws and fasteners are securely tightened before use.
- Utilize the provided anti-tipping mechanisms to secure the dresser to a wall, preventing accidental tipping.
- Do not overload drawers or hanging racks. Refer to specifications for weight limits.
- Keep children away from the assembly area and small parts.
- Avoid placing liquids directly on the charging station to prevent electrical hazards. The top surface is designed to be waterproof, but direct spills on the charging unit should be avoided.

PACKAGE CONTENTS

Verify that all components listed in the assembly instructions are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

Your browser does not support the video tag.

Video: Overview of the EnHomee 49.2" W Dresser components and features.

SETUP AND ASSEMBLY

Assembly is required for this product. All necessary hardware and step-by-step instructions are provided. The 6-drawer dresser can be installed with the drawer unit on either the left or right side, depending on your preference and room layout.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Follow the visual guide to connect the metal frame components using the provided screws and tools. Ensure all connections are secure.
3. **Install Shelves and Rods:** Attach the hanging rod and bottom grid shelf to the frame.
4. **Attach Charging Station:** Secure the built-in charging station to the designated area on the side of the dresser.
5. **Insert Drawers:** Assemble the fabric drawers by inserting the bottom panel and attaching the handles. Place the assembled drawers into the frame.
6. **Secure Anti-Tipping Device:** For safety, attach the anti-tipping mechanism to the back of the dresser and secure it to a wall stud.
7. **Adjust Foot Pads:** Use the adjustable foot pads to level the dresser on uneven surfaces, ensuring stability.

Your browser does not support the video tag.

Video: Assembly guide for the 6-Drawer Dresser with LED Lights & Charging Station.



Image: Diagram showing the dresser dimensions and the option for left or right side installation of the drawer unit.



Image: Detailed view of safety and stability features: side mesh hook for accessories, anti-tipping device for wall attachment, adjustable foot pads for leveling, and X-reinforcement design for structural integrity.

OPERATING INSTRUCTIONS

LED Lights

The dresser features charming LED lights to enhance your room's ambiance. The lights offer various settings:

- **Color Options:** Choose from 20 different colors to match your mood or decor.
- **Dynamic Modes:** Explore 21 dynamic modes for various lighting effects.
- **Speed Modes:** Adjust the speed of dynamic lighting with 8 available modes.
- **Brightness Modes:** Select from 8 brightness levels to achieve the desired illumination.



2 AC Outlets
125V/12A



2 USB Ports
5V/3A



Power Cord
6.6-FT

Image: The dresser illuminated with LED lights, showcasing multiple color options and indicating remote control functionality.

Built-In Charging Station

The dresser includes a convenient charging station located on the side, providing easy access to power for your electronic devices.

- **AC Outlets:** Two 125V/12A AC outlets for standard plugs.
- **USB Ports:** Two 5V/3A USB ports for charging mobile devices.
- **Power Cord:** Features a 6.6-foot power cord for flexible placement.



Image: A detailed view of the charging station, highlighting the two AC outlets and two USB ports for device charging.

Storage Features

- **Fabric Drawers:** Six deep fabric drawers provide ample storage for clothing, blankets, and other items.
- **Hanging Rack:** A dedicated hanging rack is suitable for organizing shirts, dresses, or other garments.
- **Side Mesh Panel:** The side mesh panel can be used with hooks (included) to hang bags, scarves, or other accessories.
- **Bottom Shelf:** The baseboard shelf beneath the hanging rack offers additional space for shoes or storage boxes.



Image: The dresser showcasing its multi-functional design with a hanging rack for clothes, six fabric drawers, and illuminated LED lights.

MAINTENANCE

To maintain the appearance and longevity of your EnHomee dresser, follow these care instructions:

- **Cleaning:** Wipe the wooden top and metal frame with a dry, soft cloth. For fabric drawers, spot clean with a damp cloth and mild detergent if necessary, then air dry.
- **Spills:** The wooden top surface is designed to be waterproof. Promptly wipe any spills to prevent damage. Avoid direct liquid contact with the electrical components of the charging station.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if needed.
- **Anti-Tipping Device:** Regularly inspect the anti-tipping mechanism to ensure it is securely attached to both the dresser and the wall.

TROUBLESHOOTING

Dresser Instability

- **Issue:** The dresser wobbles or is not level.

- **Solution:** Adjust the foot pads at the bottom of the dresser to stabilize it on uneven floors. Ensure all assembly screws are securely tightened. Verify the anti-tipping device is properly installed and secured to the wall.

Drawers Not Sliding Smoothly

- **Issue:** Fabric drawers are difficult to open or close.
- **Solution:** Ensure the drawers are correctly inserted into their slots and are not overloaded. Check for any obstructions within the drawer compartments or along the frame.

LED Lights Not Working

- **Issue:** LED lights do not turn on or function incorrectly.
- **Solution:** Check if the USB connector for the LED lights is securely plugged into the charging station. Ensure the charging station's power cord is plugged into a working wall outlet. Verify the remote control batteries are functional.

Charging Station Not Functioning

- **Issue:** AC outlets or USB ports are not providing power.
- **Solution:** Confirm the charging station's power cord is firmly plugged into a live wall outlet. Test the wall outlet with another device to ensure it is working. Avoid overloading the charging station with too many high-power devices simultaneously.

SPECIFICATIONS

Brand	EnHomee
Model Name	Dresser with Rack
Product Dimensions	15.8"D x 49.2"W x 47.2"H
Item Weight	37.3 Pounds
Material	Metal frame, Wooden top, Fabric drawers
Number of Drawers	6
Charging Station	2 AC Outlets (125V/12A), 2 USB Ports (5V/3A), 6.6-FT Power Cord
LED Lights	20 Colors, 21 Dynamic Modes, 8 Speed Modes, 8 Brightness Modes
Assembly Required	Yes
Product Care Instructions	Wipe with Dry Cloth

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase protection plans, please refer to your purchase documentation or contact EnHomee customer service directly. Protection plans are available for 2-Year, 3-Year, and Complete Protect options.

- **2-Year Protection Plan:** Available for \$22.99.
- **3-Year Protection Plan:** Available for \$27.99.
- **Complete Protect:** One plan covers all eligible past and future purchases for \$16.99/month.

