

[Manuals.plus](#) /

› [Lueptexx](#) /

› Lueptexx 800W Convection Wall Panel Heater User Manual

## Lueptexx NA9-HKWH001-800W-3

# Lueptexx 800W Convection Wall Panel Heater User Manual

Model: NA9-HKWH001-800W-3

Brand: Lueptexx

## IMPORTANT SAFETY INSTRUCTIONS

---

Please read and understand all instructions before using this heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not use outdoors. This heater is intended for indoor use only.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Always unplug the heater when not in use.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes a tip-over switch and overheat protection. If the heater tips over or overheats, it will automatically shut off.
- Keep children and pets away from the heater. Utilize the child lock feature for added safety.
- The heater uses V0 flame retardant materials for enhanced safety.

# Worry-Free Heater Enjoyment!



Tip-over  
Protection



Overheat  
Protection



V-0 Flame  
Retardancy



Child  
Lock



Figure 1: Visual representation of the heater's integrated safety features, including tip-over and overheat protection, flame retardant materials, and child lock.

## PRODUCT OVERVIEW

The Lueptexx 800W Convection Wall Panel Heater provides efficient and quiet heating for indoor spaces. Its fan-less design ensures silent operation and maintains air quality.

### Key Features:

- **Efficient Convection Technology:** Heats rooms uniformly without fans, reducing energy consumption.
- **Sleek Design:** Aluminum frame with a white finish, suitable for various interior decors.
- **Versatile Placement:** Can be wall-mounted or used as a portable unit with universal wheels.
- **User-Friendly Controls:** Intuitive touch panel, LED display, and remote control for easy operation.
- **Safety Features:** Includes tip-over protection, overheat protection, V0 flame retardant materials, and a child lock.
- **Quiet Operation:** 800W heating without disturbing noise, ideal for bedrooms and offices.


## Components:

- Heater Unit
- Remote Control
- Wall Mounting Brackets
- Universal Wheels (for portable use)
- User Manual (this document)



Figure 2: Main view of the Lueptexx 800W Convection Wall Panel Heater, showcasing its sleek white panel design, integrated digital display, and included remote control.

# 800W Efficient Heating

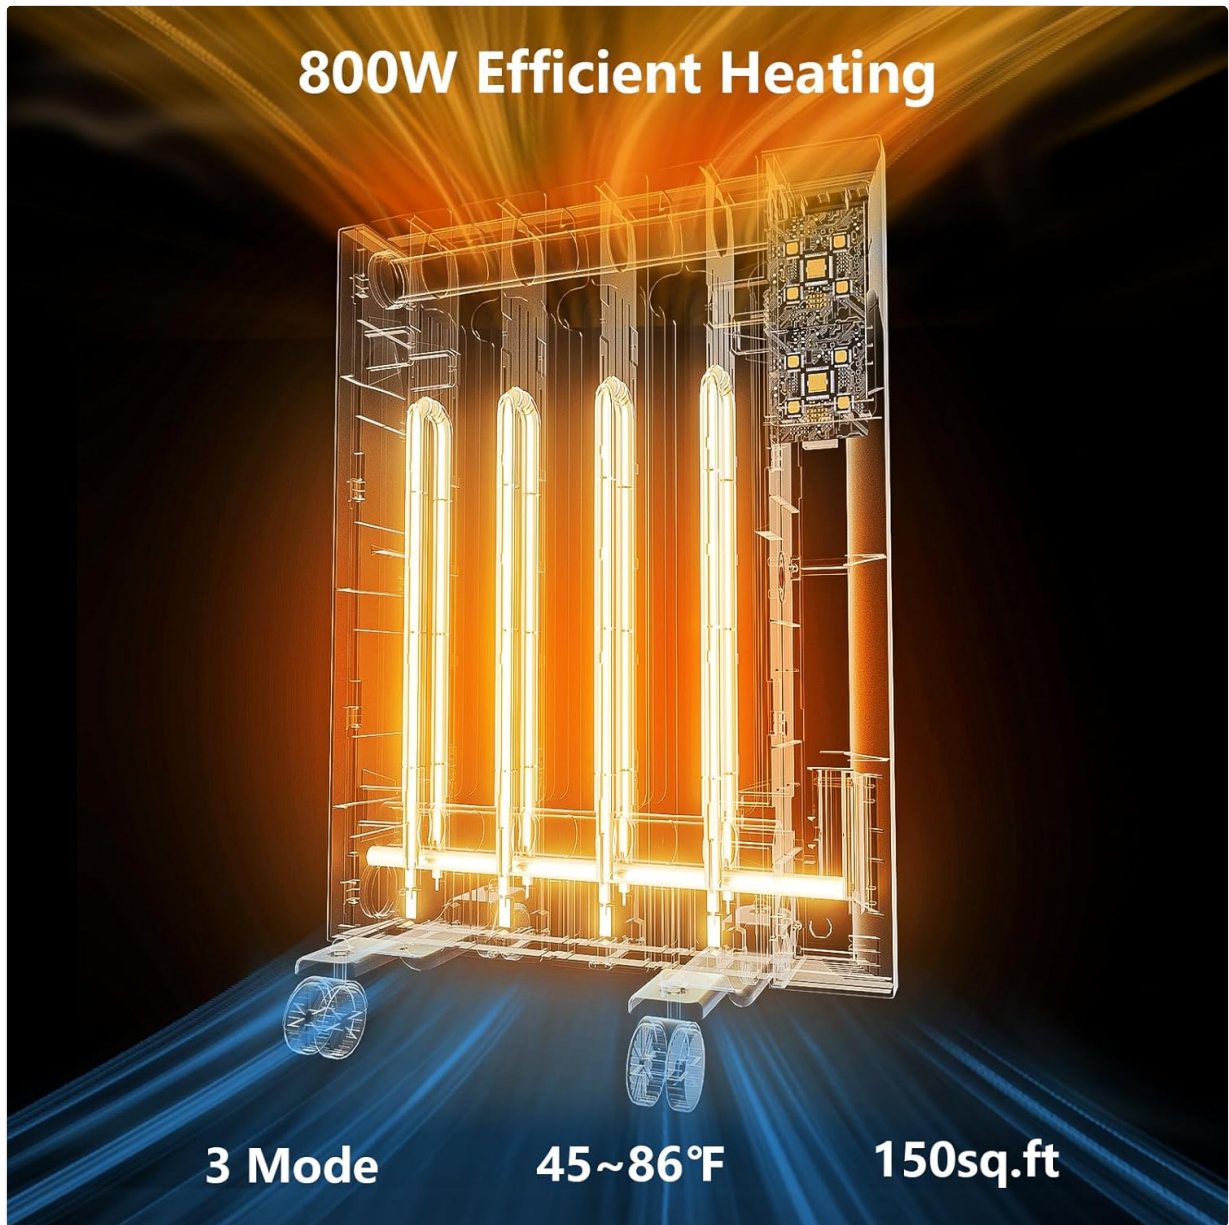

**3 Mode**

**45~86°F**

**150sq.ft**

Figure 3: An X-ray view illustrating the internal 800W heating elements and the convection process, demonstrating efficient heat distribution.



Figure 4: Illustration of how the convection heater circulates warm air to heat an entire room uniformly, reaching areas up to 300 sq.ft.

# Whisper Quiet: Fanless Convection



No Blower



No Noise



No Drying



Figure 5: A comparison chart highlighting the whisper-quiet operation of the convection heater at 0dB, significantly quieter than typical fan heaters or a library environment.

## SETUP AND INSTALLATION

The heater offers flexible installation options: wall-mounted or portable with wheels.

### Option 1: Portable Use (with Wheels)

1. Carefully unpack the heater and all accessories.
2. Attach the universal wheels to the base of the heater. Ensure they are securely fastened according to the diagrams provided in the packaging.
3. Place the heater on a stable, level surface, away from curtains or other flammable materials.
4. Ensure the power cord is not obstructed and is easily accessible to a grounded electrical outlet.



Figure 6: The heater can be used with a rolling stand for portability or mounted on a wall using the provided brackets.



Figure 7: Detail of the universal wheel, designed for smooth and easy movement of the portable heater.

## Option 2: Wall Mount Installation

For permanent placement, the heater can be mounted on a wall.

1. Choose a suitable wall location, ensuring it is away from flammable materials and has a grounded electrical outlet nearby.
2. Using the provided wall mounting brackets and hardware, mark the drilling points on the wall.
3. Drill holes and insert wall anchors if necessary.

4. Securely attach the mounting brackets to the wall.
5. Carefully hang the heater onto the mounted brackets, ensuring it is stable and level.
6. Ensure the power cord is not strained and is easily accessible to a grounded electrical outlet.



Figure 8: Visual comparison of the heater in wall-mounted and portable configurations, including its approximate dimensions for planning placement.

## OPERATING INSTRUCTIONS

---

The heater can be controlled via its integrated touch panel or the included remote control.

### Control Panel and Remote Control



Figure 9: The heater features an intuitive touch panel on the unit and includes a remote control for convenient operation from a distance.



Figure 10: Detailed view of the digital display and touch-sensitive buttons on the heater's control panel, showing temperature and mode indicators.

### Basic Operation:

1. **Power On/Off:** Press the power button ( ) on the control panel or remote control to turn the heater on or off.
2. **Temperature Adjustment:** Use the up (▲) and down (▼) arrows to set the desired temperature between 45°F and 86°F (7°C and 30°C). The LED display will show the current and target temperature.

3. **Mode Selection:** Press the mode button (often represented by a symbol like☰ or similar) to cycle through available heating modes (e.g., Constant Temperature Mode, Eco Mode, Comfort Mode).
4. **Timer Function:** Press the timer button (often represented by a clock icon ) to set an automatic shut-off timer for up to 24 hours.
5. **Child Lock:** Activate the child lock feature by pressing the child lock button (often represented by a lock icon ) to prevent accidental changes to settings.



Figure 11: The child lock feature, indicated by this icon, prevents accidental changes to settings, ensuring safety in households with children.



Figure 12: This diagram demonstrates the energy efficiency of the ECO Mode, designed to reduce power consumption and save on heating costs.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. Ensure no water enters the internal components.
- **Storage:** If storing the heater for an extended period, unplug it and allow it to cool completely. Store it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.
- **Inspection:** Periodically inspect the power cord and plug for any signs of damage. If any damage is

found, discontinue use and contact customer support.

## TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power outlet not working; power switch off; tip-over switch activated; overheat protection activated.	Ensure the heater is securely plugged into a working, grounded outlet. Check the power switch. If tipped, place upright. If overheated, unplug and allow to cool for 30 minutes before restarting.
Heater is not heating effectively.	Temperature setting too low; room size exceeds heating capacity; drafts in the room.	Increase the temperature setting. Ensure the room size is within the recommended heating coverage (150-300 sq.ft). Close windows and doors to minimize drafts.
Remote control not working.	Batteries are dead or incorrectly inserted; remote is too far from the heater.	Replace batteries with new ones, ensuring correct polarity. Move closer to the heater and ensure no obstructions.
Child lock is active.	Settings cannot be changed.	Deactivate the child lock feature by pressing the child lock button.

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Lueptexx
Model Number	NA9-HKWH001-800W-3
Heat Output	800 Watts
Heating Coverage	150-300 sq.ft
Fuel Type	Electric
Voltage	120 Volts (AC)
Product Dimensions	3.3"D x 19.7"W x 22.4"H
Item Weight	21.4 pounds
Special Features	Adjustable Temperature, Child Lock, Digital Display, Energy Efficient, Noiseless
Mounting Type	Wall Mount, Portable (with wheels)
Indoor/Outdoor Usage	Indoor

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Lueptexx website.

Please retain your proof of purchase for any warranty claims.