

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [akimart](#) /

> Akimart 10.1 Inch WiFi Digital Picture Frame User Manual

akimart 10.1 inch 6.0

Akimart 10.1 Inch WiFi Digital Picture Frame User Manual

Model: 10.1 inch 6.0 | Brand: Akimart

1. INTRODUCTION

This manual provides detailed instructions for setting up and operating your Akimart 10.1 Inch WiFi Digital Picture Frame. Please read this guide thoroughly before use to ensure optimal performance and longevity of your device. This digital picture frame allows you to display photos and videos, share memories with family and friends, and utilize various integrated functions.

2. PRODUCT OVERVIEW

 
Key Features

- **High-Resolution Display:** 10.1-inch IPS HD Touch Screen with 1280x800 resolution and 16:10 aspect ratio for clear viewing from any angle.
- **Wireless Sharing:** Send photos and videos directly to the frame via a dedicated mobile application or email from anywhere.
- **Ample Storage:** Built-in 32GB internal memory, expandable via USB drive or SD card.
- **Versatile Media Support:** Supports JPG/JPEG/BMP/PNG/GIF image formats, WAV/MP3 audio, and MOV/MP4/AVI/MKV video formats (up to 1920x1080 at 30FPS).
- **Automatic Orientation:** Auto-rotate function adjusts photos for portrait or landscape mode.
- **Multi-functional:** Includes features such as slide play, video play, calendar, weather display, alarm, clock, and music playback.
- **Customizable Settings:** Options for display caption, play order, image zooming, adjustable brightness, and automatic on/off scheduling.

10.1 Inch Picture Display

Resolution

1280*800



Aspect Ratio
16:10



IPS HD
Touchscreen



Image: The 10.1-inch IPS HD Touch Screen with 1280x800 resolution and 16:10 aspect ratio.

Package Contents

Verify that all items are present in the package:

- Akimart 10.1 Inch WiFi Digital Picture Frame
- Power Adapter
- Detachable Stand
- User Manual

3. SETUP GUIDE

3.1 Initial Setup

1. **Unpack the Frame:** Carefully remove the digital picture frame and all accessories from the packaging.
2. **Attach the Stand:** Insert the detachable stand into the designated slot on the back of the frame. The stand allows for both

portrait and landscape orientation.

3. **Power On:** Connect the power adapter to the frame and then plug it into a power outlet. The frame will automatically power on.
4. **Language Selection:** Follow the on-screen prompts to select your preferred language.
5. **Connect to Wi-Fi:** Select your Wi-Fi network from the list and enter the password. A stable internet connection is required for sharing photos via app or email.



Image: Easy setup process for the digital picture frame.

3.2 App Installation and Pairing

1. **Download the App:** Search for the official Akimart app (or specified app name in the frame's interface) on the Google Play Store (for Android) or Apple App Store (for iOS).
2. **Create an Account:** Open the app and follow the instructions to create a new user account.
3. **Pair the Frame:** In the app, locate the option to add a new device. The frame will display a unique connection code (valid for 12 hours, found under Settings > Device Info > Connection Code). Enter this code into the app to pair your smartphone with the digital picture frame.

Your browser does not support the video tag.

Video: Demonstrates the process of setting up the digital photo frame and sharing content via the app.

4. OPERATING INSTRUCTIONS

4.1 Navigating the Touch Screen

The Akimart digital picture frame features an intuitive touch screen interface. Swipe left/right to navigate through photos and videos during a slideshow. Tap the screen to access the main menu or settings.

4.2 Sharing Photos and Videos

1. **Via Mobile App:** Open the paired app on your smartphone. Select the 'Photo' or 'Video' option. Choose up to 50 photos or videos (max 200MB for videos) from your device's gallery and send them to the frame.
2. **Via Email:** The frame has a unique email address. You can send photos and videos directly to this email address, and they will appear on the frame.
3. **Via USB Drive/SD Card:** Insert a USB drive or SD card into the respective slot on the frame. Navigate to the 'Files' or 'Album' section on the frame to import or export media.

Your browser does not support the video tag.

Video: Illustrates how to share moments, including photos and videos, to the digital picture frame.

4.3 Media Playback

- **Slideshow:** The frame automatically plays a slideshow of uploaded photos. You can adjust the slideshow interval and transition effects in the settings.
- **Video Playback:** Videos will play automatically within the slideshow or can be selected individually.
- **Music Playback:** The frame supports WAV/MP3 audio. You can play background music during photo slideshows.

4.4 General Settings

Access the 'Settings' menu by tapping the screen and selecting the gear icon. Here you can adjust:

- **Display:** Brightness, sleep mode, auto on/off.
- **Slideshow:** Play order, interval, transition effects, display captions.
- **Sound:** Volume control for videos and music.
- **Wi-Fi:** Change or connect to a new network.
- **Device Info:** View frame ID, connection code, and software version.

5. ADVANCED FEATURES

5.1 Calendar and Weather

The frame can display a calendar and local weather information. Ensure your location is set correctly in the settings for accurate weather updates.

5.2 Alarm and Clock

Set alarms directly on the device. The clock function displays the current time.

5.3 Auto On/Off

Configure the frame to automatically turn on and off at scheduled times, conserving energy and adapting to your daily routine.

6. STORAGE OPTIONS

Your Akimart digital picture frame comes with 32GB of built-in storage. If you require additional space, you can expand it using a USB drive or an SD card.

- **USB Drive:** Insert a compatible USB drive into the USB port.
- **SD Card:** Insert a compatible SD card into the SD card slot.

You can manage files between internal storage and external storage via the 'Files' or 'Album' section on the frame's interface.

Large 32 GB Internal Storage

Support multi user sharing

Storage can also be extended

By using SD card and USB drive



SD Card



USB Drive



The image features a central collage of various photographs. In the foreground, a large black-framed digital picture frame displays a vibrant birthday party scene with children wearing party hats and blowing out candles on a colorful cake. To the left of the frame, there are four circular icons, each containing a portrait of a different person (a man, a woman, an older woman, and an older man) with a small smartphone icon below it, representing multi-user sharing. Above the main text, there are icons for an SD card and a USB drive, with the labels 'SD Card' and 'USB Drive' positioned below them.

Image: The frame's storage capabilities, including 32GB internal memory and support for SD cards and USB drives.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and frame. Avoid abrasive cleaners or solvents.
- **Software Updates:** Periodically check for software updates in the 'Settings' menu to ensure your device has the latest features and improvements.
- **Placement:** Place the frame on a stable surface or mount it securely on a wall. Avoid direct sunlight or extreme temperatures.

Freestanding or Wall Mount Auto Rotation



Image: The frame can be used freestanding or wall-mounted, with automatic rotation.

8. TROUBLESHOOTING

Problem	Solution
Frame does not power on.	Ensure the power adapter is securely connected to both the frame and a working power outlet.
Cannot connect to Wi-Fi.	Verify the Wi-Fi password is correct. Ensure the frame is within range of your router. Try restarting your router and the frame.
Photos/Videos not appearing on the frame.	Check your internet connection. Ensure the app is correctly paired and the connection code is valid. Verify media format compatibility. For USB/SD, ensure the card is inserted correctly and files are in supported formats.

Problem	Solution
Touch screen is unresponsive.	Restart the frame. Ensure the screen is clean and free of debris.
Auto-rotate not working.	Ensure the frame is placed on a stable surface or mounted correctly. Check settings for auto-rotate options.

9. SPECIFICATIONS

Feature	Detail
Brand	Akimart
Model	10.1 inch 6.0
Screen Size	10.1 Inches
Resolution	1280x800 HD IPS
Aspect Ratio	16:10
Touchscreen	Yes
Internal Memory	32 GB
Connectivity	Wi-Fi
External Storage	USB Drive, SD Card
Control Method	App, Touch
Power Source	DC
Image Formats	JPG/JPEG/BMP/PNG/GIF
Video Formats	MOV/MP4/AVI/MKV (up to 1920x1080 30FPS)
Audio Formats	WAV/MP3

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Akimart website. Contact information for technical assistance is typically provided on the manufacturer's support page.