

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [teesa](#) /

› [Teesa Steam Mop TSA5051 User Manual](#)

teesa TSA5051

Teesa Steam Mop TSA5051 User Manual

Model: TSA5051

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Teesa Steam Mop TSA5051. Keep this manual for future reference.

- Always ensure the appliance is unplugged before filling the water tank or performing maintenance.
- Do not leave the steam mop unattended while powered on.
- Keep children and pets away from the appliance during operation.
- Use only distilled or demineralized water in the tank to prevent mineral buildup.
- Do not direct steam at people, animals, or electrical appliances.
- Avoid using the steam mop on unsealed hardwood floors or surfaces that are sensitive to heat and moisture.
- Always attach a cleaning pad before operating the steam mop.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Teesa Steam Mop TSA5051 before assembly and operation.



Figure 2.1: Fully assembled Teesa Steam Mop TSA5051, front view.





Figure 2.2: Side view of the steam mop, showing the handle and power cord wrap.



Figure 2.3: The detachable handheld steam unit.



Figure 2.4: Illustration of detaching the handheld unit from the main body.



Figure 2.5: Included accessories: round brush, joint accessory, slot nozzle, scraper.



Figure 2.6: Measuring cup for water and adapter for accessories.

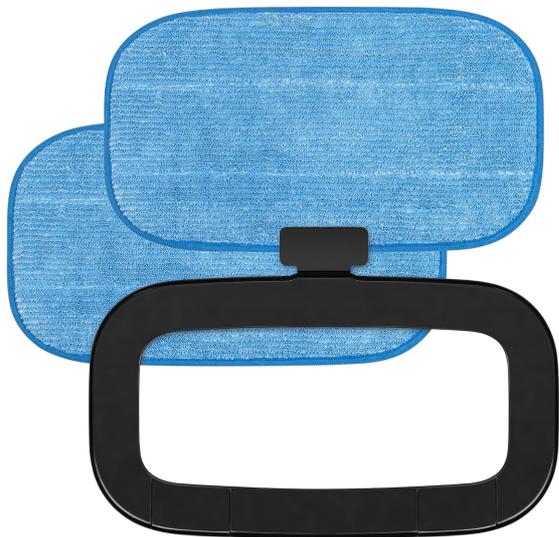


Figure 2.7: Two sponge cloths (mop pads) and the carpet glider frame.

Included Components:

- Main Steam Mop Unit (with detachable handheld steamer)
- Handle Assembly
- 2 x Sponge Cloths (Mop Pads)
- Measuring Cup
- Accessory Adapter
- Round Brush
- Joint Accessory
- Slot Nozzle
- Scraper
- Carpet Glider Frame

3. SETUP AND ASSEMBLY

1. **Assemble the Handle:** Insert the handle assembly into the main steam mop unit until it clicks securely into place.
 2. **Attach Cleaning Pad:** Place one of the sponge cloths onto the bottom of the mop head, ensuring it is securely attached.
 3. **Fill Water Tank:**
 - Open the water tank cap.
 - Using the provided measuring cup, fill the water tank with up to 380 ml of distilled or demineralized water. Do not overfill.
 - Close the water tank cap securely.
 4. **Optional: Attach Carpet Glider:** For refreshing carpets, place the mop head with the attached cleaning pad into the carpet glider frame.
-

4. OPERATING INSTRUCTIONS

4.1. Using as a Steam Mop

1. Ensure the water tank is filled and a cleaning pad is attached.
2. Plug the power cord into a grounded electrical outlet (220-240 V AC, 50 Hz).
3. The steam mop will begin heating. The indicator light will illuminate, signaling preparation. The device is ready in approximately 25 seconds.
4. Select the desired steam level (3 levels available) using the control button.
5. Begin cleaning by moving the mop head slowly and steadily over the floor surface. The swivel head allows for easy maneuverability.
6. For carpet refreshing, ensure the carpet glider is attached and move the mop over the carpet.
7. When finished, unplug the appliance and allow it to cool before emptying any remaining water and cleaning.

4.2. Using as a Handheld Steam Cleaner

1. Unplug the steam mop and ensure it is cool.
2. Press the release button to detach the handheld steam unit from the main body (refer to Figure 2.4).
3. Attach the desired accessory (e.g., round brush, slot nozzle, joint accessory, scraper) to the handheld unit using the accessory adapter if needed.
4. Fill the water tank if necessary (follow instructions in Section 3.3).
5. Plug in the handheld unit. Wait for the indicator light to show it's ready (approx. 25 seconds).
6. Direct the steam towards the surface to be cleaned. Use caution as steam is hot.
7. After use, unplug the unit and allow it to cool before detaching accessories and storing.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your steam mop.

1. **Cleaning Pads:** The sponge cloths can be machine washed with mild detergent. Do not use bleach or fabric softeners. Air dry only. Replace pads when they become worn or lose their cleaning effectiveness.
2. **Emptying Water Tank:** After each use, unplug the appliance and allow it to cool. Empty any remaining water from the tank.
3. **Cleaning the Exterior:** Wipe the exterior of the steam mop with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
4. **Descaling:** If you notice a decrease in steam production or mineral residue, descaling may be necessary.
 - Mix a solution of 1 part white vinegar to 2 parts water.
 - Pour the solution into the water tank.
 - Plug in the unit and allow it to heat up.
 - Run the unit until half of the solution is used, then unplug and let it sit for 30 minutes.

- Plug it back in and run until the tank is empty.
 - Rinse the tank thoroughly with fresh water and run two full tanks of fresh water through the unit to flush out any vinegar residue.
5. **Storage:** Store the steam mop in a cool, dry place. Wrap the power cord around the designated cord wraps on the handle (refer to Figure 2.2).

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam.	Water tank is empty. Appliance not plugged in or not powered on. Mineral buildup (scaling). Steam level set too low.	Fill the water tank. Ensure the power cord is securely plugged in and the unit is turned on. Perform descaling procedure (refer to Section 5.4). Increase the steam level setting.
Water leaking from the mop head.	Cleaning pad not properly attached or saturated. Mop head is not fully heated. Overfilling the water tank.	Ensure the cleaning pad is securely attached and not overly saturated. Allow the unit to fully heat up before use (indicator light ready). Do not overfill the water tank.
Mop not gliding smoothly.	Cleaning pad is dirty or worn. Carpet glider not attached for carpets.	Replace or clean the cleaning pad. Attach the carpet glider when cleaning carpets.

7. SPECIFICATIONS

Model Number	TSA5051
Power	1500 W
Water Tank Capacity	380 ml
Steam Ejection Rate	21 / 28 ml/min (3 levels)
Heat-up Time	Approx. 25 seconds
Power Supply	220-240 V AC, 50 Hz
Power Cord Length	5 m
Weight	3.0 kg (product), 4 kg (package)

Dimensions (assembled)	30 x 25 x 110 cm
-------------------------------	------------------

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Teesa website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Teesa customer service through their official channels.
