

Indesit IT60 732 S

Indesit IT60 732 S Double-Door Refrigerator Instruction Manual

Model: IT60 732 S

INTRODUCTION

Thank you for choosing an Indesit appliance. This instruction manual provides essential information for the safe and efficient use of your new Indesit IT60 732 S double-door refrigerator. Please read this manual carefully before installation and use, and keep it for future reference.

The Indesit IT60 732 S is a freestanding double-door refrigerator designed for optimal food preservation. It features a Fresh Space crisper drawer, LED lighting, humidity control, and a reversible door to adapt to your kitchen layout.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Ensure the appliance is properly grounded.
- Do not use electrical adapters or extension cords.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Keep ventilation openings clear of obstruction.
- Do not damage the refrigerant circuit.
- Only qualified personnel should perform repairs or maintenance.

SETUP AND INSTALLATION

Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Dispose of packaging responsibly. Check the appliance for any damage during transit. If damage is found, do not install or operate the refrigerator and contact your retailer.

Placement

Place the refrigerator on a firm, level floor away from direct sunlight, heat sources (such as ovens, radiators), and extreme cold. Ensure adequate air circulation around the appliance. Maintain a minimum distance of 10 cm (4 inches) from the back and sides to allow for proper ventilation.



Image: Indesit IT60 732 S refrigerator in a kitchen setting, demonstrating proper placement.

Leveling

Adjust the front leveling feet to ensure the refrigerator is stable and level. This prevents vibrations and ensures proper door closure.

Door Reversal

The doors of your Indesit IT60 732 S refrigerator are reversible. If you need to change the door opening direction, it is recommended to contact a qualified service technician to perform this procedure.

Electrical Connection

Connect the power cord to a dedicated, grounded electrical outlet. Ensure the voltage matches the appliance's requirements (50 Volt, as specified). Do not use multi-plugs or extension cords. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

Initial Operation

After plugging in, set the temperature control (if applicable) to a medium setting. Allow the refrigerator to run empty for at least 4-6 hours before loading it with food. This ensures the interior reaches the optimal temperature.

OPERATING INSTRUCTIONS

Temperature Control

The Indesit IT60 732 S features automatic temperature regulation. While there is no adjustable temperature control dial, the appliance is designed to maintain optimal temperatures for food storage. Avoid frequently opening the doors to maintain stable internal temperatures.

Fresh Space Crisper Drawer

The Fresh Space crisper drawer is located at the bottom of the refrigerator compartment. It is designed to maintain an ideal humidity level for storing fruits and vegetables, helping them stay fresh for longer.



Image: Close-up of the Fresh Space crisper drawer.

LED Lighting

The interior of the refrigerator is illuminated by energy-efficient LED lights. These lights provide clear visibility of all contents, making it easy to find items. LED lights are designed for long life and do not require frequent replacement.

Humidity Control

The refrigerator is equipped with a humidity control system to ensure optimal food preservation. This feature helps to reduce food waste by keeping items like leafy greens and certain fruits at their ideal moisture level.





Image: Interior view of the refrigerator, showing the arrangement of shelves and drawers.

Food Storage Tips

- Store cooked foods and dairy products on upper shelves.
- Raw meat and fish should be stored on the lowest shelf, in sealed containers, to prevent dripping onto other foods.
- Use the Fresh Space drawer for fruits and vegetables.
- Ensure all food is covered or sealed to prevent drying out and odor transfer.
- Do not place hot food directly into the refrigerator; allow it to cool first.

MAINTENANCE AND CLEANING

Cleaning the Interior

Unplug the refrigerator before cleaning. Clean the interior regularly with a solution of mild detergent and warm water. Rinse thoroughly and dry with a soft cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surfaces.

Cleaning the Exterior

Wipe the exterior surfaces with a soft cloth dampened with water and a mild detergent. For stainless steel surfaces, use a specialized stainless steel cleaner. Ensure the appliance is dry after cleaning.

Manual Defrosting

The freezer compartment of the Indesit IT60 732 S requires manual defrosting. When the ice layer reaches a thickness of about 5 mm, defrost the freezer. To defrost:

1. Unplug the refrigerator.
2. Remove all food items and store them in a cool place.
3. Leave the freezer door open to allow the ice to melt naturally. Place towels at the bottom to absorb water.
4. Once defrosted, clean and dry the interior thoroughly.
5. Plug the refrigerator back in and allow it to cool before returning food.

Door Seals

Regularly check and clean the door seals to ensure they are free from food debris and are sealing properly. A clean and intact seal helps maintain energy efficiency.

TROUBLESHOOTING


Before contacting customer service, check the following common issues:

Problem	Possible Cause	Solution
Refrigerator does not operate	No power supply; plug not inserted correctly; fuse blown.	Check power outlet; ensure plug is fully inserted; check household fuse box.
Refrigerator is not cooling sufficiently	Door not closed properly; too much food loaded; frequent door opening; appliance near heat source.	Ensure door is sealed; do not overload; minimize door openings; relocate appliance if necessary.

Problem	Possible Cause	Solution
Excessive noise	Appliance not level; contact with wall or other objects.	Adjust leveling feet; ensure clearance around the appliance.
Water on the floor	Drain hole blocked; defrost water overflowing.	Clear the drain hole; ensure proper defrosting procedure is followed.

If the problem persists after checking these points, please contact Indesit customer service.

SPECIFICATIONS

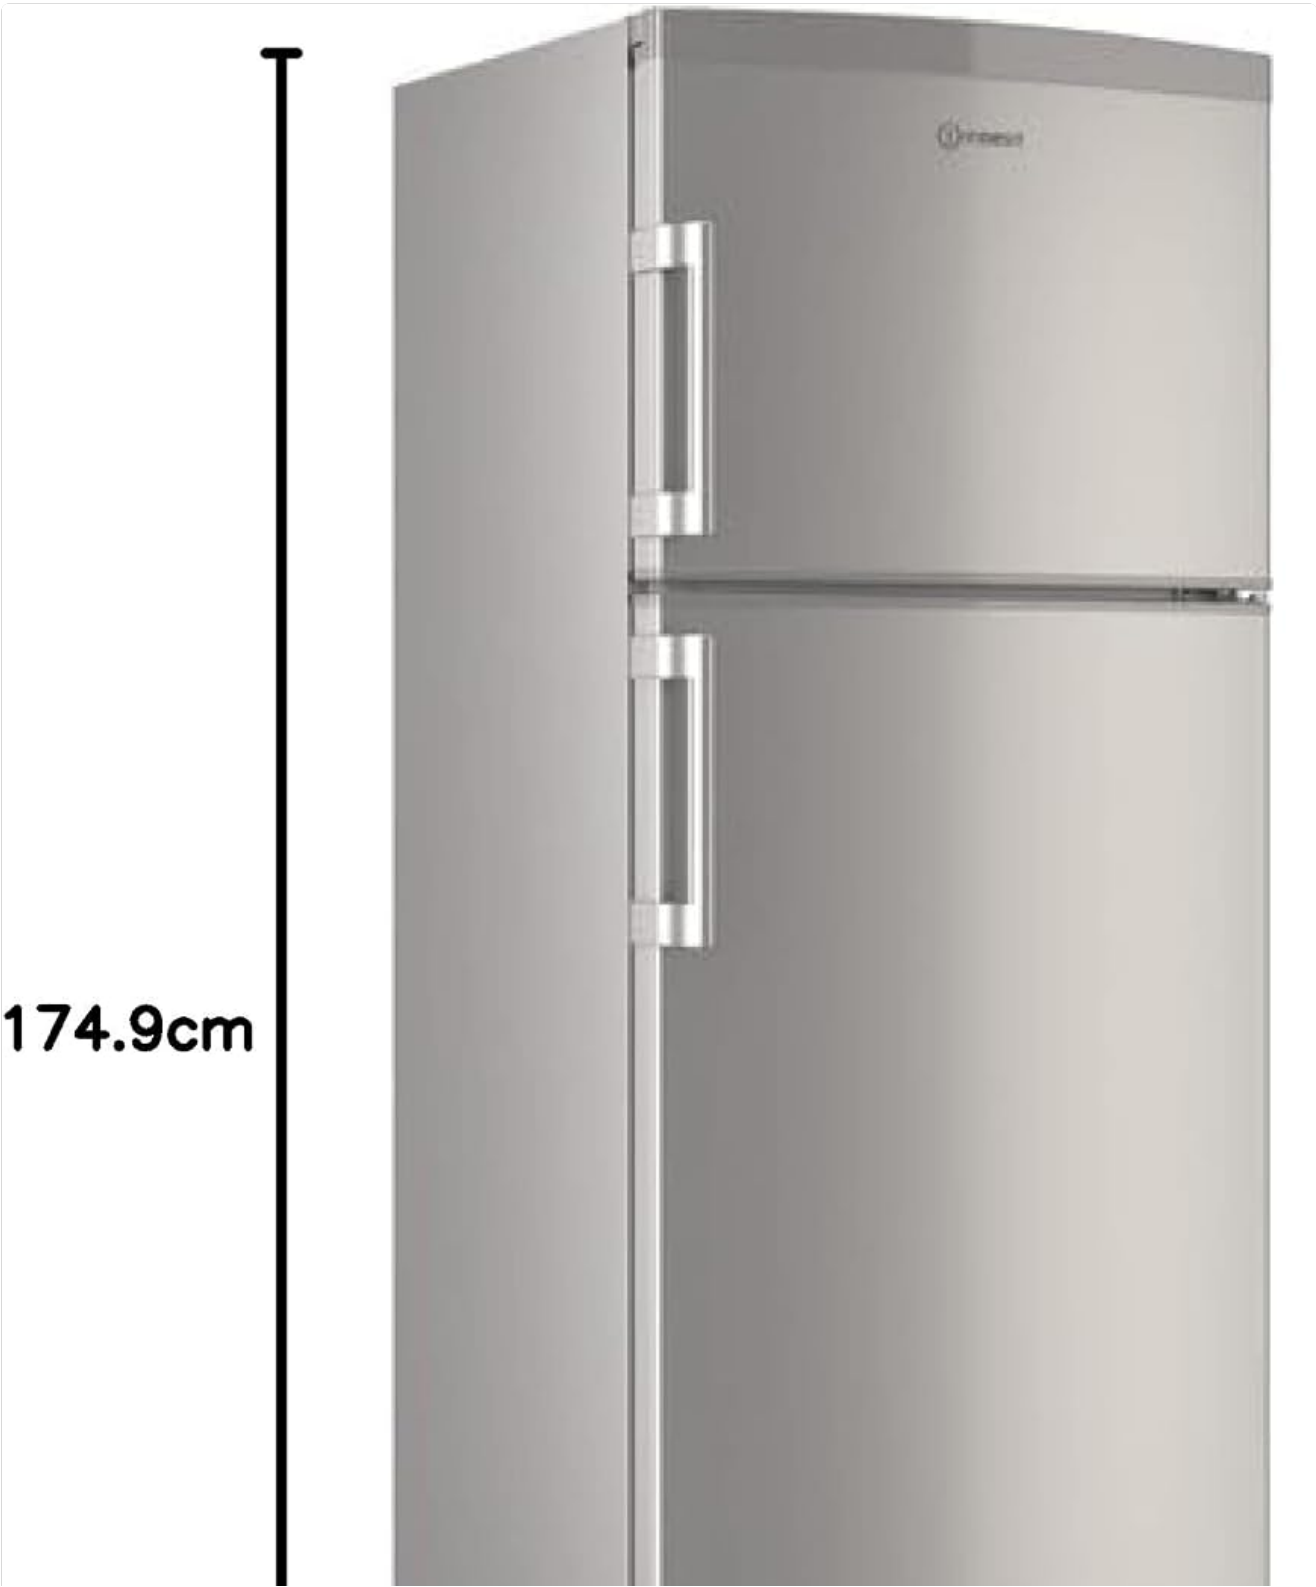

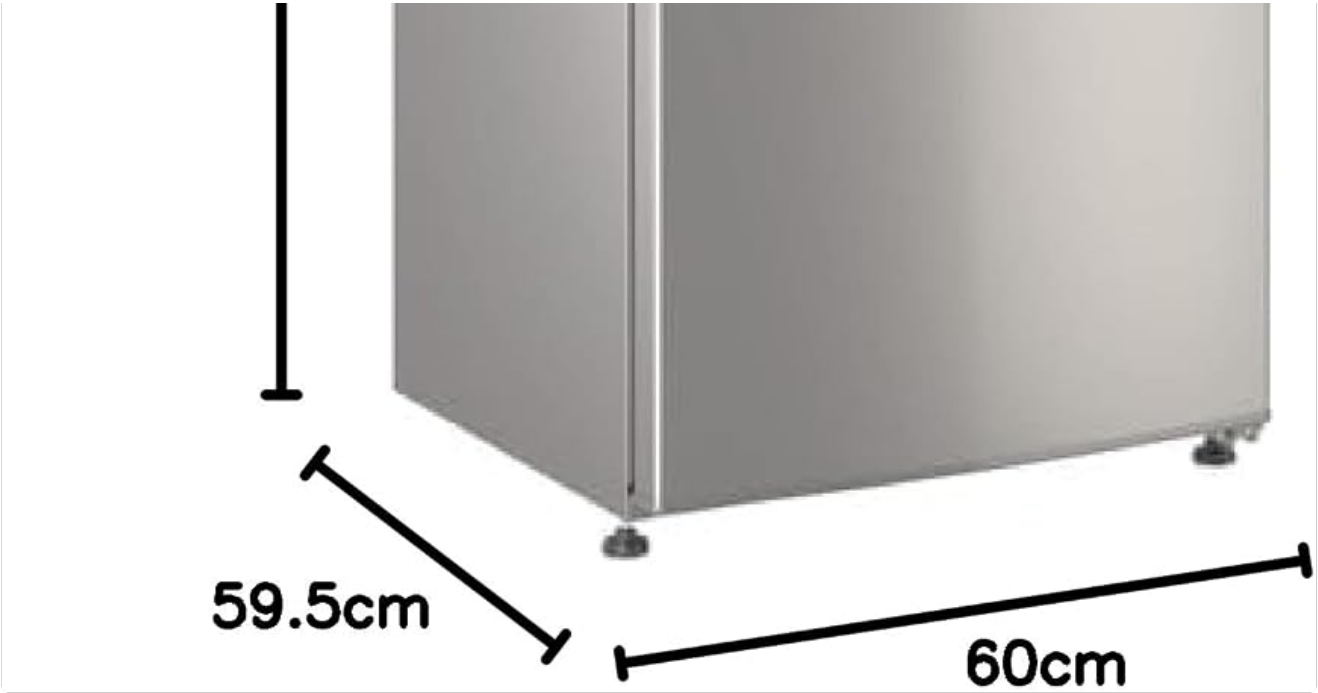


Image: Dimensions of the Indesit IT60 732 S refrigerator.

Feature	Detail
Model Name	IT60 732 S
Brand	Indesit
Type	Double Door Refrigerator
Installation Type	Freestanding
Dimensions (D x W x H)	59.5 cm x 60 cm x 174.9 cm
Total Capacity	316 Liters
Net Refrigerator Capacity	11.15 Cubic Feet (approx. 315 Liters)
Net Freezer Capacity	158 Liters
Color	Silver
Door Material	Stainless Steel
Number of Doors	2
Defrost System	Manual
Special Features	Fresh Space, Reversible Door, LED Lighting, Humidity Control
Adjustable Temperature Control	No
Voltage	50 Volt
Annual Energy Consumption	210 kWh/year
Weight	51 kg
Included Components	Power cord

WARRANTY INFORMATION

This Indesit IT60 732 S refrigerator comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. For full terms and conditions, please refer to the warranty card included with your appliance or visit the official Indesit website.

CUSTOMER SUPPORT

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer service. You can find contact details on the official Indesit website or in the documentation provided with your appliance.

For a detailed user manual in PDF format, you can download it from the following link [Indesit IT60 732 S User Manual \(PDF\)](#)