

[Manuals.plus](#) /

> [iWALK](#) /

> iWALK Portable Charger User Manual

## iWALK DBL4500NC

# iWALK Portable Charger User Manual

Model: DBL4500NC | Brand: iWALK

## INTRODUCTION

Thank you for choosing the iWALK Portable Charger. This compact and powerful 4,500mAh power bank is designed to provide fast and convenient charging for your USB-C compatible devices, including the latest iPhone 15/16 series and various Android smartphones. Please read this manual thoroughly to ensure proper use and maintenance of your device.

## SAFETY INFORMATION

- Do not expose the power bank to extreme temperatures, direct sunlight, or high humidity.
- Do not disassemble, modify, or attempt to repair the device.
- Keep out of reach of children.
- Avoid dropping or subjecting the device to strong impacts.
- Use only original or certified cables for charging the power bank and your devices.
- Dispose of the power bank responsibly according to local regulations.

## PACKAGE CONTENTS

Upon opening your iWALK Portable Charger package, you should find the following items:

- 1x iWALK 4,500 mAh Portable Power Bank
- 1x USB-C to USB-C Cable
- 1x User Manual

## PRODUCT OVERVIEW

The iWALK Portable Charger features a compact design with a built-in USB-C connector for direct plug-and-charge functionality. It also includes LED indicator lights to show the remaining battery level and a USB-C input port for recharging the power bank itself.



Image: The iWALK Portable Charger in baby blue, featuring its built-in USB-C connector plugged into the bottom of a smartphone. The charger is compact and designed for direct connection.



# iPhone 15 Portable Charger

Small and Lightweight with Fast Charging

Image: A hand holding the iWALK Portable Charger next to a lipstick, illustrating its small and lightweight design, comparable in size to a lipstick.

## SETUP

Before first use, it is recommended to fully charge your iWALK Portable Charger. Refer to the "Charging the Power Bank" section for detailed instructions.

## OPERATING INSTRUCTIONS

### Charging Your Device

1. Ensure your iWALK Portable Charger has sufficient charge. You can check the battery level by pressing the power button; the LED indicators will light up.
2. Carefully plug the built-in USB-C connector of the power bank directly into the USB-C charging port of your smartphone or compatible device.

3. The power bank will automatically begin charging your device. The LED indicators on the power bank will show its remaining charge.
4. Once your device is charged, or when you wish to stop charging, simply unplug the power bank from your device.



**20W PD**  
**Let's Fast Charge**

iPhone 15 Pro

0% → 30 Mins → 50%

\*Data is sourced from lab testing, actual results may vary.

Image: An iPhone 15 Pro being fast-charged by the iWALK Portable Charger, demonstrating 20W PD output and the ability to charge from 0% to 50% in 30 minutes.

### Checking Battery Level

To check the remaining battery level of your iWALK Portable Charger, briefly press the power button located on the side of the device. The LED indicator lights will illuminate, showing the approximate charge level:

- **Four LEDs:** 75-100% charge
- **Three LEDs:** 50-75% charge
- **Two LEDs:** 25-50% charge
- **One LED:** 0-25% charge (recharge soon)

## COMPATIBILITY

The iWALK Portable Charger is equipped with a built-in USB-C port, making it compatible with a wide range of devices. This includes, but is not limited to:

- **iPhone 16/15 Series:** iPhone 16 Pro Max, iPhone 16 Pro, iPhone 16 Plus, iPhone 16, iPhone 15 Pro Max, iPhone 15 Pro, iPhone 15 Plus, iPhone 15.
- **Android Phones:** Samsung Galaxy S25/S24/S23 series, Pixel, OnePlus, Huawei, and other USB-C enabled Android devices.
- **Other Devices:** iPad (USB-C models), AirPods (USB-C charging case), and other small electronic devices with a USB-C charging port.

*Note: This charger is not applicable for older iPhone models (iPhone 14, 13, 12, 11, XS, XR, X, 8, 7, 6, SE) that use a Lightning connector.*

# Built-In USB-C Connector

**Not Applicable** \* iPhone 14/iPhone 13/iPhone 12/iPhone 11  
/iPhone XS/iPhone XR/iPhone X/iPhone 8, 7, 6, SE

## iPhone 16/15 Series



Type-C / USB-C



iPhone 16 Pro Max / iPhone 16 Pro  
iPhone 16 Plus / iPhone 16



iPhone 15 Pro Max / iPhone 15 Pro  
iPhone 15 Plus / iPhone 15

## SAMSUNG



S23 Ultra/  
S23+/S23



S22 Ultra/  
S22+/S22



S21/  
S20+/S10



S9/S8



Note 10/9



Z Flip/Fold



Pixel8 Pro/8



Pixel7 Pro/7

## GOOGLE

iPad Pro/Air



Image: A detailed compatibility chart showing the iWALK Portable Charger's built-in USB-C connector and its compatibility with iPhone 16/15 series, various Samsung Galaxy models (S23, S22, S21, S20, S10, S9, S8, Note 10/9, Z Flip/Fold), Google Pixel phones (Pixel 8/8 Pro, Pixel 7/7 Pro), and iPad Pro/Air models.

## CHARGING THE POWER BANK

To recharge your iWALK Portable Charger:

1. Connect the provided USB-C to USB-C cable to the USB-C input port on the side of the power bank.
2. Connect the other end of the USB-C cable to a compatible USB-C wall adapter (not included) or a computer's USB-C port.
3. The LED indicators will flash to show the charging progress. Once fully charged, all four LEDs will remain solid.
4. Disconnect the cable once charging is complete.

The power bank supports high-speed 18W recharging.

## MAINTENANCE

- Clean the power bank with a soft, dry cloth. Do not use liquid cleaners or aerosols.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- If not used for extended periods, charge the power bank at least once every three months to maintain battery health.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Power bank not charging device.	Low battery on power bank; incorrect connection; incompatible device.	Recharge power bank; ensure secure connection; verify device compatibility (USB-C).
Power bank not recharging.	Faulty cable or adapter; power source issue.	Try a different USB-C cable and wall adapter; ensure power source is active.
Slow charging.	Device drawing less power; cable issue; power bank not fully charged.	Ensure device supports fast charging; use original cable; fully charge power bank.
LED indicators not working.	Device malfunction.	Contact customer support if troubleshooting steps do not resolve the issue.

## SPECIFICATIONS

Feature	Detail
Model Number	DBL4500NC
Battery Capacity	4,500 mAh
Output Power	20W Fast Charging (USB-C)
Input Power	18W Recharging (USB-C)
Product Dimensions	3.1 x 1 x 1.5 inches
Item Weight	6.4 ounces
Connector Type	USB Type C

Feature	Detail
Special Features	Fast Charging, LED Indicator Lights, Lightweight, Pocket Size, Short Circuit Protection

## WARRANTY AND SUPPORT

iWALK provides an 18-month after-sales service for this product. For any inquiries or support needs, please follow these steps:

1. Visit the iWALK Direct seller page on Amazon.
2. Click on the "Ask a Question" button located on the top right corner of the screen.
3. Alternatively, if you are on the product details page, click on the "seller ID" (iWALK Direct) to access their store page, then look for contact options.
4. Describe your problem in detail, including your order number for faster assistance.

The iWALK service team aims to provide a solution within 24 hours.

**18-Month After-sales service**

**1** Click on "seller ID" on the items details page

**2** Click on the "Ask a Question" button located on the top right come of the screen.

**3** Click on the "An Item for sale" button and then you can describe your problem to us.

**4** We will get back to you within **24 hours** and provide you with a perfect solution.\*\*\*In order for us to better solve the problem for you, please provide us with your "ordernumber" and **more details of the problem**.

Image: A graphic detailing the 18-month after-sales service process, showing steps to contact iWALK Direct through Amazon for support.