

LEBENLANG XXL 2400W (LBL8586)

LEBENLANG XXL 2400W Electric Grill Instruction Manual

Model: LBL8586

1. IMPORTANT SAFETY INSTRUCTIONS

Please read this instruction manual carefully before using the LEBENLANG XXL 2400W Electric Grill. Keep this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the grill is placed on a stable, heat-resistant surface.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep children and pets away from the grill during operation.
- Unplug the grill from the power outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not operate the grill with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Use only accessories recommended by the manufacturer.
- This appliance is suitable for both indoor and outdoor use. Ensure proper ventilation when used indoors.
- The integrated splash guard helps prevent grease splatters, but caution should still be exercised.

2. PRODUCT OVERVIEW

The LEBENLANG XXL 2400W Electric Grill features a versatile design for various grilling needs. It includes two independent cooking zones with separate temperature controls.

Key Components:

- **Reversible Grill Plates:** Two separate plates, one with a smooth surface and one with a ribbed surface, both featuring a high-quality non-stick coating.
- **Independent Temperature Controls:** Two separate adjustable regulators allow precise heat management for each plate, reaching up to 240°C quickly.
- **Integrated Fat Drain:** A central drainage system collects excess fat into a removable drip tray for healthier cooking and easier cleaning.

- **Splash Guard:** Integrated splash guards help contain splatters and reduce mess.
- **Insulated Handles:** For safe handling.



Exploded view of the LEBENLANG Electric Grill showing reversible grill plates, non-stick coating, adjustable temperature controls, oil drip tray, and splash guard.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or disposal.
2. **Clean:** Before first use, wash the grill plates, splash guard, and drip tray with warm soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the main grill unit on a flat, stable, and heat-resistant surface. Ensure there is adequate space around the grill for ventilation.
4. **Assemble:** Insert the clean grill plates into their respective positions on the main unit. Ensure the removable drip tray is correctly inserted into the central slot. Attach the splash guards to the sides of the grill plates.
5. **Power Connection:** Ensure the temperature control knobs are set to '0' (off) before plugging the power cord into a grounded electrical outlet (220V).

4. OPERATING INSTRUCTIONS

The LEBENLANG Electric Grill is designed for efficient and versatile cooking of various foods.

1. **Preheating:** Turn the desired temperature control knob(s) to the desired setting (1-6). The indicator light will illuminate, signaling that the grill is heating. Allow 5-10 minutes for the grill to reach the set temperature. The indicator light will turn off once the temperature is reached.
2. **Cooking:** Lightly brush the grill plates with cooking oil if desired. Place food directly onto the preheated grill plates. Cook according to your recipe or until desired doneness. The two independent zones allow you to cook different foods at different temperatures simultaneously.
3. **Temperature Adjustment:** Adjust the temperature knobs as needed during cooking.
4. **After Cooking:** Once cooking is complete, turn the temperature control knob(s) to '0' (off) and unplug the appliance from the power outlet. Allow the grill to cool completely before cleaning.

Cooking Examples:

- **Ribbed Plate:** Ideal for searing meats (steaks, chicken), fish (salmon), and vegetables (asparagus, corn on the cob) to achieve grill marks.
- **Smooth Plate:** Perfect for delicate foods, pancakes, eggs, sausages, or vegetables that require a flat cooking surface.

Minima manutenzione
grazie ai componenti lavabili in lavastoviglie



The LEBENLANG Electric Grill in operation, demonstrating cooking various foods on both the ribbed and smooth plates.



240°C

Grigliatura veloce e uniforme
& aromi di tostatura intensi

Close-up of food grilling on the ribbed plate, showing even heat distribution.



Grigliata rapida e uniforme & aromi di arrosto intensi

Another close-up of food grilling on the smooth plate, highlighting its versatility.

Product Video:

Official product video demonstrating the features and use of the LEBENLANG XXL 2400W Electric Grill, including setup, cooking, and cleaning.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grill.

1. **Cool Down:** Always ensure the grill is unplugged and completely cool before attempting to clean it.
2. **Remove Excess Grease:** Use a paper towel or a soft cloth to wipe away any excess grease or food residue from the grill plates and drip tray.
3. **Dishwasher Safe Parts:** The removable grill plates, drip tray, and splash guard are dishwasher safe for convenient cleaning.
4. **Hand Washing:** For hand washing, use warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reassembling or storing.

5. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers. Never immerse the main unit in water.
6. **Storage:** Store the clean and dry grill in a cool, dry place.



Conosciuto da

Haus & Garten Test
Die Testzeitschrift

Kaufkompass
DAS TESTPORTAL DES F.A.Z.-VERLAGS

ONLINE
FOCUS
UNSERE
UNTERNEHMENS
DARSTELLUNG
AUF FOCUS ONLINE

fit
FOR FUN
UNSERE
UNTERNEHMENS
DARSTELLUNG
AUF FIT FOR FUN

CHIP
UNSERE
UNTERNEHMENS
DARSTELLUNG
AUF CHIP

Removable grill plates and splash guard are dishwasher safe for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your LEBENLANG Electric Grill, refer to the following common problems and solutions:

- **Grill does not heat up:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the temperature control knob(s) are set to a heating position (not '0').
 - Verify that the power outlet is functioning by testing it with another appliance.
- **Uneven heating:**
 - Ensure the grill plates are properly seated on the heating elements.
 - Allow sufficient preheating time for the entire surface to reach temperature.

- **Excessive smoke:**
 - Ensure the drip tray is clean and empty before use.
 - Excess fat or marinades can cause smoke. Trim excess fat from meats and pat dry before grilling.
 - Ensure the grill is clean from previous cooking residues.

If the problem persists after checking these points, please contact customer support.

7. SPECIFICATIONS

Brand	LEBENLANG
Model	XXL 2400W (LBL8586)
Power	2400 Watts
Voltage	220 Volts
Dimensions (L x W x H)	52 cm x 36 cm x 10 cm
Weight	4.61 Kilograms
Material	Stainless Steel
Color	Silver / Black
Special Feature	Compact Design, Weather-Resistant
Components Included	Spatula, Splash Guard
Number of Settings	2 (Independent Temperature Controls)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for any warranty claims.