

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TUOHAITIME](#) /

› [TUOHAITIME Android 14 Tablet User Manual](#)

TUOHAITIME C30 PT Black

TUOHAITIME Android 14 Tablet User Manual

Model: C30 PT Black

1. INTRODUCTION

Welcome to the user manual for your new TUOHAITIME Android 14 Tablet. This 10.1-inch tablet features an Octa-Core CPU, 10GB RAM, 64GB internal storage expandable up to 512GB, a 1280x800 HD IPS touchscreen display, Wi-Fi 6, Bluetooth 5.0, dual cameras, and a 6000mAh battery. It is designed for both entertainment and productivity, offering a brilliant watching experience and robust performance. This manual provides essential information to help you set up, operate, maintain, and troubleshoot your device.



Image 1.1: The TUOHAITIME Android 14 Tablet, showcasing its sleek design and key features on the screen.

2. WHAT'S IN THE BOX

Upon opening your product package, please ensure all the following items are present:

- 2025 Newest Android 14 Tablet
- Drop-proof tablet case
- Screen protector (one pre-installed, one extra)
- USB Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your TUOHAITIME Android 14 Tablet.

3.1 Key Features

- **Display:** 10.1-inch HD IPS Touchscreen (1280x800 resolution) for a brilliant viewing experience.
- **Performance:** Powered by a 2.0GHz Octa-Core Processor, providing 40% faster processing speed.
- **Memory & Storage:** 10GB (4GB+6GB) RAM and 64GB internal storage, expandable up to 512GB via SD card.
- **Operating System:** Latest GMS Certified Android 14, offering optimized landscape experience, taskbar for multitasking, and enhanced privacy controls.
- **Battery:** Built-in 6000mAh large battery, providing 8-12 hours of usage on a full charge. Supports 18W fast charging.
- **Connectivity:** Newest AX Wi-Fi 6 module for incredible speeds and Bluetooth 5.0 for seamless pairing.
- **Cameras:** Dual cameras (5MP Front, 8MP Rear) to capture moments and facilitate video calls.
- **Kids Space & Parental Control:** Pre-installed Google Kids Space with educator-endorsed apps and user-friendly parental controls for a secure online environment.
- **Widevine L1 Support:** Compatible with Widevine L1 for high-quality streaming on platforms like Amazon Prime Video and Disney+.



Image 3.1: Visual representation of the tablet's core specifications and features.

10.1" Max Display

10.1inch Bigger than Bigger Anti-blue Display Astonishing performance. Incredibly advanced displays



10.1inch Fully Laminated


1280X800 HD

Eye-protection Display

Image 3.2: The 10.1-inch HD display, highlighting its visual quality and eye-protection features.

Storage & Expansion 1TB

The tablet has 10GB(4GB+6GB) RAM + 64GB ROM storage space and you can also add an SD card to expand the memory to 1TB
The large storage space allows you to never worry about insufficient memory

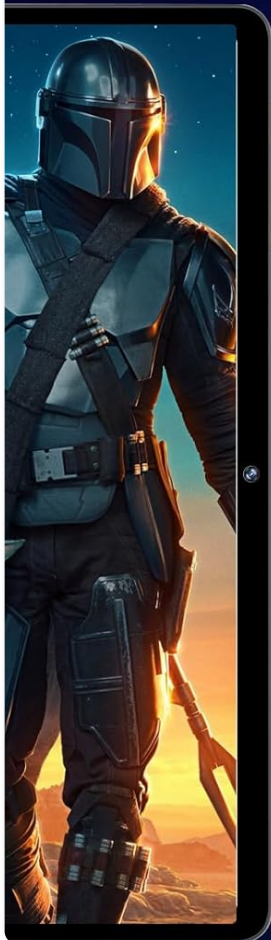

10GB(4+6)GB RAM



64GB ROM



Image 3.3: Overview of the tablet's ample storage and expansion options.



5MP
Front Camera



**Dual front & rear cameras,
capture every beautiful moment**



8MP
Rear Camera

Image 3.4: The tablet's dual cameras, suitable for capturing photos and video calls.

4. SETUP

4.1 Initial Charging

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's charging port and plug the other end into a compatible 10W or 18W charging adapter (not included). Avoid using 20W or 30W adapters. For the initial charge, allow at least 2 hours to ensure the battery is properly conditioned.

4.2 Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the TUOHAITIME logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power menu appears. Select "Power off" from the options.
- **To Restart:** From the power menu, select "Restart".

4.3 First-Time Setup Wizard

When you power on the tablet for the first time, you will be guided through a setup wizard. Follow the on-screen prompts to:

- Select your preferred language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one. This is essential for downloading apps from the Google Play Store.
- Set up screen lock (PIN, pattern, password, or face unlock).
- Review and accept terms and conditions.

4.4 Inserting a MicroSD Card (Optional)

To expand the tablet's storage up to 512GB, you can insert a MicroSD card. Locate the MicroSD card slot on the side of the tablet. Gently insert the MicroSD card with the metal contacts facing down until it clicks into place. Ensure the tablet is powered off before inserting or removing the card.

5. OPERATING YOUR TABLET

5.1 Basic Navigation

- **Tap:** Touch the screen once to select an item or open an app.
- **Touch & Hold:** Press and hold an item to access more options or move it.
- **Swipe:** Drag your finger across the screen to scroll or navigate between pages.
- **Pinch-to-Zoom:** Place two fingers on the screen and pinch them together or spread them apart to zoom in or out.

5.2 Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

5.3 Bluetooth Pairing

To pair with a Bluetooth device:

1. Ensure the Bluetooth device is in pairing mode.
2. On your tablet, go to **Settings > Connected devices > Connection preferences > Bluetooth**.
3. Turn on Bluetooth.
4. Tap **Pair new device** and select your device from the list.
5. Follow any on-screen prompts to complete pairing.

5.4 Google Kids Space & Parental Control

The tablet comes pre-installed with Google Kids Space, offering a safe and engaging environment for children aged 3 and above. Parental controls allow you to manage content, set screen time limits, and monitor activity.

- To access Kids Space, look for the dedicated icon on the home screen or in the app drawer.
- To configure parental controls, navigate to **Settings > Digital Wellbeing & parental controls**.

Android 14

2024 Newest and Stablest Android Tablet System

- Parallel View
- Optimized landscape experience
- Taskbar
- Convenient multitasking
- Privacy&Security
- Manage permissions
- Parental Control



Image 5.1: Android 14 interface demonstrating features like parallel view and parental controls.

5.5 Downloading Applications

As a GMS Certified tablet, you can download a wide variety of applications directly from the Google Play Store. Ensure you are signed in with your Google account.

1. Open the **Play Store** app.
2. Search for the desired app.
3. Tap **Install** to download and install the app.

5.6 Widevine L1 Support

Your tablet supports Widevine L1, allowing you to stream high-quality content from supported services like Amazon Prime Video and Disney+. Please note that some video distribution services (e.g., Netflix) may impose their own restrictions on compatible devices, which could result in Widevine L3 image quality.

6. MAINTENANCE

6.1 Battery Care

- Use only 10W or 18W charging adapters.
- Avoid completely draining the battery frequently.
- Do not expose the tablet to extreme temperatures.
- If storing the tablet for an extended period, charge it to about 50% before turning it off.

6000mAh Large & Powerful

All while enjoying all-day battery life.

| | | | |
|---|---|--|---|
|  |  |  |  |
| Standby 72H | Website Browse 14H | Music 10H | Video 8H |

6000mAh

Image 6.1: Battery capacity and estimated usage times for the 6000mAh battery.

6.2 Screen Care

Your tablet comes with a free screen protector (one pre-installed, one extra). To clean the screen, gently wipe it with a soft, lint-free cloth. Avoid using harsh chemicals or abrasive materials.

6.3 Software Updates

Periodically check for system updates to ensure your tablet has the latest features and security patches. Go to **Settings** >

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common troubleshooting steps:

- **Tablet is unresponsive or frozen:** Press and hold the Power button for about 10-15 seconds to force a restart.
- **Slow performance or lag:**
 - Close unused applications running in the background.
 - Clear cache data for frequently used apps (Settings > Apps > [App Name] > Storage & cache > Clear cache).
 - Ensure you have sufficient free storage space. Consider uninstalling unused apps or moving files to an SD card.
 - Restart the tablet regularly.
- **Wi-Fi connection issues:**
 - Toggle Wi-Fi off and on in Settings.
 - Restart your Wi-Fi router.
 - Forget the network and reconnect (Settings > Wi-Fi > [Network Name] > Forget > Reconnect).
- **Battery drains quickly:**
 - Reduce screen brightness.
 - Disable Wi-Fi, Bluetooth, and GPS when not in use.
 - Close background apps.
 - Check battery usage in Settings to identify power-hungry apps.
- **Touchscreen not responding correctly:**
 - Ensure the screen is clean and free of debris.
 - Remove any screen protectors that might be interfering.
 - Restart the tablet.
 - If the issue persists, a factory reset might be necessary (backup your data first).

8. SPECIFICATIONS

| Feature | Specification |
|---------------------|--|
| Brand | TUOHAITIME |
| Model Name | Android 14 Tablet 2025 Newest (C30 PT Black) |
| Operating System | Android 14 |
| Screen Display Size | 10.1 Inches |
| Screen Resolution | 1280 x 800 pixels (HD IPS) |
| Processor | 2 GHz Octa-Core (Allwinner) |
| RAM | 10GB (4GB+6GB) |

| Feature | Specification |
|-------------------------|---|
| Flash Memory Size | 64 GB |
| Expandable Storage | Up to 512GB (MicroSD) |
| Rear Camera Resolution | 8 MP |
| Front Camera Resolution | 5 MP |
| Wireless Type | 802.11b, 802.11a, 802.11ac, 802.11g (Wi-Fi 6) |
| Bluetooth | Bluetooth 5.0 |
| Average Battery Life | 12 Hours (6000mAh) |
| Item Weight | 1.1 pounds |
| Product Dimensions | 10 x 4 x 0.35 inches |

9. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your TUOHAITIME Android 14 Tablet, please contact the seller or manufacturer directly through the platform where you purchased the device. Refer to your purchase documentation for specific warranty terms and contact information.

You can also visit the official TUOHAITIME store on Amazon for more information and support: [TUOHAITIME Store](#)