

Lenco MC-660

Lenco MC-660 Hi-Fi System User Manual

Turntable, Bluetooth, Internet Radio, DAB+, CD, MP3 Music System

INTRODUCTION

Thank you for purchasing the Lenco MC-660 Hi-Fi System. This comprehensive music system combines a classic turntable with modern connectivity options, including Bluetooth, Internet Radio, DAB+, CD, and MP3 playback. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the product and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of electric shock, fire, or damage to the unit, please observe the following safety precautions:

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this appliance during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Lenco MC-660 Main Unit
- 2 x Stereo Speakers
- Remote Control
- Power Adapter
- FM/DAB+ Antenna
- User Manual (this document)

PRODUCT OVERVIEW

The Lenco MC-660 is a versatile audio system designed for various listening experiences. It features a top-loading turntable, a front-loading CD player, a digital display for radio and internet functions, and multiple input/output options.



Figure 1: Lenco MC-660 Hi-Fi System. This image shows the complete system, including the central unit with a turntable on top, two wooden-cased speakers on either side, and a remote control to the right. The main unit features a silver finish with a display screen, control buttons, and a large volume knob.

Main Components:

- **Turntable:** For playing vinyl records. Includes a dust cover, platter, and tonearm.
- **Main Unit:** Houses the CD player, radio tuner, amplifier, and control interface.
- **Speakers:** Two external speakers for stereo sound output.
- **Remote Control:** For convenient operation from a distance.

SETUP

1. Unpacking and Placement:

- Carefully remove all components from the packaging.
- Place the main unit and speakers on a stable, flat surface, away from direct sunlight, heat sources, and excessive dust or moisture.
- Ensure adequate ventilation around the unit.

2. Speaker Connection:

- Connect the speaker wires from the main unit's speaker terminals to the corresponding terminals on each speaker. Ensure correct polarity (+ to + and - to -) for optimal sound.

3. Antenna Connection:

- Connect the supplied FM/DAB+ antenna to the antenna input on the rear of the main unit. Extend the antenna fully

for best reception.

4. Power Connection:

- Connect the power adapter to the DC IN port on the rear of the main unit.
- Plug the power adapter into a suitable wall outlet.

5. Initial Power On:

- Press the Power button on the unit or remote control to turn on the system.
- Follow any on-screen prompts for initial setup, such as language selection and network configuration for Internet Radio.

OPERATING INSTRUCTIONS

General Operation:

- **Power On/Off:** Press the **POWER** button.
- **Volume Control:** Rotate the **VOLUME** knob or use the **VOL+/-** buttons on the remote.
- **Source Selection:** Press the **MODE** or **SOURCE** button to cycle through Turntable, CD, DAB+, FM, Internet Radio, Bluetooth, AUX, and USB modes.

Turntable Operation:

1. Open the dust cover.
2. Place a vinyl record on the platter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the speed selector switch.
4. Release the tonearm lock.
5. Gently lift the tonearm using the cueing lever and position the stylus over the desired track on the record.
6. Lower the tonearm slowly using the cueing lever. The record will begin to play.
7. At the end of the record, the tonearm may return automatically (if auto-return feature is present) or you may need to manually lift and return it to the tonearm rest.

CD Player Operation:

1. Press the **CD** button to select CD mode.
2. Press the **OPEN/CLOSE** button to open the CD tray.
3. Place a CD with the label side facing up into the tray.
4. Press **OPEN/CLOSE** again to close the tray. The CD will load and begin playing automatically.
5. Use **PLAY/PAUSE**, **STOP**, **SKIP FORWARD/BACKWARD** buttons for playback control.

Radio Operation (DAB+/FM):

1. Press the **DAB+** or **FM** button to select the desired radio mode.
2. For DAB+, the system will perform an auto-scan for available stations on first use.
3. For FM, use the **TUNE+/-** buttons to manually tune or press and hold for auto-scan.
4. To save a preset, tune to the desired station, then press and hold the **PRESET** button, select a preset number, and press **ENTER**.

Bluetooth Operation:

1. Press the **BLUETOOTH** button to select Bluetooth mode. The display will show "Pairing" or "Waiting for connection".

2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for "Lenco MC-660" in your device's Bluetooth list and select it to pair.
4. Once paired, you can play audio from your device through the Lenco MC-660 system.

Internet Radio Operation:

1. Ensure the unit is connected to your Wi-Fi network (configured during initial setup or via settings menu).
2. Press the **INTERNET RADIO** button.
3. Use the navigation buttons to browse stations by genre, location, or search for specific stations.
4. Press **ENTER** to select and play a station.

USB/MP3 Playback:

1. Insert a USB flash drive containing MP3 files into the USB port on the front panel.
2. Select **USB** mode. The system will automatically detect and begin playing MP3 files.
3. Use playback controls (**PLAY/PAUSE**, **SKIP**) to navigate your music.

MAINTENANCE

Cleaning the Unit:

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For stubborn marks, lightly dampen the cloth with water. Do not use abrasive cleaners, waxes, or solvents.

Turntable and Stylus Care:

- Keep the dust cover closed when not in use to prevent dust accumulation on the platter and stylus.
- Clean the stylus gently with a soft brush designed for stylus cleaning, brushing from back to front.
- Replace the stylus approximately every 300-500 hours of playback, or if you notice a degradation in sound quality.

CD Player Care:

- Handle CDs by their edges to avoid fingerprints and scratches.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Ensure power cord is securely plugged in; Try a different outlet
No sound from speakers	Volume too low; Speakers not connected; Incorrect source selected	Increase volume; Check speaker connections; Select correct input source
Turntable sound distorted/skipping	Dirty or worn stylus; Dirty record; Unit not level	Clean or replace stylus; Clean record; Place unit on a level surface
CD not playing	CD inserted incorrectly; CD scratched/dirty; Incorrect mode	Re-insert CD correctly; Clean or replace CD; Select CD mode

Problem	Possible Cause	Solution
Poor radio reception	Antenna not extended; Weak signal	Extend and adjust antenna; Try repositioning the unit
Bluetooth pairing failure	Device too far; Bluetooth not enabled on device; Unit not in pairing mode	Move device closer; Enable Bluetooth; Ensure unit is in Bluetooth pairing mode

SPECIFICATIONS

Brand	Lenco
Model	MC-660
Power Supply	AC 100-240V ~ 50/60Hz (via adapter)
Power Consumption	[Insert typical power consumption, e.g., 30W]
Turntable Speeds	33 1/3, 45, 78 RPM
Bluetooth Version	[Insert Bluetooth version, e.g., 5.0]
Radio Tuner	DAB+, FM, Internet Radio
CD Compatibility	CD, CD-R/RW, MP3-CD
USB Playback	MP3 format
Audio Output	Stereo Speaker Output
Dimensions (Main Unit)	[Insert dimensions, e.g., 350 x 200 x 300 mm]
Dimensions (Speakers)	[Insert dimensions, e.g., 150 x 200 x 250 mm each]
Weight	[Insert weight, e.g., 8 kg]

Note: Specifications are subject to change without notice.

WARRANTY AND SUPPORT

Lenco products are designed and manufactured to the highest quality standards. This product is covered by a manufacturer's warranty from the date of purchase. Please refer to the warranty card included in your package for specific terms and conditions, or visit the official Lenco website for detailed warranty information.

For technical support, troubleshooting assistance, or spare parts, please contact Lenco customer service. Contact details can typically be found on the Lenco website or on the warranty card.

- **Online Support:** Visit [www.lenco.com/support](#) (example URL)
- **Email Support:** [Insert Lenco support email, if available]
- **Phone Support:** [Insert Lenco support phone number, if available]

When contacting support, please have your product model number (MC-660) and purchase date ready.





[\[pdf\]](#) User Manual

hp MC 460 660 manual v7 0 NL EN DE FR ES IT DK SE Lenco 460BK kopen Nu in de officiële Webshop b61021a8c1455484bbc6c23b0de57b7fe008ae74 cdn maxx nl |||

Model: MC-460 / **MC-660** USER MANUAL Hifi set with internet, DAB , FM radio, CD player and turntable HANDLEIDING Hifi-set met internet, DAB , FM-radio, cd-speler en platenspeler BEDIENUNGSANLEITUNG HiFi-Anlage mit Internet-, DAB - und FM-Radio, CD-Player und Plattenspieler MODE D EMPLOI Chane Hifi ave...
lang:en score:27 filesize: 1.89 M page_count: 260 document date: 2023-09-06



[\[pdf\]](#) User Manual

hp 9e0b69ea470623790999e39d4502bccb0d15b88c MC 460 660 manual v8 0 NL EN DE FR ES IT DK SE cdn maxx nl |||

Model: MC-460 / **MC-660** USER MANUAL Hifi set with internet, DAB , FM radio, CD player and turntable HANDLEIDING Hifi-set met internet, DAB , FM-radio, cd-speler en platenspeler BEDIENUNGSANLEITUNG HiFi-Anlage mit Internet-, DAB - und FM-Radio, CD-Player und Plattenspieler MODE D EMPLOI Chane Hifi ave...
lang:en score:24 filesize: 1.93 M page_count: 252 document date: 2023-12-14