#### Manuals+

Q & A | Deep Search | Upload

#### **Comfee CDWPF1201PS**

# **COMFEE' CDWPF1201PS Dishwasher User Manual**

Model: CDWPF1201PS

# 1. Introduction

Thank you for choosing the COMFEE' CDWPF1201PS Freestanding Dishwasher. This appliance is designed to provide efficient and convenient dishwashing for your home. This manual contains important information on the installation, operation, and maintenance of your dishwasher. Please read it thoroughly before using the appliance to ensure safe and optimal performance.



Front view of the COMFEE' CDWPF1201PS Freestanding Dishwasher, showcasing its stainless steel finish and control panel.

#### 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons. Keep this manual for future reference.

- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when it is operating.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.
- Load sharp items so that they are not likely to damage the door seal or interior.

#### 3. SETUP AND INSTALLATION

The COMFEE' CDWPF1201PS is a freestanding dishwasher, but it can also be integrated into your kitchen cabinetry. Ensure proper water and electrical connections are made by a qualified professional.

#### **Dimensions and Placement**

Height: 84.5 cmWidth: 59.8 cmDepth: 60 cmWeight: 42 kg

Allow adequate space around the appliance for ventilation and ease of access for maintenance.



This diagram illustrates the two installation options for the dishwasher: freestanding and built-in, along with their respective dimensions for proper fitting in your kitchen space.

#### **Water and Electrical Connections**

Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. The dishwasher requires a 220 Volt electrical supply.

#### 4. OPERATING INSTRUCTIONS

Your COMFEE' dishwasher is equipped with various programs and features to ensure your dishes are perfectly clean.

#### **Loading the Dishwasher**

This dishwasher has a capacity of 12 place settings. Arrange dishes to allow water to reach all surfaces. The flexible baskets and removable cutlery basket provide ample space for various items, including large pots and pans.

# 2 Options d'Installation





An interior view of the dishwasher, demonstrating its 12 place setting capacity with various dishes, bowls, and cutlery loaded efficiently.



This image highlights the flexible loading options within the dishwasher, including inclined shelves for cups, versatile shelves for various items, a dedicated cutlery basket, and optimized space for larger articles like baking trays.

# **Wash Programs**

Select the appropriate program based on the soil level of your dishes.

- Auto: Automatically adjusts wash cycle based on soil level.
- Intensive: For heavily soiled dishes and pots.
- Universal: Standard program for daily use.
- ECO: Energy and water-efficient program for normal soiled dishes.
- Glass: Gentle wash for delicate glassware.
- Rapid (30 minutes): Quick wash for lightly soiled dishes when you are in a hurry.
- Soak: Pre-wash cycle for loosening dried-on food.



The control panel of the dishwasher displaying the six available wash programs: Auto, Intensive, Universal, ECO, Glass, Rapid (30 minutes), and Soak, allowing users to choose the best cycle for their needs.

#### **Special Functions**

- Extra Dry Function: Provides thorough drying for all items (except Rapid and Self-cleaning cycles).
- Half-Load Function: Ideal for smaller loads, saving water and energy.
- Delayed Start: Allows you to postpone the start of the wash cycle by 3, 6, or 9 hours.

# 5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

# **Cleaning the Filters**

The filter system prevents larger food particles from entering the pump. Clean the filters regularly to maintain

optimal washing performance. Refer to the detailed instructions in the included user manual for filter removal and cleaning.

# **Adding Salt and Rinse Aid**

Check the salt and rinse aid indicators regularly. Refill as needed to ensure effective cleaning and drying results, especially in areas with hard water.

# **Exterior and Interior Cleaning**

Wipe the exterior with a damp cloth. Clean the interior with a dishwasher cleaner periodically to prevent grease and limescale buildup.

# 6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, incorrect program.	Reload dishes correctly, clean spray arm nozzles, use adequate detergent, select appropriate program.
Dishes not dry	No rinse aid, rinse aid dispenser empty, selected program without drying, plastic items.	Refill rinse aid, ensure Extra Dry function is active, note that plastic items dry less effectively.
Dishwasher not starting	Door not closed properly, power supply issue, delayed start active.	Ensure door is latched, check power connection and circuit breaker, cancel delayed start.
Unusual noise	Items hitting spray arm, foreign object in pump.	Rearrange dishes, check and remove any foreign objects from the filter area.

# 7. SPECIFICATIONS

Detailed technical specifications for the COMFEE' CDWPF1201PS Dishwasher:

Model Name: CDWPF1201PS
Type: Freestanding Dishwasher
Capacity: 12 Place Settings

• Dimensions (L x W x H): 60 x 59.8 x 84.5 cm

Weight: 42 kgNoise Level: 49 dB

• Energy Efficiency Class: E

Annual Energy Consumption: 92 kWh per 100 cycles

• Water Consumption (ECO program): 11.0 Liters per cycle

Control Type: Push-buttonMaterial: Stainless Steel

• Included Components: User Manual

# Fiche d'information sur le produit (EN60436)

Nom de fournisseur ou marque commerciale : COMFEE

Adresse du fournisseur (b): Midea Electrics France 253 Rue Saint Honore, 75001 Paris

Identifiant du modèle : CDWPF1201PW, CDWPF1201PB, CDWPF1201PS

#### Paramètres généraux du produit :

Paramètre	Valeur	Paramètre	Valeur	
			Hauteur	85
Capacité nominale (°) (ps)	12	Dimensions en cm	Largeur	60
			Profondeur	60
EEI ( <sup>a</sup> )	55,9	Classe d'efficacité énergétique (ª)	E (°)	
Indice de performance de nettoyage (°)	1,125	Indice de performance de séchage (ª)	1,065	
Consommation d'électricité en kWh [par cycle], basée sur le programme économie avec remplissage d'eau froide. La consommation réelle d'électricité dépend de la façon dont l'appareil est utilisé.	0,923	Consommation d'eau en litres [par cycle], basée sur le programme économie. La consommation d'eau réelle dépend de l'utilisation de l'appareil et de la dureté de l'eau.	11,0	
Durée du programme (ª) (h:min)	3:50	Туре	Autonome	
Émissions de bruit aérien (ª) (dB(A) re 1 pW)	47	Classe d'émission de bruit acoustique aérien (ª)	C (°)	
Mode Arrêt (W)	N/A	Mode Veille (W)	0,49	
Démarrage différé (w) (si applicable)	1,00	Veille en réseau (W) (si applicable)	N/A	

Durée minimale de la garantie offerte par le fournisseur (b): Durée 24 mois

#### Informations complémentaires :

Lien internet vers le site du fournisseur, où se trouvent les informations du point 6 de l'annexe II du règlement de la Commission (UE) 2019/2022 (¹) (b) : https://www.feelcomfee.com/global

- (a) pour le programme économie.
- (b) les modifications apportées à ces éléments ne sont pas considérées comme pertinentes aux fins de l'article 4, paragraphe 4, du règlement (UE) 2017/1369.
- (c) si la base de données produit génère automatiquement le contenu définitif de cette cellule, le fournisseur ne doit pas saisir ces données.
- (1) Règlement (UE) 2019/2022 de la Commission du 1er octobre 2019 établissant des exigences d'éco-conception applicables aux lave-vaisselle domestiques conformément à la directive 2009/125/CE du Parlement européen et du Conseil modifiant le règlement (CE) N°1275/2008 de la Commission et abrogeant le règlement (UE) N°1016/2010 de la Commission (voir page 267 du présent Journal officiel).

This image displays the energy label and a detailed specification table for the dishwasher, providing information on energy consumption, noise level, and other technical data.

#### 8. WARRANTY AND SUPPORT

The COMFEE' CDWPF1201PS Dishwasher comes with a **2-year manufacturer's warranty**. For warranty claims, technical support, or spare parts information, please refer to the contact details provided in your purchase documentation or visit the official Comfee website.

Please retain your proof of purchase for warranty purposes.

© 2024 Comfee. All rights reserved.

#### Documents - Comfee - CDWPF1201PS



#### [pdf] Instructions

COMFEE CDWPF1201PS Lave vaisselle Pose Libre 60 cm 12 couverts départ différé fonction demi charge paniers flexibles Acier Inoxydable 49 dB Commande Bouton Amazon fr Cuisine et Maison C1hMpRRZC0L m media amazon images I |||

1 2 A A 1.: PANT ONE BLACK C 2. A5 3. B 4. QMWD-J03.09 ... 1 2 Lave-vaisselle Manuel d instructions PARTIE I: Version gnrique CDWPF1201PW CDWPF1201PB CDWPF1201PS Veuillez lire attentivement ce manuel avant d utiliser le lave-vaisselle. Conservez ce m...

lang:fr score:26 filesize: 6.36 M page\_count: 91 document date: 2024-10-19