



Manuals.plus /

› iceagle /

› iceagle Dual Air Fryer 11 Quart Instruction Manual

iceagle AF11001F-UL

iceagle Dual Air Fryer 11 Quart Instruction Manual

Model: AF11001F-UL

INTRODUCTION

Thank you for choosing the iceagle Dual Air Fryer. This appliance is designed to provide a versatile and efficient cooking experience, allowing you to prepare a variety of delicious meals with less oil. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, level, heat-resistant surface.
- Do not block any ventilation openings.

WHAT'S INCLUDED

Your iceagle Dual Air Fryer package includes the following components:

- iceagle Dual Air Fryer Main Unit
- 2 x Frying Baskets
- 2 x Crisper Plates (removable grates)
- Instruction Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your iceagle Dual Air Fryer:



Image: Control panel of the iceagle Dual Air Fryer, highlighting the Sync Key, Shake Key, Dual Cook Key, and the Time/Temperature Setting Knob for precise adjustments.

- **Control Panel:** Digital display with touch controls for various functions.

- **Time/Temperature Setting Knob:** A precise rotary knob for adjusting cooking time and temperature.
- **Dual Baskets:** Two independent frying baskets for cooking different foods simultaneously.
- **Sync Key:** Ensures both baskets finish cooking at the same time, even with different settings.
- **Shake Key:** Reminds you to shake the baskets for even cooking.
- **Dual Cook Key:** Allows both baskets to cook with the same settings.
- **Air Vents:** Located at the rear of the unit for proper airflow.



Image: The iceagle Dual Air Fryer with its two independent baskets extended, showcasing its dual cooking capability with various foods.

SETUP AND FIRST USE

-
1. **Unpacking:** Carefully remove all packaging materials and promotional labels from the air fryer.
 2. **Cleaning:** Wash the frying baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
 3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of clear space around the unit.
 4. **Pre-heating (Optional):** For the first use, it is recommended to run the air fryer for about 10-15 minutes at 350°F (175°C) without food to eliminate any manufacturing odors. A slight smell may be present, which is normal and will dissipate.
 5. **Insert Baskets:** Ensure the crisper plates are properly inserted into the frying baskets, and then slide the baskets firmly into the main unit until they click into place.
 6. **Power Connection:** Plug the power cord into a grounded wall outlet.

OPERATING INSTRUCTIONS

The iceagle Dual Air Fryer offers 6 versatile cooking functions and intuitive controls.

Basic Operation

1. **Power On:** Plug in the air fryer. The display will light up.
2. **Select Basket:** Press the 'L' (Left) or 'R' (Right) button to select the basket you wish to operate.
3. **Adjust Settings:** Use the Time/Temperature Setting Knob to adjust the temperature (95°F - 400°F) and cooking time (up to 60 minutes). Press the knob to switch between time and temperature adjustment.
4. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
5. **Pause/Resume:** Press the Start/Pause button during cooking to pause. Press again to resume.
6. **End Cooking:** The air fryer will beep when the cooking time is complete. Carefully pull out the baskets.

6-in-1 Cooking Functions

The air fryer comes with preset functions for common cooking methods:

Versatile 6 Cooking Functions

Includes 6 cooking programs: Air Fry, Roast, Broil, Reheat, Bake, and Dehydrate



Image: The Iceagle Dual Air Fryer's control panel displaying the six versatile cooking functions: Air Fry, Roast, Broil, Reheat, Bake, and Dehydrate.

- **Air Fry:** For crispy results with little to no oil.
- **Roast:** Ideal for meats and vegetables.
- **Broil:** For browning and crisping the top layer of food.
- **Reheat:** Quickly warms up leftovers.
- **Bake:** Perfect for cakes, pastries, and other baked goods.
- **Dehydrate:** For making dried fruits, jerky, and more.

To use a preset function, select the basket, then press the corresponding function button on the control panel. The default time and temperature will appear, which can be adjusted using the knob.

Dual Cooking Functions

- **Sync Function:**

Allows two different foods with different cooking times and temperatures to finish simultaneously. Set the desired time and temperature for each basket independently. Press the 'Sync' button, then press Start. The air fryer will automatically adjust

the start time for the basket with the shorter cooking duration.

- **Dual Cook Function:**

Cook two different foods with the exact same settings. Set the desired time and temperature for one basket. Press the 'Dual Cook' button. The settings will be mirrored to the other basket. Press Start to begin cooking both simultaneously.

Helpful Tips

- For best results, preheat the air fryer for 3-5 minutes before adding food.
- Shake the baskets halfway through cooking for even browning, especially for smaller items like fries or chicken wings. The 'Shake' reminder will appear on the display.
- Do not overfill the baskets. Overfilling can prevent food from cooking evenly and becoming crispy.
- Use a meat thermometer to ensure meats are cooked to a safe internal temperature.

Official Product Video

Your browser does not support the video tag.

Video: An official demonstration of the iceagle Dual Air Fryer 11 Quart, showcasing its features, cooking capabilities, and ease of use. This video highlights the dual baskets, precise controls, and various cooking functions.

CARE AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your iceagle Dual Air Fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.

2. **Cleaning Baskets and Crisper Plates:**

The frying baskets and crisper plates feature a non-stick coating and are dishwasher-safe. For manual cleaning, wash them with hot water, dish soap, and a non-abrasive sponge. Do not use metal utensils or abrasive cleaning materials, as they may damage the non-stick coating.

Easy to Clean

The frying baskets are non-stick coating and dishwasher-safe.



Image: The air fryer baskets and crisper plates are shown being placed into a dishwasher, illustrating their dishwasher-safe design for easy cleaning.

3. **Cleaning the Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Never immerse the main unit in water or any other liquid.
4. **Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. If food residue is stuck to the heating element, gently remove it with a soft brush.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter issues with your iceagle Dual Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	The appliance is not plugged in. The power outlet is not working. The basket is not inserted correctly.	Plug the power cord into a grounded wall outlet. Check the power outlet by plugging in another appliance. Ensure the basket is fully pushed into the main unit until it clicks.
Food is not cooked evenly.	Basket is overfilled. Food items are stacked. Temperature or time settings are incorrect.	Do not overfill the basket. Cook in smaller batches. Shake the basket halfway through cooking. Adjust temperature and time according to recipe or food type.
Food is not crispy.	Not enough oil (for certain foods). Moisture content in food.	Lightly brush or spray food with oil for crispier results. Pat food dry before air frying.
White smoke coming from the appliance.	Grease residue from previous use. High fat content food.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, consider draining excess fat during cooking or using parchment paper.
Unusual odor during first use.	Manufacturing residue.	This is normal. Run the air fryer empty for 10-15 minutes before first use to burn off any residue. Ensure good ventilation.

SPECIFICATIONS

Technical specifications for the iceagle Dual Air Fryer 11 Quart:

Feature	Detail
Brand	iceagle
Model Name	AirMax (AF11001F-UL)
Capacity	11 Quarts (5.5 Quarts per basket)
Product Dimensions	13.77"D x 14.96"W x 11.81"H
Color	Black
Material	Plastic, Aluminum (Inner)
Wattage	1700 Watts
Voltage	120 Volts
Temperature Range	95°F - 400°F
Control Method	Touch, Hand Control (Knob)
Special Features	Dual Zone, Temperature Control, Timer, Automatic Shut-Off, Programmable
Dishwasher Safe Parts	Baskets and Crisper Plates
Item Weight	22.9 pounds

One-Touch Digital Display

Easy to control with user-friendly operation panel



Image: A diagram illustrating the physical dimensions of the iceagle Dual Air Fryer, providing measurements for width, depth, and height.

WARRANTY AND SUPPORT

For warranty information or product support, please contact iceagle customer service. Details regarding your product's warranty period and terms can typically be found on the product packaging or the official iceagle website. Please retain your proof of purchase for warranty claims.

For further assistance, you may also refer to the seller's information on the product page:

Seller: Uwoil