

## Prestige 41055

# Prestige Induction Cooktop -Bliss 1200 W

Model: 41055

Instruction Manual

## 1. INTRODUCTION

Thank you for choosing the Prestige Induction Cooktop -Bliss 1200 W. This appliance is designed for efficient and convenient cooking. Please read this manual carefully before using the cooktop to ensure safe operation and optimal performance. Keep this manual for future reference.

The Prestige Induction Cooktop -Bliss 1200 W features a preset Indian menu, an automatic voltage regulator for durability, and power-saving technology. It is designed for quick and economical meal preparation.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- **Caution:** The ceramic plate is hot after cooking. Please don't touch with your hand.
- **Caution:** Please ensure hot vessels do not come in contact with the control panel to avoid damages.

### 3. PRODUCT OVERVIEW

The Prestige Induction Cooktop -Bliss 1200 W is designed for modern kitchens, offering a sleek design and smart performance. It features a ceramic cooking surface and an intuitive control panel.



Image 1: The Prestige Induction Cooktop -Bliss 1200 W in operation, showcasing its design and key features like 1-year warranty, Superbrands award, ISI certification, and 4KV high voltage surge protection.

# Sleek in Design, Smart in Performance

Watt  
**1200**



**Build-In Timer Function**  
For Precise, Hands-free  
Cooking



**Power Saver Technology**  
Optimizes Energy For  
Efficient Cooking

Image 2: Top view of the cooktop, emphasizing its 1200W power, built-in timer function for precise cooking, and power saver technology for efficient energy use.

# Safe. Stable. Reliable.

Automatic voltage regulator protects against sudden power fluctuations for long-lasting performance



Image 3: The cooktop demonstrating its safety, stability, and reliability, featuring an automatic voltage regulator that protects against sudden power fluctuations and up to 4KV high voltage surge protection.

# Intelligent Engineering for Safe & Efficient Cooking



Image 4: The cooktop highlighting its intelligent engineering, including dimensions (41D x 32W x 10H Centimeters), Intelligent Control for automatic power and temperature adjustment, and an Anti-magnetic Wall to shield excess magnetic interference.

## 4. SETUP

### 4.1 Unpacking

Carefully remove the induction cooktop from its packaging. Retain the packaging materials for future storage or transport if needed. Check for any visible damage. If the appliance appears damaged, do not use it and contact customer support.

### 4.2 Placement

- Place the cooktop on a flat, stable, and heat-resistant surface.
- Ensure there is adequate ventilation around the appliance. Do not block the air vents located on the bottom or sides of the cooktop.
- Keep the cooktop away from water sources and direct heat.
- Maintain a safe distance from other electronic devices to prevent magnetic interference.

### 4.3 Power Connection

Plug the power cord into a standard 230V AC electrical outlet. Ensure the outlet is properly grounded and can support the 1200W power requirement of the cooktop.

#### 4.4 Compatible Cookware

Induction cooktops require cookware made of ferromagnetic material. Look for pots and pans with a flat bottom and a symbol indicating compatibility with induction cooktops. Non-magnetic cookware (e.g., glass, ceramic, aluminum without an induction base) will not work.

### 5. OPERATING INSTRUCTIONS

#### 5.1 Control Panel Overview

The cooktop features a user-friendly control panel with various buttons and a digital display.

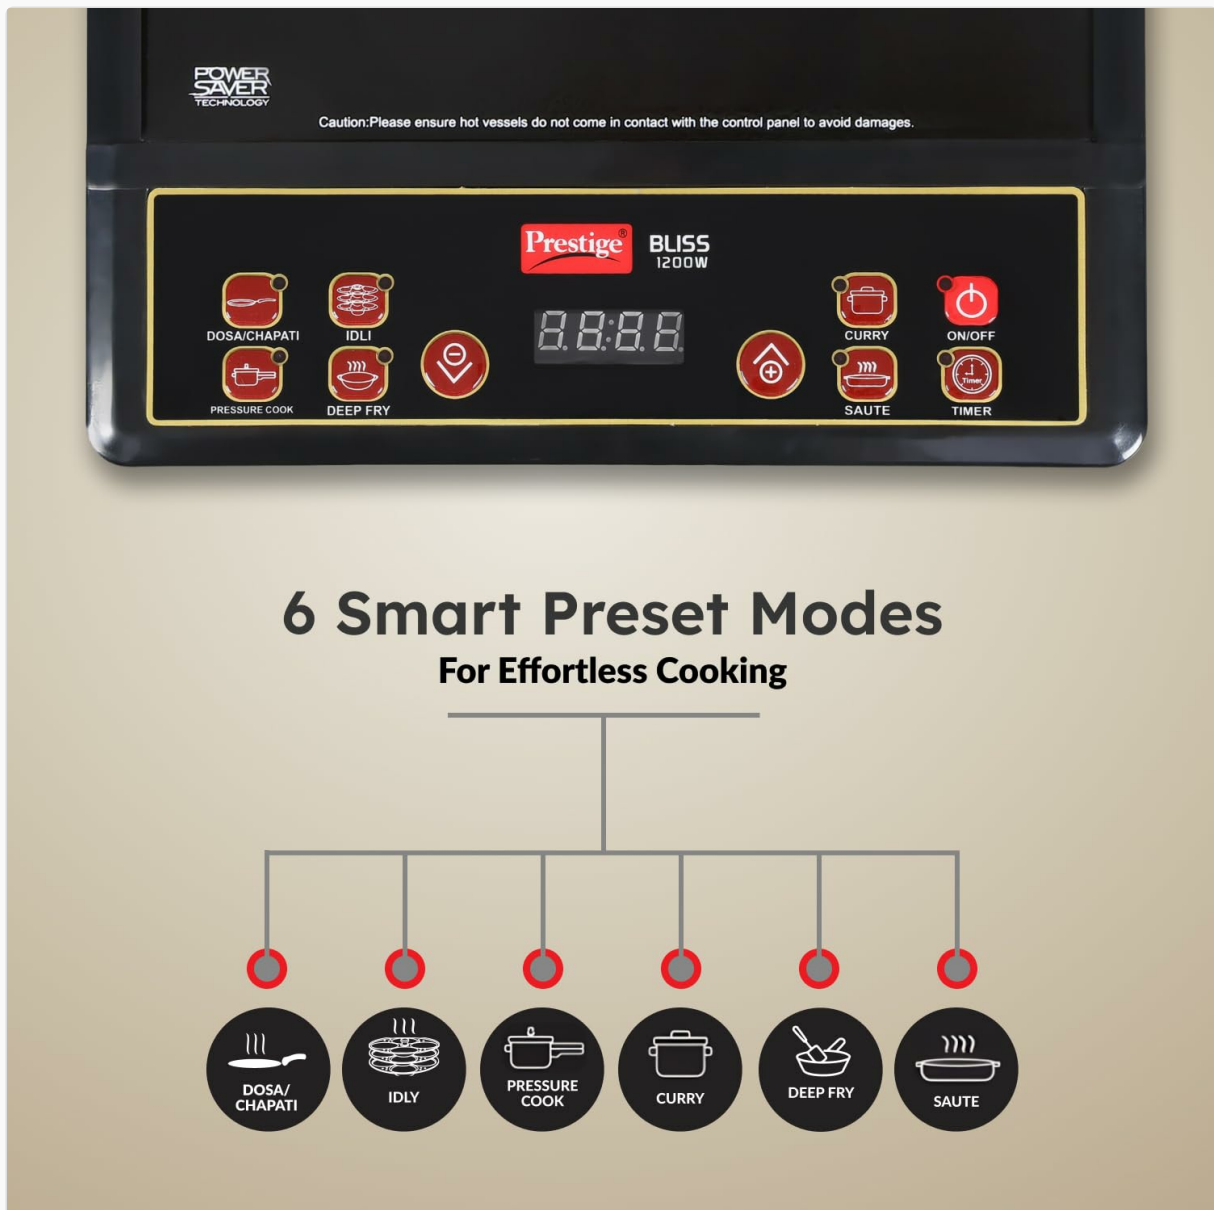


Image 5: A detailed view of the control panel, illustrating the layout of the buttons and the digital display for easy operation.

# 6 Smart Preset Modes for Effortless Cooking

This cooktop comes with **Indian Menu** like Chapati, Dosa, Curry and Idli at just the touch of a button.



Dosa



Idli



Pressure Cooker



Curry



Deep Fry



Saute

Image 6: This image displays the six smart preset modes available on the cooktop: Dosa, Idli, Pressure Cooker, Curry, Deep Fry, and Saute, designed for effortless cooking of various dishes.

## 5.2 Basic Operation

1. Place suitable cookware with food on the ceramic plate.
2. Press the **ON/OFF** button to turn on the cooktop. The digital display will light up.
3. Select a cooking mode or adjust the power/temperature using the respective controls.
4. To turn off the cooktop, press the **ON/OFF** button again. The fan may continue to run for a short period to cool down the appliance.

## 5.3 Preset Modes

The cooktop comes with 6 smart preset modes for effortless cooking:

- **Dosa/Chapati:** Optimized settings for cooking flatbreads.
- **Idli:** Ideal for steaming idlis.
- **Pressure Cook:** Suitable for pressure cooking.
- **Curry:** Pre-set for preparing various curries.
- **Deep Fry:** Maintains optimal temperature for deep frying.
- **Saute:** For quick stir-frying and sautéing.

Simply press the corresponding button on the control panel to activate the desired preset mode.

## 5.4 Timer Function

The built-in timer allows you to set a specific cooking duration. Press the **TIMER** button and use the adjustment controls to set the desired time. The cooktop will automatically switch off once the timer expires.

## 5.5 Automatic Voltage Regulator (AVR)

The integrated Automatic Voltage Regulator protects the cooktop from sudden power fluctuations, ensuring stable operation and extending the appliance's lifespan. It can handle high voltage surges up to 4KV.

## 5.6 Anti-Magnetic Wall

The Anti-Magnetic Wall feature shields excess magnetic interference, contributing to safer and more efficient cooking.

# 6. MAINTENANCE

## 6.1 Cleaning the Ceramic Plate

- Always unplug the cooktop and allow it to cool completely before cleaning.
- Wipe the ceramic surface with a soft, damp cloth and a mild detergent.
- For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.
- Ensure no water enters the internal components of the cooktop.

## 6.2 General Care

- Regularly check the power cord for any signs of damage.
- Keep the air vents clear of dust and debris to ensure proper cooling.
- Store the cooktop in a dry place when not in use.

# 7. TROUBLESHOOTING

If you encounter any issues with your Prestige Induction Cooktop, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Power cord not properly plugged in; Main switch off.	Check if the power cord is securely plugged into a working outlet. Ensure the main power switch is on.
Cooktop turns on but does not heat.	Incompatible cookware; Cookware not centered; No cookware on the plate.	Use induction-compatible cookware. Ensure the cookware is centered on the cooking zone. Place cookware on the plate before turning on.

Problem	Possible Cause	Solution
Display shows an error code.	Overheating; Sensor malfunction; Voltage fluctuation.	Turn off the cooktop, unplug it, and let it cool down. Check for proper ventilation. If the issue persists, contact customer support.
Buttons are unresponsive or panel is shaking.	Physical damage; Internal component issue.	Avoid excessive force on buttons. If the panel is physically unstable or buttons are consistently unresponsive, contact customer support for service.

If the problem persists after trying these steps, please contact Prestige customer support.

## 8. SPECIFICATIONS

- **Model Number:** 41055
- **Brand:** Prestige
- **Colour:** Black
- **Material:** Ceramic
- **Wattage:** 1200 Watts
- **Voltage:** 230 Volts
- **Number of Heating Elements:** 1
- **Controls Type:** Knob
- **Item Dimensions (D x W x H):** 41D x 32W x 10H Centimeters
- **Item Weight:** 2.9 Kilograms
- **Special Features:** Timer with User Pre-set, Automatic Voltage Regulator, Anti-Magnetic Wall
- **Included Components:** Induction Cooktop

## 9. WARRANTY

This Prestige Induction Cooktop -Bliss 1200 W comes with a **1 Year Manufacturer Warranty** from the date of purchase. Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal use. For detailed terms and conditions, please refer to the warranty card included with your product or contact customer support.

## 10. SUPPORT

For any feedback, comments, complaints, or service requests, please contact Prestige customer support:

**Phone:** 080-6000 4411

**Email:** [customercare@tkprestige.com](mailto:customercare@tkprestige.com)

**Website:** [shop.tkprestige.com/customer\\_service](http://shop.tkprestige.com/customer_service)

To find a Prestige authorized service center near you, scan the QR code below:



Image 7: QR code for locating Prestige authorized service centers across India.

Prestige is committed to your satisfaction and has over 500+ service centers across India.

