

[manuals.plus](#) /

› [SKMEI](#) /

› [SKMEI Kids Digital Sport Watch Model 2288 User Manual](#)

SKMEI 2288

SKMEI Kids Digital Sport Watch - Model 2288 User Manual

Your guide to setup, operation, and care.

1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the SKMEI Kids Digital Sport Watch, Model 2288. This watch is designed for children, featuring a digital display, 50-meter water resistance, alarm, countdown timer, dual time function, and an LED backlight. Please read these instructions carefully to ensure proper use and longevity of your watch.



Image 1.1: The SKMEI Kids Digital Sport Watch Model 2288, showcasing its robust design and digital display.

2. WATCH COMPONENTS AND BUTTON FUNCTIONS

Familiarize yourself with the watch's buttons and their primary functions:

- **LIGHT Button (Top Left):** Activates the LED backlight for visibility in low light conditions.
- **MODE/ADJ Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch, Countdown, Dual Time) and is used to enter adjustment mode.
- **RESET Button (Bottom Right):** Used to reset values or move to the next setting item during adjustment.
- **ST/STOP Button (Top Right):** Used to start or stop functions like the stopwatch or countdown timer, and to increase values during adjustment.



Image 2.1: Detailed view of the watch face, highlighting the digital display and the four control buttons.

3. OPERATING INSTRUCTIONS

3.1. Setting the Time and Date

1. From the normal time display, press the **MODE/ADJ** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to cycle through the settings: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. Use the **ST/STOP** button to adjust the flashing value. Hold down to increase rapidly.
4. Once all settings are correct, press the **MODE/ADJ** button to exit time setting mode.
5. To switch between 12-hour and 24-hour format, press the **RESET** button while the hours are flashing during time setting.

3.2. Setting the Alarm

1. From the normal time display, press the **MODE/ADJ** button once to enter alarm mode.
2. Press the **RESET** button to select the hour or minute to adjust.

3. Use the **ST/STOP** button to set the desired alarm hour and minute.
4. Press the **MODE/ADJ** button to exit alarm setting mode.
5. To turn the alarm ON/OFF, press the **ST/STOP** button while in alarm mode (without flashing digits). An alarm icon will appear when activated.

3.3. Using the Chronograph (Stopwatch)

1. From the normal time display, press the **MODE/ADJ** button twice to enter chronograph mode.
2. Press the **ST/STOP** button to start the stopwatch.
3. Press the **ST/STOP** button again to stop the stopwatch.
4. Press the **RESET** button to clear the stopwatch to zero.
5. To record split times, press **RESET** while the stopwatch is running. Press **RESET** again to return to the running time.

3.4. Using the Countdown Timer

1. From the normal time display, press the **MODE/ADJ** button four times to enter countdown timer mode.
2. Press the **RESET** button to select the hour or minute to adjust.
3. Use the **ST/STOP** button to set the desired countdown time.
4. Press the **MODE/ADJ** button to start the countdown.
5. Press the **MODE/ADJ** button again to pause/resume the countdown.
6. When the countdown reaches zero, an alarm will sound. Press any button to stop the alarm.

3.5. Setting Dual Time

1. From the normal time display, press the **MODE/ADJ** button five times to enter dual time mode.
2. Press the **RESET** button to select the hour or minute to adjust.
3. Use the **ST/STOP** button to set the desired second time zone.
4. Press the **MODE/ADJ** button to exit dual time setting mode.

3.6. Activating the LED Backlight

Press the **LIGHT** button (top left) at any time to illuminate the display for a few seconds.

4. MAINTENANCE

4.1. Water Resistance

This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for swimming, washing hands, and exposure to rain. It is **not** suitable for diving or hot water activities like showering or sauna, as steam can penetrate the seals.

Image 4.1: Illustration of the watch's 50-meter water resistance, suitable for swimming and daily water exposure.

4.2. Cleaning

Clean the watch regularly with a soft, damp cloth. Avoid using chemical cleaners, which can damage the watch's case or strap.

4.3. Battery Replacement

The watch uses one C battery (included). When the display dims or functions become unreliable, the battery

may need replacement. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained.



Image 4.2: The stainless steel back of the watch, indicating water resistance and battery type (CR2025).

5. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Time is incorrect:** Re-set the time following the instructions in Section 3.1. Ensure the 12/24-hour format is correctly selected.
- **Alarm does not sound:** Ensure the alarm is activated (alarm icon visible on display). Check alarm time settings.
- **Buttons are unresponsive:** The watch might be in a frozen state. Try removing and reinserting the battery (if comfortable doing so, otherwise seek professional help) or wait for a few minutes.
- **Water inside the watch:** If water appears inside the watch, stop using it immediately and take it to a professional for inspection and repair to prevent further damage.

6. SPECIFICATIONS

Feature	Detail
Model Number	2288AG
Display Type	Digital
Movement Type	Quartz
Water Resistance Depth	50 Metres (5 ATM)
Case Diameter	37.2 Millimetres
Case Thickness	1.5 Centimetres
Band Material	Thermoplastic Polyurethane (TPU)
Band Length	21.5 Centimetres
Battery	1 C battery (included)
Item Weight	33.5 Grams
Country of Origin	China



Image 6.1: Key dimensions of the SKMEI 2288 watch, including case height, strap width, case width, and case thickness.

7. WARRANTY AND SUPPORT

7.1. Warranty Information

The SKMEI Kids Digital Sport Watch Model 2288 comes with a **9-month Manufacturer Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

7.2. Customer Support

For any service-related inquiries, feedback, or warranty claims, please contact the Skmei India Helpline:

- **Helpline Number:** 1800-889-6251
- **Operating Hours:** Monday to Saturday, 9:00 AM to 6:00 PM (IST)

