

[Manuals.plus](#) /

> [PDP](#) /

> PDP REMATCH GLOW Wireless Nintendo Switch Pro Controller - Blackout Bowser Instruction Manual

PDP 500-253-BKBW

PDP REMATCH GLOW Wireless Nintendo Switch Pro Controller - Blackout Bowser

Model: 500-253-BKBW

INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your PDP REMATCH GLOW Wireless Nintendo Switch Pro Controller. This controller is officially licensed for Nintendo Switch, Nintendo Switch Lite, and Nintendo Switch OLED Model, featuring a unique Blackout Bowser design that glows in the dark.

SETUP

1. Initial Charging

Before first use, fully charge the controller. Connect the included USB charging cable to the controller's charging port and to a USB power source (e.g., Nintendo Switch dock, USB wall adapter). The charging indicator lights will show charging status.



Image: The PDP REMATCH GLOW Wireless Controller connected to a charging cable, illustrating the charging process.

2. Pairing with Nintendo Switch

1. Ensure your Nintendo Switch console is powered on and updated to the latest system software.
2. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
3. On the PDP REMATCH GLOW controller, press and hold the **Sync Button** (located on the top edge of the controller) for a few seconds until the player LEDs begin to flash.
4. Once the player LEDs stop flashing and remain lit, the controller is successfully paired.

OFFICIALLY LICENSED

By Nintendo®



© Nintendo. Nintendo Switch is a trademark of Nintendo.

Image: Top view of the PDP REMATCH GLOW Wireless Controller, highlighting the sync button and player indicator lights.

OPERATING INSTRUCTIONS

Motion Controls

The controller features built-in motion controls for immersive gameplay. These controls are automatically enabled when supported by the game. No additional setup is required.

ERGONOMICALLY DESIGNED

For Comfort



Image: The PDP REMATCH GLOW Wireless Controller with a graphic illustrating its built-in motion control capabilities.

Programmable Back Buttons

The controller includes dual programmable back buttons for customized gameplay. Refer to your game's settings or the controller's specific programming instructions (if provided separately) to assign functions to these buttons.

PROGRAMMABLE BACK BUTTONS

For Quicker Responses



Image: Rear view of the PDP REMATCH GLOW Wireless Controller, highlighting the two programmable back buttons.

Wireless Connectivity

The controller offers a stable wireless connection with a range of up to 30 feet, allowing for comfortable gameplay from a distance. Ensure no major obstructions are between the controller and the console for optimal performance.

Glow-in-the-Dark Feature

The unique Blackout Bowser design on the controller glows in the dark after exposure to light. To activate the glow, expose the controller to a light source for a period of time before playing in a dark environment.

GLOWS IN THE DARK

For Unique Design



Image: The PDP REMATCH GLOW Wireless Controller illuminated in a dark setting, demonstrating its glow-in-the-dark feature with the Blackout Bowser design.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge the controller regularly, especially if it will not be used for an extended period. The built-in rechargeable battery provides up to 40 hours of play time on a single charge.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Controller Not Connecting:

- Ensure the controller is fully charged.
- Verify the Nintendo Switch console is powered on and within range (up to 30 feet).

- Attempt to re-pair the controller by following the "Pairing with Nintendo Switch" steps in the Setup section.
- Check for any wireless interference from other devices.

Motion Controls Not Responding:

- Confirm that the game you are playing supports motion controls.
- Try restarting the game and/or the Nintendo Switch console.

SPECIFICATIONS

Feature	Detail
Brand	PDP
Model Name	RMTCHBBW
Model Number	500-253-BKBW
Compatible Devices	Nintendo Switch, Nintendo Switch Lite, Nintendo Switch OLED Model
Controller Type	Gamepad
Connectivity Technology	Bluetooth
Additional Features	Ergonomic, Motion Sensing, Wireless, Programmable Back Buttons, Glow-in-the-Dark Design
Battery Life	Up to 40 hours
Wireless Range	30 feet
Item Weight	12 ounces
Item Dimensions (D x W x H)	2.56"D x 6.3"W x 5.32"H

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: Official product overview of the PDP REMATCH Wireless Controller for Nintendo Switch, highlighting its features like motion controls, wireless range, and programmable back buttons.

WARRANTY AND SUPPORT

For warranty information and customer support, please visit the official PDP website:

[PDP Product Warranty Information](#)