



Manuals.plus /

› Samsonite /

› Samsonite UpLIFT X-Large Checked Hardside Luggage Instruction Manual

## Samsonite UpLIFT X-Large Checked (152031-5928)

# Samsonite UpLIFT X-Large Checked Hardside Luggage

Model: 152031-5928

## INTRODUCTION

---

This manual provides essential information for the proper use, care, and maintenance of your Samsonite UpLIFT X-Large Checked Hardside Luggage. Please read these instructions carefully before using your luggage to ensure optimal performance and longevity.



*Front view of the Samsonite UpLIFT X-Large Checked Hardside Luggage.*

## FEATURES

---

The Samsonite UpLIFT X-Large Checked Hardside Luggage is designed for durability and ease of travel. Key features include:

- **Innovative Lightweight Durability:** Crafted from a specially engineered polycarbonate shell for exceptional strength without added weight.
- **Lightweight Handle System:** Custom telescopic handle with multiple height adjustments and an ergonomic, wipe-clean grip.
- **Effortless Glide with Advanced 360° Suspension Wheels:** Proprietary suspension wheels provide smooth and stable mobility on various surfaces.
- **Enhanced Security with TSA-Approved Lock:** A fully flush-mounted TSA lock mechanism allows secure travel and inspection by TSA agents without damage.
- **Thoughtful Packing Features:** Dual lining zipper dividers create organized compartments for efficient packing.



*The adjustable telescopic handle system for customized comfort.*



*Side view highlighting the 360° spinner wheels for smooth maneuverability.*

## SETUP

---

### Setting the TSA Combination Lock

Your luggage is equipped with a TSA-approved combination lock. To set your personal combination:

1. The lock is preset to 0-0-0.
2. Locate the small reset button (usually a small hole) next to the dials. Use a pen or pointed object to press and hold this button.
3. While holding the reset button, set your desired 3-digit combination by turning the dials.
4. Release the reset button. Your new combination is now set.
5. Test your new combination by scrambling the dials and then entering your code to open the lock.

*Note: Keep your combination in a safe place. If you forget your combination, there is no master reset code.*



*Back view of the luggage, featuring the integrated TSA lock.*

## **OPERATION**

---

### **Using the Adjustable Handle System**

The telescopic handle can be adjusted to multiple heights for comfortable maneuvering. Press the button on the handle grip and extend or retract the handle to your preferred height. Release the button to lock it in place.

### **Packing Your Luggage**

Utilize the dual lining zipper dividers to organize your belongings. Place heavier items at the bottom near the wheels for better balance. The zippered compartments help secure contents and prevent shifting during transit.



*Interior view showcasing the dual zippered dividers for organized packing.*

### **Video: UpLIFT Interior Review**

Your browser does not support the video tag.

*This video provides a detailed review of the interior features and packing capabilities of the UpLIFT luggage.*

## **MAINTENANCE**

---

To keep your Samsonite UpLIFT luggage in excellent condition:

- **Cleaning the Shell:** Wipe the polycarbonate hardside shell with a soft, damp cloth and mild soap. Avoid abrasive cleaners or solvents.
- **Wheel Care:** Periodically check the spinner wheels for debris. Clean them with a damp cloth. If wheels become stiff, a small amount of silicone lubricant can be applied to the axle.
- **Handle Care:** Keep the telescopic handle clean and free of obstructions. If it becomes difficult to extend or retract, ensure no debris is lodged in the mechanism.
- **Zipper Maintenance:** Ensure zippers are free of dirt and grit. For smooth operation, occasionally apply a

zipper lubricant or wax.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
TSA lock won't open.	Incorrect combination entered.	Ensure the correct 3-digit combination is aligned. If forgotten, contact Samsonite support.
Telescopic handle is stuck.	Debris in the mechanism or bent handle.	Check for and remove any obstructions. If bent, avoid forcing and contact support.
Spinner wheels are not rolling smoothly.	Debris caught in wheels or lack of lubrication.	Clean wheels thoroughly. Apply a small amount of silicone lubricant to the wheel axles.
Zipper is difficult to move.	Dirt or lack of lubrication.	Clean the zipper teeth. Apply zipper lubricant or a graphite pencil to the teeth.

## SPECIFICATIONS

Attribute	Detail
Brand	Samsonite
Model Name	Uplift - Durable Lightweight Polycarbonate Hardshell, Spinner Wheels, Rightheight™ Handle, Tsa Lock
Model Number	152031-5928
Size	X-Large Checked
Color	Phantom Black
Material Type	Polycarbonate (PC)
External Dimensions (with wheels)	32.4in x 22in x 13.75in
Interior Packing Dimensions	31in x 21.5in x 13.8in
Item Weight	10.69 Pounds
Wheel Type	Spinner (8 wheels)
Lock Type	Built-in Zipper Lock (TSA-Approved)
Handle Type	Telescopic Extendable Handle
Water Resistance Level	Water Resistant

## WARRANTY AND SUPPORT

### Warranty Information

This Samsonite UpLIFT luggage is backed by a **10-year limited warranty**. This warranty covers manufacturing defects in materials and workmanship. For specific terms and conditions, please refer to the warranty documentation included with your purchase or visit the official Samsonite website.

### **Customer Support**

For any questions, concerns, or warranty claims regarding your Samsonite UpLIFT luggage, please contact Samsonite customer support through their official website or the contact information provided in your product packaging.