

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Severin](#) /

› [Severin FILKA Automatic Filter Coffee Machine KA 4852 User Manual](#)

## Severin KA 4852

# Severin FILKA Automatic Filter Coffee Machine User Manual

**MODEL: KA 4852**

## Introduction

Thank you for choosing the Severin FILKA Automatic Filter Coffee Machine, Model KA 4852. This innovative appliance combines the convenience of a fully automatic machine with the enjoyment of classic filter coffee. It is designed to deliver freshly ground filter coffee in your desired quantity, suitable for carafes, cups, and travel mugs.

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee machine. Please read it thoroughly before first use and keep it for future reference.

## Important Safety Instructions

Always observe the following safety precautions to prevent accidents and damage to the appliance:

- Read all instructions carefully before operating the appliance.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children.
- Ensure the voltage indicated on the rating plate matches your mains supply.
- Unplug the appliance from the mains socket when not in use, before cleaning, and in case of malfunction.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Place the appliance on a stable, level, heat-resistant surface.
- Avoid contact with hot surfaces. Use handles or knobs.
- Only use accessories recommended by the manufacturer.

## Product Components

Familiarize yourself with the parts of your Severin FILKA coffee machine:





Figure 1: Main view of the Severin FILKA Automatic Filter Coffee Machine with coffee beans in the grinder and brewed coffee in the carafe.

- **Integrated Coffee Grinder:** For freshly ground coffee beans.
- **Bean Container:** Removable for easy filling and cleaning.
- **Water Tank:** Removable for convenient filling and cleaning.
- **Digital Touchscreen Display:** For intuitive control and settings adjustment.
- **Brewing Unit:** Houses the permanent filter.
- **Permanent Gold-Tone Filter:** Reusable and dishwasher-safe.
- **Drip Tray:** Collects any drips.
- **Glass Carafe:** Included for brewing larger quantities of coffee.

## Setup

Follow these steps to set up your coffee machine for the first time:

1. **Unpacking:** Carefully remove all packaging materials and check for any damage. Keep packaging for potential future transport.
2. **Initial Cleaning:** Before first use, clean all removable parts (water tank, bean container, permanent filter, glass carafe) with warm soapy water. Rinse thoroughly and dry. Wipe the exterior of the machine with a damp cloth.
3. **Positioning:** Place the coffee machine on a stable, level, and heat-resistant surface, away from water sources and direct heat. Ensure adequate ventilation.
4. **Fill Water Tank:** Remove the water tank (see [Figure 2](#)) and fill it with fresh, cold water up to the MAX mark. Reinsert the tank securely.
5. **Fill Bean Container:** Open the lid of the bean container and fill it with whole coffee beans (see [Figure 3](#)). Close the lid firmly.
6. **First Brew Cycle (without coffee):** To clean the internal system, perform a brewing cycle with only water. Place the glass carafe under the coffee outlet. Select the maximum water quantity on the display and start the brewing process. Discard the water after completion. Repeat this process once or twice.

**SEVERIN**



Figure 2: A hand removing the transparent water tank from the side of the Severin FILKA coffee machine.

**Intuitif, simple et hygiénique : Réservoirs à eau et à grains amovibles faciles à remplir.**



Figure 3: A hand holding the removable coffee bean container, lifted from the top of the Severin FILKA coffee machine.

## Operating Instructions

### Basic Brewing

- Power On:** Plug the machine into a suitable power outlet. The display will illuminate.
- Fill Water and Beans:** Ensure the water tank is filled with fresh water and the bean container has enough coffee beans.
- Place Container:** Place your desired container (small cup, large cup, travel mug, or glass carafe) under the coffee outlet. The machine offers 5-in-1 compatibility.
- Select Quantity:** Use the digital touchscreen display (see Figure 4) to select the desired coffee quantity. The machine's "Cup Control" feature automatically draws the necessary water for quantities between 100 ml and 350 ml.
- Start Brewing:** Press the 'Start/Stop' button on the display to begin the brewing process. The machine will grind the beans and brew the coffee.

Pour une saveur de café personnalisée, choisissez la température d'infusion (jusqu'à 96°C) et activez la fonction pré-infusion pour un café plus ou moins corsé.



Figure 4: Close-up of the digital touchscreen display on the Severin FILKA coffee machine, showing quantity and strength settings.

**La cafetière FILKA unique permet d'utiliser aussi bien une verseuse en verre qu'isotherme, une petite ou une grande tasse qu'un mug isotherme.**



Figure 5: The Severin FILKA coffee machine brewing into a single cup, demonstrating the "Cup Control" feature.

## Customizing Your Coffee

- **Coffee Strength:** Adjust the coffee strength using the options on the touchscreen display. There are 5 adjustable intensity levels, from mild to strong, to suit individual preferences.
- **Pre-infusion Function:** Activate the pre-infusion function via the display for a more intense and aromatic coffee flavor. This feature ensures optimal extraction.
- **Brewing Temperature:** The machine brews at an optimal temperature of up to 96°C, ensuring a hot and full-bodied coffee.
- **Timer Function:** Utilize the integrated timer function to program your coffee machine to start brewing at a specific time.

**Inclus un filtre permanent doré résistant au lave-vaisselle. Une alternative écologique au filtre papier.**



Figure 6: Display showing brewing temperature and pre-infusion options for personalized coffee.

## Maintenance and Cleaning

Regular cleaning and maintenance ensure the longevity and optimal performance of your Severin FILKA coffee machine.

### Daily Cleaning

- **Glass Carafe:** Wash the glass carafe and its lid with warm soapy water after each use.
- **Permanent Filter:** Remove the gold-tone permanent filter ([see Figure 7](#)) and rinse it under running water to remove all coffee grounds. It is also dishwasher-safe.
- **Drip Tray:** Empty and clean the drip tray regularly.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.

**Pour un nettoyage facile ou pour changer les grains, le bac peut être retiré simplement en le tournant.**



Figure 7: Close-up view of the gold-tone permanent filter inside the Severin FILKA coffee machine.

## Regular Maintenance

- Bean Container:** For thorough cleaning or changing bean types, the bean container can be easily removed by turning it. Clean it with a damp cloth and ensure it is completely dry before reattaching.
- Water Tank:** The removable water tank facilitates easy refilling and cleaning. Clean it periodically to prevent mineral buildup.
- Descaling:** The machine features an integrated descaling function. Follow the instructions on the display or in the full manual for the descaling process. Regular descaling is crucial, especially in areas with hard water, to maintain performance and extend the appliance's lifespan.

## Troubleshooting

If you encounter issues with your coffee machine, refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Machine does not turn on.	No power supply.	Check if the power cord is securely plugged into the outlet and the machine. Test the outlet with another appliance.
Coffee is not brewing.	Water tank empty; Bean container empty; Brewing unit clogged.	Fill water tank; Fill bean container; Clean the permanent filter and brewing unit.
Coffee tastes weak.	Incorrect coffee strength setting; Insufficient coffee beans.	Increase coffee strength setting on the display; Ensure adequate coffee beans are in the container.
Water leakage.	Water tank not properly seated; Internal component issue.	Ensure the water tank is correctly and firmly inserted. If leakage persists, contact customer support.
Error message on display.	Specific malfunction.	Refer to the full product manual for specific error codes or contact customer support. Try unplugging and re-plugging the machine.

## Technical Specifications

Here are the technical specifications for the Severin FILKA Automatic Filter Coffee Machine:

Feature	Specification
Brand	Severin
Model Number	KA 4852
Color	Brushed
Dimensions (L x W x H)	382 x 170 x 460 cm
Voltage	230 Volts
Weight	5750 Kilograms
Capacity	2 Litres
Material	Stainless Steel
Special Features	Integrated stainless steel grinder, adjustable coffee intensity, timer, LED touchscreen display, pre-infusion function, 5-in-1 compatibility.

## Warranty and Customer Support

For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Severin website. If you require technical assistance, spare parts, or have any questions not covered in this manual, please contact Severin customer support. Contact details can typically be found on the Severin website.

or in the product packaging.

© 2024 Severin. All rights reserved. Model KA 4852.