

Inventum GF1200HLD

Inventum Mini Oven User Manual

Model: GF1200HLD

[Instructions](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Inventum Mini Oven. Retain this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances to ensure proper ventilation.
- Do not touch hot surfaces. Use oven mitts or gloves when handling hot components or food.
- Ensure the power cord is not damaged and is kept away from hot surfaces.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use accessories or attachments not recommended by the manufacturer, as this may cause injuries.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or similar flammable materials.
- Exercise extreme caution when removing trays or disposing of hot grease.

2. PRODUCT OVERVIEW AND COMPONENTS

The Inventum Mini Oven is designed for versatile cooking, including baking, frying, and roasting. Familiarize yourself with its components for optimal use.



Figure 2.1: The Inventum Mini Oven with its door open, displaying chicken pieces, sliced vegetables, and french fries on its internal trays.



Figure 2.2: Front view of the Inventum Mini Oven, showcasing its compact design and the food items arranged on the internal racks.

Included Components:

- **Main Unit:** The primary oven body with a 12-liter capacity, touch control panel, and viewing window.



Figure 2.3: Side view of the Inventum Mini Oven, highlighting its sleek black and stainless steel exterior.

- **Control Panel:** Touch-sensitive interface for setting temperature, time, and selecting cooking programs.



Figure 2.4: Detailed view of the touch control panel with digital display and various function icons.

- **Baking Shelves (Perforated Trays):** Two perforated trays for air frying and baking, allowing for even heat circulation.



Figure 2.5: Two perforated baking trays, ideal for air frying and ensuring crispy results.

- **Crumb Tray (Solid Baking Tray):** A solid tray designed to catch crumbs and drips, also suitable for baking.



Figure 2.6: A solid baking tray, which also functions as a crumb tray to collect food debris.

- **Rotisserie Basket:** A mesh basket for tumbling smaller items like fries or nuts during rotisserie cooking.



Figure 2.7: The rotisserie mesh basket, designed for even cooking of smaller food items.

- **Rotisserie Spit and Handle:** For roasting whole chickens or larger cuts of meat.



Figure 2.8: The rotisserie spit with forks and the removal handle for safe handling.

- **User Manual:** This document.

3. SETUP AND FIRST USE

3.1 Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Check that all listed components are present and undamaged.

3.2 Placement

- Place the mini oven on a flat, stable, and heat-resistant surface.
- Ensure there is at least 10 cm (4 inches) of clear space on all sides of the oven for proper ventilation.
- Do not place the oven near flammable materials or under wall cabinets.

3.3 Cleaning Before First Use

- Wipe the exterior of the oven with a damp cloth.
- Wash all removable accessories (baking shelves, crumb tray, rotisserie basket, spit) in warm, soapy water. Rinse thoroughly and dry completely.
- Insert the crumb tray at the very bottom of the oven.

3.4 Initial Burn-Off

Before cooking food, it is recommended to run the oven empty for approximately 15 minutes to burn off any manufacturing residues.

1. Plug the power cord into a grounded electrical outlet.
2. Set the temperature to 200°C (390°F) and the timer to 15 minutes.
3. A slight odor or smoke may be present during this initial use; this is normal. Ensure the area is well-ventilated.
4. After 15 minutes, turn off the oven and unplug it. Allow it to cool completely before proceeding.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The Inventum Mini Oven features an intuitive touch control panel. Refer to Figure 2.4 for a visual guide.

- **Power Button:** Turns the oven on/off.
- **Temperature Control (+/-):** Adjusts the cooking temperature.
- **Time Control (+/-):** Adjusts the cooking duration.
- **Program Selection:** Icons representing 8 pre-set cooking programs (e.g., fries, chicken, fish, steak, cake, pizza, toast, dehydrate).
- **Light Button:** Turns the internal oven light on/off.
- **Convection Fan Button:** Activates/deactivates the convection fan for even cooking.
- **Rotisserie Button:** Activates/deactivates the rotisserie function.

4.2 Basic Operation

1. **Prepare Food:** Place your food on the appropriate accessory (baking shelf, crumb tray, rotisserie basket, or spit).
2. **Insert Accessory:** Carefully slide the accessory with food into the desired rack position inside the oven. Ensure the crumb tray is always at the bottom.
3. **Close Door:** Close the oven door securely.
4. **Power On:** Press the Power button. The display will illuminate.
5. **Select Program or Manual Settings:**
 - **Pre-set Program:** Touch one of the 8 program icons. The oven will automatically set a recommended temperature and time.
 - **Manual Setting:** Use the Temperature (+/-) buttons to set the desired temperature and the Time (+/-) buttons to set the cooking duration.
6. **Start Cooking:** The oven will typically start automatically after a few seconds of setting the time/temperature or selecting a program. Some models may require pressing the Power button again to start.
7. **Monitor Cooking:** Use the internal light button to check on your food without opening the door.
8. **End of Cooking:** The oven will beep when the timer expires and automatically turn off the heating elements.

9. **Remove Food:** Carefully open the oven door. Using oven mitts, remove the cooked food and accessories. Be aware of hot steam.
10. **Power Off:** Press the Power button to turn off the oven completely, then unplug it from the wall outlet.

4.3 Using the Rotisserie Function

The rotisserie function is ideal for even cooking of whole chickens or other roasts using the rotisserie spit, or for items like fries using the rotisserie basket.

1. Prepare Food:

- **For Spit:** Skewer the food (e.g., whole chicken) onto the rotisserie spit, securing it with the forks. Ensure the food is centered and balanced.
- **For Basket:** Place smaller items like fries or vegetables into the rotisserie basket and secure the lid.

2. **Insert Rotisserie:** Carefully insert the rotisserie spit or basket into the designated rotisserie slots inside the oven. Ensure it is properly seated and can rotate freely.
3. **Set Cooking Parameters:** Set the desired temperature and time using the control panel.
4. **Activate Rotisserie:** Press the Rotisserie button on the control panel. The rotisserie mechanism will begin to rotate.
5. **Start Cooking:** Begin the cooking cycle as described in "4.2 Basic Operation".
6. **Remove Food:** Once cooking is complete, use the rotisserie handle (Figure 2.8) to carefully lift and remove the hot rotisserie assembly from the oven. Place it on a heat-resistant surface before removing the food.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Inventum Mini Oven.

5.1 General Cleaning

- Always unplug the oven and allow it to cool completely before cleaning.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage surfaces.

5.2 Cleaning the Interior

- The oven features a stainless steel interior, which is durable and easy to clean.
- Remove the crumb tray and all other accessories. Wash them in warm, soapy water, rinse, and dry.
- Wipe the interior walls with a damp cloth and a mild detergent. For stubborn stains, a non-abrasive oven cleaner designed for stainless steel can be used, following the product instructions.
- Wipe dry with a clean cloth.

5.3 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- For the control panel, use a slightly damp cloth and wipe gently. Do not spray water directly onto the control panel.
- Dry thoroughly.

5.4 Crumb Tray

- The crumb tray should be emptied and cleaned regularly to prevent grease buildup and potential fire hazards.
- Slide out the crumb tray from the bottom of the oven, discard crumbs, and wash as described above.

6. TROUBLESHOOTING

If you encounter issues with your Inventum Mini Oven, consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time; convection fan off.	Do not overcrowd the oven. Adjust temperature and time as needed. Ensure the convection fan is active for even cooking. Rotate food halfway through cooking.
Smoke or burning smell during operation.	Food residue on heating elements; crumb tray not cleaned; excessive grease.	Unplug and allow to cool. Clean the interior and crumb tray thoroughly. Ensure food is not touching heating elements.
Rotisserie function not working.	Rotisserie not properly seated; function not activated.	Ensure the rotisserie spit/basket is correctly inserted into the drive slots. Press the Rotisserie button on the control panel to activate.
Control panel unresponsive.	Temporary electronic glitch; power issue.	Unplug the oven for 5 minutes, then plug it back in. If the issue persists, contact customer support.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Inventum
Model Name	GF1200HLD
Special Feature	Compact Size
Control Type	Touch Control
Included Components	Baking shelves, crumb tray, user manual
Power Source	Electric
Power Output	1500W
Capacity	12 Liters
Interior Material	Stainless Steel
Item Weight	2.2 pounds
GTIN	08712876094305

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information

Inventum products are manufactured to high-quality standards. For specific warranty details regarding your Inventum Mini Oven (Model GF1200HLD), please refer to the warranty card included with your purchase or visit the official Inventum website. Keep your proof of purchase for warranty claims.

8.2 Customer Support

 
If you have any questions, require technical assistance, or need to report a problem with your appliance, please contact Inventum customer support. Contact information can typically be found on the official Inventum website or on the product packaging.

When contacting support, please have your product model number (GF1200HLD) and purchase date available.

© 2025 Inventum. All rights reserved.

Related Documents

INVENTUM model 1 noemt INVENTUM model 1 noemt  • gebruiksaanwijzing • instruction manual • Gebrauchsanleitung • mode d'emploi	Inventum IOM6170RK Inbouw Oven Gebruiksaanwijzing Complete handleiding voor de Inventum IOM6170RK inbouw oven, inclusief installatie, bediening, veiligheid, reiniging en garantie-informatie.
INVENTUM model 1 noemt INVENTUM model 1 noemt  • gebruiksaanwijzing • instruction manual • Gebrauchsanleitung • mode d'emploi	Inventum OV457B Freestanding Oven - User Manual, Features, and Specifications Comprehensive user manual for the Inventum OV457B freestanding electric oven. Find detailed information on safety instructions, appliance description, installation, operation, rotisserie function, cleaning and maintenance, cooking guide, technical specifications, and warranty terms.
INVENTUM model 1 noemt INVENTUM model 1 noemt  • gebruiksaanwijzing • instruction manual	Inventum IOH6070RK Built-In Oven User Manual Comprehensive user manual for the Inventum IOH6070RK built-in oven, covering safety instructions, appliance description, operation, cleaning, maintenance, troubleshooting, and installation.
INVENTUM model 1 noemt INVENTUM model 1 noemt  • gebruiksaanwijzing • instruction manual	Inventum IOH6070RK Built-in Oven User Manual and Guide Comprehensive user manual for the Inventum IOH6070RK built-in oven, covering safety instructions, operation, cleaning, installation, and warranty information.



maakt 't moment

hetelucht frituse oven

GF1200HLD



- gebruiksaanwijzing
- instruction manual
- Gebrauchsanleitung
- mode d'emploi

2 JAAR
Zekerheids
garantie

OMNIVOL
garantie

ONB
gratis
service



Productoverzicht

GP1900DHL

★★★★★ 57 reviews

Afzuigarm • inbouw 12 liter • Zwart/UVS

De afzuigarm van het afzuigapparaat kan worden gebruikt voor het afzuigen van rook, stoom en vet uit de keuken. Het afzuigapparaat is uitgerust met een motor die de lucht naar buiten zuigt. Het afzuigapparaat is uitgerust met een filter dat de lucht filtert van rook, stoom en vet. Het afzuigapparaat is uitgerust met een timer die de afzuigarm automatisch uitschakelt na 15 minuten.

• 12 liter inbouw
 • afzuigarm van 8 grammen
 • afzuigarm van 8 grammen
 • afzuigarm van 8 grammen



Aankoop prijs: € 129,99

Productmerken & frites

Beelding	Opmerking
Aankoopprogramma's	5
Inhoud	20
Frituur met olie	20
Inhoud	10 liter
Inhoud inhoud	10 liter met olie
Aankoop	10 liter met olie

Inhoud (kg) afzuigarm	10 kg met olie
Inhoud temperatuur	10 kg met olie
Dag met olie en temperatuur	20
Werkzaam	20
Aankoop prijs	20
Aankoop prijs	20
Aankoop prijs	20

www.inventum.eu





INVENTUM

model: iovenment

Airfryer - oven

GF1200HLD

Productkenmerken

Technische gegevens

Verkoopsgegevens

--

Gedownload door: [Bibi van der Vliet](#)




Productoverzicht

CP1500HLD

1500 W

Afritoven oven • Inhoud 12 liter • Zwart/RVS

De afritoven CP1500HLD is een afritoven met een ovenruimte van 15 liter. De afritoven is uitgerust met een elektronisch bedieningspaneel met een draai knop en een display. De afritoven is uitgerust met een draairooster en een draairooster. De afritoven is uitgerust met een draairooster en een draairooster.

- 15 liter inhoud
- Draairooster, draairooster, draairooster
- Elektronisch bedieningspaneel
- Draairooster, draairooster, draairooster

Aankoopprijs € 129,99

Productkenmerken Afritoven

Bediening	• Elektronisch bedieningspaneel
Aankoopprijs programma's	• 5
Intercom	• Ja
Fokoven zonder rits	• Ja
Inhoud	• 15 liter
Interne behuizing	• Roestvrij staal
Accessoires	• Draairooster, draairooster, draairooster

Interne afritoveninhoud	• 15 liter (inhoud)
Interne temperatuur	• 150 tot 250°C
Draairooster met draairooster	• Ja
Interne afritoveninhoud	• Ja
Interne afritoveninhoud	• Ja

www.inventum.eu





INVENTUM

Productoverzicht

GF1200HLD

12 liter - 6 personen

Airfryer oven - 12 liter - Zwart/RVS

Deze unieke afzuig- en bakoven is voorzien van een unieke, innovatieve afzuigkap met een 3-in-1 functie. Het is mogelijk om de afzuigkap te gebruiken als een normale afzuigkap, als een afzuigkap met een afzuigmotor of als een afzuigkap met een afzuigmotor en een afzuigmotor.

- 12 liter inhoud
- 6 personen, tot 6 personen
- 12 liter inhoud, 12 liter bakoven
- 12 liter inhoud, 12 liter bakoven

Aankoopprijs: € 129,99

Productkenmerken frietoven


Type bakoven	• 12 liter inhoud • 6 personen
Automatische programmeerbaarheid	• 1
Interactieve	• 1
Frietoven (zonder olie)	• 1
Interne inhoud	• 12 liter
Interne bakoven	• 12 liter
Accessoires	• 1

Technische gegevens frietoven

Model	• GF1200HLD
Afmeting (breedte)	• 30 x 30 x 30 cm
Aankoopprijs	• 129,99 €
Maximale prijs	• 129,99 €

Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter
Inhoud (l) afzonderlijke bakoven	• 12 liter

 www.inventum.eu



INVENTUM
maak 't moment

hetelucht frituuse oven
GF1200HLD



- gebruiksaanwijzing
- instruction manual
- Gebruiksaanleitung
- mode d'emploi

2 JAAR
GARANTIE
VERBODEN

OMGEEL
GEWAST


OF
ANDERS
WISSEL



[\[pdf\]](#) User Manual Instructions Warranty

handleiding hier Hetelucht frituseuse oven met roterende mand GF1200HLD Inventum gf1200hld
gebruiksaanwijzing inventum eu files Webdav |||

HOT AIR FRYER OVEN HEISSLUFTFRITTEUSE/-BACKOFEN FOUR FRITEUSE
AIR CHAUD hetelucht frituseuse oven **GF1200HLD** gebruiksaanwijzing instruction
manual Gebruiksaanleitung mode d emploi 2 Nederlands English Deutsch Franais 1.
veiligheidsvoorschriften 2. productomschrijving 3. voor het eerste geb...
lang:nl **score:31** filesize: 1.17 M page_count: 44 document date: 2022-10-17

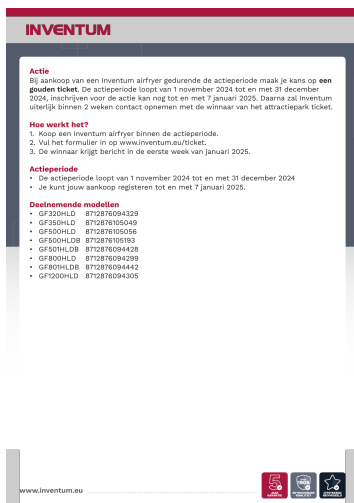

[\[pdf\]](#)

Actie Hoe werkt het Actieperiode Deelnemende modellen 8 nov 2024 — Bij aankoop van een Inventum
airfryer gedurende de actieperiode maak je kans op gouden ticket De loopt 1 november tot en online eoy
campagne actievoorwaarden a4 inventum eu files cms Documenten Acties |||

Actie Bij aankoop van een Inventum airfryer gedurende de actieperiode maak je kans
op een gouden tic ... GF500HLDB 8712876105193 GF501HLDB 8712876094428
GF800HLD 8712876094299 GF801HLDB 8712876094442 **GF1200HLD**
8712876094305 www.inventum.eu Actievoorwaarden Deze actie is alleen geldig bij
aanschaf...

lang:nl **score:25** filesize: 113.31 K page_count: 2 document date: 2024-11-07



[\[pdf\]](#)

Bekijk de CE markering Inventum GF1200HLD Airfryer oven Hetelucht frituseuse 12 liter 8 programma s 5
bol original media RKMkDpLxp38V |||

...

lang:nl **score:12** filesize: 120.55 K page_count: 1 document date: 2022-10-20