

[Manuals.plus](#) /

› [CORO](#) /

› CORO Bluetooth 5.3 Ear-Clip Earphones User Manual

CORO YYK-Q71

CORO Bluetooth 5.3 Ear-Clip Earphones

Model: YYK-Q71

PRODUCT OVERVIEW

The CORO YYK-Q71 Bluetooth 5.3 Ear-Clip Earphones are designed for comfortable and stable wear, avoiding the discomfort often associated with in-ear canal earphones. They feature advanced Bluetooth 5.3 technology for fast and low-latency audio transmission, ensuring a smooth experience for music, movies, and gaming. Equipped with noise-reducing microphones, these earphones provide clear sound quality for calls and online meetings. They support both single and dual earbud use and offer convenient automatic pairing.



This image displays the main product, the white and blue Bluetooth 5.3 ear-clip earphones, resting in their open charging case. The case features a digital display indicating battery levels for both the left and right earbuds, as well as the charging case itself.

しっかり挟むイヤークラフ型



耳から落ちにくいデザイン、長時間つけても快適!

A woman is shown wearing the ear-clip earphones, illustrating how they comfortably and securely clip onto the ear without entering the ear canal. This design ensures stability and comfort even during extended wear.

PACKAGE CONTENTS

Upon opening your CORO YYK-Q71 earphone package, please verify that all the following items are included:

- Earphone Body (Left and Right)
- Charging Case
- Type-C Charging Cable
- Instruction Manual

セット内容



This image displays all items included in the product package: the earphones and charging case, a Type-C charging cable for convenient charging, and the instruction manual for user guidance.

SETUP

Initial Pairing

1. Ensure the earphones are charged.
2. Open the charging case and remove both earphones. They will automatically power on.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings.
4. Search for available devices and select "YYK-Q71" from the list.
5. Once connected, the earphones are ready for use.

Note: Manual pairing is required only for the first connection with a new device. Subsequent connections will be automatic.

Automatic Pairing (Subsequent Use)

After the initial pairing, the earphones will automatically connect to the last paired device when removed from the charging

case. Simply take them out, and they will connect without manual intervention.

Charging

To charge the earphones, place them back into the charging case. The case itself can be charged using the provided Type-C USB cable. Connect the cable to the Type-C port on the charging case and plug the other end into a USB power source.

大容量電池 長時間持続

大容量電池搭載、さらに充電ケース付き、
手軽に充電できるので充電切れの心配不要！



通話可能時間 約8時間
イヤホン電池容量 40mAh
充電ケース電池容量 300mAh

This image highlights the large battery capacity and long-lasting performance. It shows the earphones in their charging case, with text indicating approximately 8 hours of call time, 40mAh earphone battery capacity, and 300mAh charging case battery capacity.

バッテリー表示

残りの電量が確認できます
電量不足の心配もなくなります



This image provides a detailed view of the battery level display on the charging case. It clearly shows separate indicators for the remaining battery of the left earbud, the right earbud, and the charging case itself, allowing users to easily monitor power status.

OPERATING INSTRUCTIONS

The YYK-Q71 earphones feature intuitive touch controls for managing music playback and calls.

ボタン操作

音楽/着信を自由操作



着信応答/終話

任意側の多機能
ボタンを1回押す



音量上げ/音量下げ

右側の多機能ボタンを長押しする
左側の多機能ボタンを長押しする



着信拒否

着信中に任意側の多機能
ボタンを2回押す



曲戻し/曲送り

再生中左側の多機能ボタンを2回押す
再生中右側の多機能ボタンを2回押す



再生/一時停止

任意側の多機能
ボタンを1回押す



Siri呼出し

音楽再生しない時任意側の
多機能ボタンを3回押す

着信の応答や音楽の曲切り替えなど、
全ての機能操作をボタン一つで実現し、
音声アシスタント機能も対応しており、
使い勝手が抜群です。



This diagram details the touch control functions of the earphones. It shows how to answer/end calls, adjust volume, reject calls, skip tracks, play/pause music, and activate voice assistants like Siri, all through simple touch gestures.

Touch Controls

Answering/Ending Calls: Tap either multi-function button once during an incoming call to answer, or once during a call to end.

Rejecting Calls: Tap either multi-function button twice during an incoming call to reject.

Play/Pause: Tap either multi-function button once during music playback to play or pause.

Volume Up: Long press the right multi-function button.

Volume Down: Long press the left multi-function button.

Previous Track: Tap the left multi-function button twice during music playback.

Next Track: Tap the right multi-function button twice during music playback.

Siri Activation: Tap either multi-function button three times when no music is playing to activate your device's voice assistant (e.g., Siri).

Single/Dual Earbud Use

The earphones can be used as a stereo pair or individually. Simply take one earbud out of the case for single-ear use, or both for a stereo experience. The automatic pairing feature will adapt accordingly.

MAINTENANCE

Cleaning

To maintain optimal performance and hygiene, regularly clean your earphones. Use a soft, dry, lint-free cloth to wipe the surface of the earphones and the charging case. Avoid using abrasive materials or harsh chemicals.

Storage

When not in use, store the earphones in their charging case to protect them from dust, dirt, and physical damage. Keep the case in a cool, dry place away from direct sunlight and extreme temperatures.

Water Resistance

The earphones feature a sweat-resistant and splash-proof design, making them suitable for use during workouts or in light rain. However, they are not fully waterproof and should not be submerged in water. Avoid exposing them to excessive moisture or liquids.

TROUBLESHOOTING

Common Issues and Solutions

- Earphones not pairing:** Ensure both earphones are charged. Place them back in the case, then remove them. If it's the first time pairing, manually select "YYK-Q71" in your device's Bluetooth settings.
- No sound:** Check the volume level on both your device and the earphones. Ensure the earphones are properly connected to your device.
- Intermittent connection:** Ensure there are no obstructions between the earphones and your device. Keep the earphones within the effective communication range (10m).
- Charging issues:** Verify that the Type-C cable is securely connected to both the charging case and the power source. Check if the power source is active.
- Battery drains quickly:** Ensure the earphones are fully charged before use. If the issue persists after a few months of use, the battery may be degrading.

If you encounter persistent issues not covered here, please refer to the Warranty and Support section for contact information.

SPECIFICATIONS

Feature	Specification
Bluetooth Version	V5.3

Feature	Specification
Communication Distance	Up to 10 meters
Standby Time	Approx. 80 hours
Earphone Charging Time	Approx. 1 hour
Earphone Battery Capacity	40mAh
Charging Case Battery Capacity	300mAh
Call Time	Up to 8 hours
Music Playback Time	Up to 8 hours

製品仕様

//////////

Bluetoothバージョン：V5.3

通信距離：10m

スタンバイ時間：約80時間

イヤホン充電時間：約1時間

イヤホン電池容量：40mAh

充電ケース電池容量：300mAh

通話可能時間：約8時間

音楽再生可能時間：約8時間



This image presents a table of key product specifications, including Bluetooth version V5.3, a communication distance of 10m, approximately 80 hours of standby time, 1 hour earphone charging time, 40mAh earphone battery capacity, 300mAh charging case battery capacity, and up to 8 hours of call and music playback time.

WARRANTY AND SUPPORT

Your CORO YYK-Q71 earphones come with a**3-month warranty** from the date of purchase.

In the event of damage during shipping, product defects, dirt, or any other malfunction, please contact the seller directly via email. Provide your order details and a description of the issue for prompt assistance.

For general inquiries or support, please refer to the contact information provided by your retailer or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question