

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Shark](#) /

› [Shark EVOPOWER SYSTEM NEOII+ LC551JBK Cordless Stick Vacuum Cleaner User Manual](#)

Shark LC551JBK

Shark EVOPOWER SYSTEM NEOII+ LC551JBK Cordless Stick Vacuum Cleaner

Model: LC551JBK

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Shark EVOPOWER SYSTEM NEOII+ LC551JBK Cordless Stick Vacuum Cleaner. Please read these instructions carefully before operating the appliance and retain them for future reference.

The Shark EVOPOWER SYSTEM NEOII+ LC551JBK is designed for powerful and effortless cleaning, featuring advanced sensor technology and an automatic dust collection system.

Shark | NINJA



Image: The Shark EVOPOWER SYSTEM NEOII+ vacuum cleaner in use on both carpet and hard flooring, demonstrating its versatility.

SETUP

Unpacking and Assembly

1. Carefully remove all components from the packaging.
2. Connect the main vacuum body to the extension wand until it clicks into place.

3. Attach the Hybrid Power Clean head to the bottom of the extension wand.
4. Place the assembled vacuum onto the automatic dust collection dock. Ensure it is securely seated.

Charging the Battery

- The vacuum comes with two lithium-ion batteries. Insert one battery into the vacuum body and the other into the charging slot on the automatic dust collection dock.
- Connect the power cord of the dock to a wall outlet. The battery indicator lights will illuminate during charging.
- Allow the battery to fully charge before first use. A full charge typically takes approximately 3.5 hours.



どんなインテリアにも馴染むシックなデザインで
部屋に出ておけます

Image: The Shark EVOPOWER SYSTEM NEOII+ vacuum cleaner docked with its automatic dust collection station, ready for use or charging.

OPERATING INSTRUCTIONS

Powering On/Off

- Press the power button located on the handle to turn the vacuum on or off.

Smart iQ Technology

The vacuum features Smart iQ Technology with three sensors to optimize cleaning:

- **iQ Sensor:** Automatically adjusts suction power based on the amount of debris detected. The iQ ring on the handheld unit changes color (green for low debris, yellow for medium, red for high) to indicate the cleaning intensity.
- **Floor Sensor:** Automatically adjusts brush roll speed according to the floor type (hardwood, carpet, tatami). On carpets, the brush speed increases to dislodge embedded dirt.
- **Edge Sensor:** Detects walls and edges, automatically boosting suction power up to 2.5 times to ensure thorough cleaning along borders.



Shark (シャーク) は
アメリカ発の世界的な
掃除機ブランド

Image: Visual representation of the iQ, Floor, and Edge sensors detecting debris, floor type, and wall proximity to optimize cleaning.

Cleaning Modes

- **Smart iQ Mode:** The default mode where the vacuum automatically adjusts suction and brush speed based on sensor input.
- **Boost Mode:** Provides maximum suction for stubborn dirt. Activate by pressing the Boost button.
- **Eco Mode:** Offers extended runtime with reduced suction for lighter cleaning tasks. Activate by pressing the Eco button.

✿ ブーストモード



☛ エコモード



状況に合わせ手動モードでお掃除も可能

Image: A visual comparison demonstrating the vacuum's performance in Boost Mode for heavy debris and Eco Mode for general cleaning.

Using Attachments and Handheld Mode

- To convert to handheld mode, press the release button on the main body and detach it from the extension wand.
- Attach desired accessories (e.g., crevice tool, multi-tool, mini motorhead) directly to the handheld unit or the extension wand for specialized cleaning.
- The FLEX function allows the wand to bend, making it easy to clean under furniture without bending down.



FLEX機能で家具下もラクラク

家具下の狭い場所もパイプが曲がるから
腰や膝を曲げなくてもお掃除できます。

Image: The vacuum cleaner's flexible wand allows easy access to clean under low-lying furniture.



ワンタッチで強力なハンディに
片手でリリースボタンをつまむだけで強力なハンディになります。

Image: A user demonstrating the one-touch conversion of the stick vacuum into a powerful handheld unit.



軽量でも、長い駆動時間

握りやすくなったハンドルデザインで
長時間のお掃除でも楽に操作できます。



Image: The Shark vacuum being used in various settings, including floor cleaning, handheld spot cleaning, and reaching high areas with attachments.

MAINTENANCE

Automatic Dust Collection

- When the vacuum is returned to the automatic dust collection dock, debris is automatically transferred from the vacuum's dust cup to the dock's larger dust bin. This process also charges the vacuum.
- The dock's dust bin typically holds up to 30 days of debris, depending on usage and room size.

今までのゴミ捨て



Sharkのゴミ捨て



ほこりが舞い上がる都度のゴミ捨てから解放

紙パック不要。エコで経済的。

Image: A comparison showing the traditional method of manually emptying a dust cup versus the automatic, hands-free dust collection system of the Shark dock.

Emptying the Dust Cup (Manual)

- If not using the auto-empty dock, or for quick emptying, press the dust cup release button to detach it from the handheld unit.
- Hold the dust cup over a trash bin and press the release lever to open the bottom flap and empty debris.



ワンタッチでゴミ捨て

Image: A hand demonstrating how to manually empty the vacuum's dust cup into a trash bin with a single touch.

Cleaning the Filter

- The filter is located inside the dust cup. Twist to remove it.
- Rinse the filter with cold water. Tap loose dirt off between washes.
- Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use a hairdryer or other heating methods.



お手入れ簡単、掃除機をいつもキレイに

※一部パーツの色が異なる場合があります。

Image: Hands cleaning the vacuum's filter under running water, illustrating the simple maintenance process.

Brush Roll Maintenance

- Regularly check the brush roll for hair wraps or debris.
- To access the brush roll, open the brush roll garage on the power head.
- Use scissors to carefully cut away any hair or string wrapped around the brush roll.

TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Vacuum not turning on	Battery not charged or incorrectly inserted.	Ensure battery is fully charged and properly inserted.
Low suction power	Dust cup full, filter clogged, or blockage in nozzle/hose.	Empty dust cup, clean filter, check for and remove blockages.

Problem	Possible Cause	Solution
Brush roll not spinning	Obstruction in brush roll, or power head not properly connected.	Remove any obstructions from the brush roll. Ensure power head is securely attached.
Automatic dust collection not working	Vacuum not properly seated on dock, or dock's dust bin is full.	Ensure vacuum is correctly aligned on the dock. Empty the dock's dust bin.

SPECIFICATIONS

- **Brand:** Shark
- **Model Name:** LC551J
- **Model Number:** LC551JBK
- **Manufacturer:** SharkNinja
- **Color:** Grape Black
- **Form Factor:** Stick
- **Cordless:** Yes
- **Battery Type:** Lithium Ion
- **Lithium Battery Pack:** Battery built-in
- **Batteries Required:** Yes
- **Batteries Included:** Yes
- **Package Dimensions:** 55.6 x 42 x 28.9 cm
- **Package Weight:** 8.93 Kilograms

WARRANTY INFORMATION

Please refer to the warranty card included with your product for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or to order replacement parts, please visit the official SharkNinja website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.