

## JIUSAIRUI B0DFL7RWS2

# JIUSAIRUI 120dB Electronic Bear Horn Instruction Manual

## 1. INTRODUCTION

The JIUSAIRUI 120dB Electronic Bear Horn is designed as a safety device for outdoor enthusiasts. It emits a powerful sound to alert and deter bears and other wildlife, enhancing safety during activities such as hiking and camping. This manual provides essential information for the proper use, maintenance, and care of your electronic bear horn.

## 2. PRODUCT OVERVIEW

The electronic bear horn is a compact, handheld device featuring a sound emitter, a control button, and a sound mode switch. It is designed for easy portability and quick access.

# Choice of 3 Sound Effects

Easy to Use: Simply press the button to emit a 120dB~150dB sound



Image 2.1: Front view of the JIUSAIRUI Electronic Bear Horn.



Image 2.2: The electronic bear horn showing its compact size and the three available sound options.

### 3. SETUP

#### 3.1 Battery Installation

The device requires 4 CR2 lithium batteries (included). To install or replace batteries:

1. Locate the battery compartment, typically at the base or side of the unit.
2. Open the compartment cover.
3. Insert the 4 CR2 batteries, ensuring correct polarity (positive and negative terminals aligned as indicated).
4. Close the battery compartment cover securely.

If the sound becomes abnormal, please replace the batteries. A fresh set of batteries provides a minimum of 6 months of use.

#### 3.2 Initial Check

After battery installation, perform a brief test in a safe, open area away from people and animals to ensure the horn is functioning correctly. Point the horn away from your ears during testing.

## 4. OPERATING INSTRUCTIONS

The JIUSAIRUI Electronic Bear Horn is designed for easy, one-handed operation. It features a sound mode switch and a main activation button.

### 4.1 Selecting Sound Modes

The horn offers three distinct sound options to suit various situations. Use the sound shift switch (labeled OFF, TONE 1, TONE 2, TONE 3) to select your desired sound:

- **OFF:** Turns the device off. Always set to OFF when not in use to conserve battery.
- **TONE 1 (Sharp Animal Horn):** A high-pitched sound effective for smaller animals or as a general alert.
- **TONE 2 (Bear Horn):** A specific sound frequency designed to deter bears.
- **TONE 3 (Large Animal Roar Horn):** A deeper, more aggressive sound for larger wildlife.

**You can choose from three modes.**



large animal  
roar horn



Bear horn




Sharp  
animal horn



Electronic Bear Horn

**Electronic Bear Horn VS Common Air Horn**

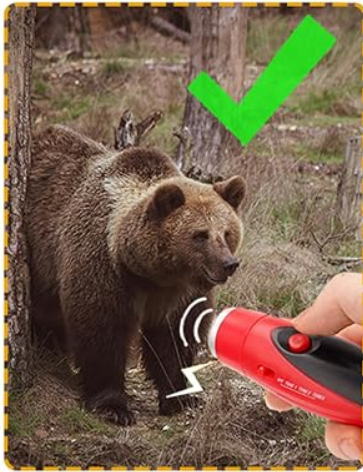



- ✓ The sound propagation distance is farther.
- ✓ One-hand operation convenient for mounting
- ✓ Three sound options. With choices available.
- ✓ Battery has better endurance and longer use.

- ✗ Sound bite
- ✗ Only in the bag, inconvenient to use
- ✗ Only one sound.
- ✗ Limit number of times

Image 4.1: Visual representation of the three sound options: Sharp Animal Horn, Bear Horn, and Large Animal Roar Horn.

### 4.2 Activating the Horn

Once a sound mode is selected, simply press the main button to emit the chosen 120dB to 150dB sound. Release the button to stop the sound.

### 4.3 Usage Recommendations

- **Proactive Deterrence:** Use the horn frequently before you see a bear or other wildlife, especially in areas known for animal activity. This helps to keep animals away from your immediate vicinity.
- **Distance:** The horn is most effective when used from a distance to prevent close encounters. It **is not designed for deterring bears that have already seen you** and are in close proximity.
- **Alerting Others:** The loud sound can also serve as an emergency signal to alert other hikers or campers to your presence or a potential threat.

## NOT DESIGNED FOR DETERRING BEARS THAT ALREADY SEE YOU



Image 4.2: Demonstrates using the bear horn proactively to keep bears away from an area.



Image 4.3: The 120dB horn emits a powerful sound to alert and scare off nearby bears.

Video 4.4: Official product video demonstrating the usage and sound levels of the JIUSAIRUI Electronic Bear Horn.

## 5. MAINTENANCE

To ensure the longevity and reliable performance of your JIUSAIRUI Electronic Bear Horn, follow these maintenance guidelines:

- **Storage:** Avoid storing the device in direct sunlight or under high temperatures for extended periods, as this can lead to electronic malfunction or battery damage.
- **Moisture Protection:** Do not expose the horn to water or wet conditions. Moisture can cause short-

circuit damage to the internal electronics.

- **Physical Protection:** While durable, avoid dropping the device or subjecting it to strong impacts with hard objects to prevent physical damage to the shell and internal components.
- **Cleaning:** Wipe the exterior with a dry, soft cloth. Do not use harsh chemicals or abrasive cleaners.

## 6. SAFETY WARNINGS

Please read and adhere to the following safety warnings to prevent injury and ensure proper use:

- **Hearing Protection:** The horn emits a very loud sound (120dB-150dB). Avoid sounding it directly into your or anyone else's ears to prevent hearing damage.
- **Not a Toy:** This product is not a toy. Keep it out of reach of children.
- **Direction of Use:** When activating the horn, always point it away from people and animals.
- **Situational Awareness:** This horn is a deterrent tool. It is most effective for proactive deterrence from a distance. It is **not designed for deterring bears that have already seen you** and are in a confrontational situation. Maintain situational awareness and follow all local wildlife safety guidelines.



Image 6.1: Important safety reminder: The horn is for proactive deterrence, not for close-range encounters.

## 7. TROUBLESHOOTING

- **No Sound or Abnormal Sound:** If the horn produces no sound or an abnormal sound, the batteries may be low or incorrectly installed. Replace the 4 CR2 batteries with new ones, ensuring correct polarity.
- **Intermittent Operation:** Check the battery compartment for secure contact. Ensure the sound mode switch is fully engaged in one of the TONE positions.
- **Device Not Turning On:** Verify that the batteries are fresh and correctly inserted. If the issue persists, contact customer support.

## 8. SPECIFICATIONS

|                                       |                                      |
|---------------------------------------|--------------------------------------|
| <b>Brand</b>                          | JIUSAIRUI                            |
| <b>Model</b>                          | B0DFL7RWS2                           |
| <b>Audible Noise Level</b>            | 120dB - 150dB                        |
| <b>Maximum Range</b>                  | 0.5 Miles (approx. 800 meters)       |
| <b>Power Source</b>                   | Battery Powered                      |
| <b>Battery Type</b>                   | 4 x CR2 Lithium batteries (included) |
| <b>Control Method</b>                 | Touch (Button)                       |
| <b>Product Dimensions (L x W x H)</b> | 3.7" x 3.7" x 5.5"                   |
| <b>Item Weight</b>                    | 3.52 ounces                          |
| <b>Material</b>                       | Superior ABS material                |

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact the retailer from whom you purchased the JIUSAIRUI Electronic Bear Horn. Keep your purchase receipt as proof of purchase.