

DASH DVAF700GBGY01

DASH 7qt Clear View Digital Air Fryer Instruction Manual

Model: DVAF700GBGY01

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your DASH 7qt Clear View Digital Air Fryer. Please read all instructions thoroughly before first use and retain this manual for future reference.

The DASH 7qt Clear View Digital Air Fryer utilizes AirCrisp® Technology to circulate hot air, offering a method for cooking various foods. Its 7-quart capacity and digital touchscreen with preset options are designed for user convenience. The integrated Clear View drawer allows monitoring of the cooking process.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your air fryer:

- Main Unit Housing
- Digital Touchscreen Control Panel
- 7-Quart Crisper Basket with Handle
- Clear View Window
- Removable Crisper Tray
- Air Outlet Vent (rear)
- Power Cord



Image: Front view of the DASH 7qt Clear View Digital Air Fryer in Forged Iron, showing the digital display and the clear view basket with food.

SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and any promotional labels or stickers from the air fryer.
2. **Clean:** Wash the Crisper Basket and Crisper Tray with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space around the unit.
4. **Power:** Plug the power cord into a grounded electrical outlet. The control panel will illuminate briefly.
5. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15

minutes at 350°F (175°C) to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal. Ensure adequate ventilation.

OPERATING INSTRUCTIONS

Digital Touchscreen Control Panel



THE WHISPER CRISPER

Cooks at *below* 65 decibels!

Image: Close-up of the digital touchscreen control panel, displaying various preset icons for different food types.

The air fryer features a digital touchscreen for easy operation. The main display shows temperature and time. Icons represent preset cooking functions, and buttons allow for manual adjustments.

Cooking with Presets

The air fryer includes 11 preset cooking functions for common foods:

- French Fries
- Bacon
- Chicken
- Steak
- Dessert

- Vegetables
- Toast
- Fish
- Wings
- Warm
- Defrost

1. Place food into the Crisper Basket. Ensure the Crisper Tray is inserted.
2. Insert the Crisper Basket firmly into the main unit.
3. Press the Power button to turn on the unit.
4. Select the desired preset icon. The display will show the default temperature and time for that preset.
5. Press the Start/Pause button to begin cooking.

Manual Temperature and Time Adjustment

To customize cooking settings:

1. Place food into the Crisper Basket and insert it into the unit.
2. Press the Power button.
3. Use the Temperature (+) and (-) buttons to set the desired temperature (up to 400°F).
4. Use the Time (+) and (-) buttons to set the desired cooking time (up to 60 minutes).
5. Press the Start/Pause button to begin cooking.

Shake Reminder Function

For even cooking and crispier results, the air fryer features a Shake Reminder. During certain cooking cycles, the unit will beep and display a "SHAKE" icon, prompting you to shake or flip the food in the basket. Simply pull out the basket, shake or flip the contents, and reinsert the basket to resume cooking.

Clear View Window

See when **FOOD IS READY**

Clear View Basket takes the *guesswork*
out of cooking!



Image: The DASH Air Fryer with its clear view window, allowing visual monitoring of food during the cooking process.

The Clear View window allows you to monitor your food's progress without opening the basket, which helps maintain consistent cooking temperature and time.

AirCrisp® Technology



CRISPY & GUILT-FREE

AirCrisp® Technology cooks using hot air instead of oil for *delicious* results with up to 75% less fat.

Image: Illustration of AirCrisp Technology, showing hot air circulating around food for crispy results.

This technology uses 360° hot air circulation to cook food, reducing the need for oil compared to traditional deep frying methods.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Crisper Basket and Tray:** The Crisper Basket and Crisper Tray are **not dishwasher safe**. Wash them with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing or next use.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth. For stubborn food residue, use a mild detergent and a non-abrasive sponge. Ensure the interior is dry before use.
4. **Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
5. **Never Immerse:** Never immerse the main unit, power cord, or plug in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; unit not properly assembled.	Ensure the power cord is securely plugged into a working outlet. Check if the Crisper Basket is fully inserted.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped.	Do not overcrowd the basket. Cook in smaller batches if necessary. Utilize the Shake Reminder function and shake/flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; cooking fatty foods.	Clean the Crisper Basket and Tray thoroughly after each use. For fatty foods, consider using parchment paper or draining excess fat during cooking.
Food is not crispy.	Too much moisture; basket overcrowded; incorrect temperature/time.	Pat food dry before air frying. Do not overcrowd. Adjust temperature or cooking time as needed.

SPECIFICATIONS

Brand	DASH
Model Name	Clear View Digital Air Fryer
Model Number	DVAF700GBGY01
Capacity	7 Quarts
Color	Forged Iron
Product Dimensions	11.8"D x 12.8"W x 15.28"H
Item Weight	14.76 pounds
Material	Polypropylene (PP)
Output Wattage	1500 Watts
Voltage	120 Volts (AC)
Control Method	Touch
Max Temperature Setting	400 Degrees Fahrenheit
Air Frying Technology	AirCrisp®
Nonstick Coating	No
Dishwasher Safe Parts	No
UPC	810137392127





WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included with your product or visit the official DASH website. Keep your purchase receipt as proof of purchase.

For further assistance, you may contact DASH customer service directly.

© 2025 DASH. All rights reserved.

Related Documents - DVAF700GBGY01

 <p>DELUXE AIR FRYER AirCrisp™ Technology 6-Quart Capacity 1700 Watts</p>	<p>Dash Deluxe Air Fryer: User Manual, Features, and Recipes</p> <p>Comprehensive guide for the Dash Deluxe Air Fryer (DFAF455GB), including important safety instructions, parts and features, usage guide, cleaning tips, troubleshooting, and a collection of delicious recipes.</p>
 <p>DIGITAL TASTI-CRISP™ AIR FRYER Instructional Manual Recipe Guide</p>	<p>Dash Tasti-Crisp™ Digital Air Fryer Instruction Manual and Recipe Guide</p> <p>Comprehensive guide for the Dash Tasti-Crisp™ Digital Air Fryer, including important safety information, parts and features, operating instructions, tips and tricks, temperature charts, cleaning and maintenance, troubleshooting, and a variety of recipes.</p>
 <p>COMPACT AIR FRYER AirCrisp™ Technology 2-Quart Capacity 1100 Watts</p>	<p>Dash Compact Air Fryer DCAF150: User Manual, Recipes & Support</p> <p>Comprehensive guide for the Dash Compact Air Fryer (DCAF150), including important safety instructions, parts identification, usage tips, troubleshooting, a detailed recipe book, and customer support information.</p>
 <p>DIGITAL COMPACT AIR FRYER AirCrisp™ Technology 2-Quart Capacity 1100 Watts</p>	<p>Dash Digital Compact Air Fryer DCAF155 User Manual and Recipe Book</p> <p>Comprehensive user manual for the Dash Digital Compact Air Fryer (DCAF155) featuring AirCrisp™ Technology. Includes detailed safety instructions, operating guide, parts identification, usage tips, cooking charts, cleaning and maintenance, troubleshooting, a collection of recipes, customer support information, and warranty details.</p>
<p>User Manual of Product 1: Dash Tasti-Crisp™ Digital Air Fryer with AirCrisp Technology. Custom Presets, Temperature Control, and Auto Shut-Off. Features: 5.8-Quart, 1400W.</p> <p>User Manual of Product 2: Dash Mini Rice Cooker Steamer with Removable Nonstick Pot. Features: 1.8-Quart, 1000W, 12 Presets, for Soups, Steams, Omelets & Grilled - Apples.</p>	<p>DASH Air Fryer & Rice Cooker User Manual and Recipe Guide</p> <p>Comprehensive user manual and recipe guide for the DASH Tasti-Crisp™ Digital Air Fryer (DCAF260) and the DASH Mini Rice Cooker Steamer (DRCM200), featuring setup, operation, maintenance, troubleshooting, and recipes.</p>



[Dash DCAF260 Digital Tasti-Crisp Air Fryer: Instruction Manual & Recipe Guide](#)

Comprehensive instruction manual and recipe guide for the Dash DCAF260 Digital Tasti-Crisp Air Fryer. Learn how to safely operate, maintain, and use this kitchen appliance for delicious air-fried meals.