

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NBD](#) /

› [NBD 64MP 5K Vlogging Digital Camera Instruction Manual \(Model NBD-G700-UK\)](#)

NBD NBD-G700-UK

NBD 64MP 5K Vlogging Digital Camera Instruction Manual

Model: NBD-G700-UK



INTRODUCTION

This manual provides detailed instructions for the NBD 64MP 5K Vlogging Digital Camera, Model NBD-G700-UK. Please read this manual thoroughly before using your camera to ensure proper operation and to maximize its features. Keep this manual for future reference.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- NBD 64MP 5K Digital Camera (NBD-G700-UK)
- Lithium-ion Batteries (x2)
- Battery Charger
- USB 2.0 Cable
- 32GB SD Card
- Card Reader
- Camera Strap
- User Manual (this document)



Image: The NBD 64MP 5K Digital Camera shown with its accessories, including two batteries, a charger, USB cable, 32GB SD card, card reader, and camera strap.

CAMERA COMPONENTS

Familiarize yourself with the main parts of your camera:

- **Lens:** Captures images and videos.
- **Flash:** Provides additional light in low-light conditions.
- **Shutter Button:** Press to take photos or start/stop video recording.
- **Mode Dial:** Selects different shooting modes (Photo, Video, Setup, etc.).
- **3-inch Flip Screen:** Displays live view, menus, and playback. Can rotate 180 degrees for vlogging.
- **Navigation Buttons:** For menu navigation and settings adjustment.
- **Battery Compartment:** Holds the Lithium-ion battery.
- **SD Card Slot:** For inserting the memory card.
- **USB Port:** For charging and data transfer.

SETUP

1. Battery Installation and Charging

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the Lithium-ion battery, ensuring the correct orientation as indicated inside the compartment.
3. Close the battery compartment cover securely.
4. To charge, connect the camera to the battery charger using the provided USB cable, or insert the battery into the external charger. The charging indicator will illuminate.
5. Charging is complete when the indicator light changes or turns off.

2. SD Card Installation

1. Locate the SD card slot, usually on the side or bottom of the camera.
2. Insert the 32GB SD card with the metal contacts facing the front of the camera until it clicks into place.
3. To remove, gently press the SD card until it springs out.

3. Powering On/Off

- To power on, press and hold the Power button until the screen illuminates.
- To power off, press and hold the Power button again until the screen turns off.

4. Initial Settings

- Upon first use, the camera may prompt you to set the date and time. Use the navigation buttons to adjust and confirm.
- Navigate to the 'Setup' menu using the mode dial to configure language, resolution, and other preferences.

EASY TO USE AND CARRY

Upgraded Portable Camera with Dial



PHOTO



PORTRAIT



VIDEO



SLOW-MOTION



SETUP



NIGHT



SCENERY



EFFECTS

Image: The camera's mode dial, illustrating options such as Photo, Portrait, Video, Slow-Motion, Setup, Night, Scenery, and Effects.

OPERATING THE CAMERA

1. Basic Photography

- Turn the mode dial to 'Photo' mode.
- Frame your shot using the 3-inch screen.
- Autofocus:** Gently press the shutter button halfway down. A green box will appear on the screen indicating successful focus.
- Zoom:** Use the zoom lever (typically around the shutter button) to adjust the 18x digital zoom.
- Press the shutter button fully to capture the image. The camera captures photos at 64MP resolution.

18X ZOOM FOR LONG DISTANCE SHOOTING



Image: Visual representation of the camera's 18x digital zoom capability and the autofocus function, showing a clear focus box.

2. Video Recording (5K Vlogging)

1. Turn the mode dial to 'Video' mode. The camera supports 5K video resolution.
2. For vlogging, flip the screen 180 degrees towards you to monitor your recording.
3. Press the shutter button to start recording. A red indicator will typically appear on the screen.
4. Press the shutter button again to stop recording.

QUICK USE, ONE-HANDED OPERATION

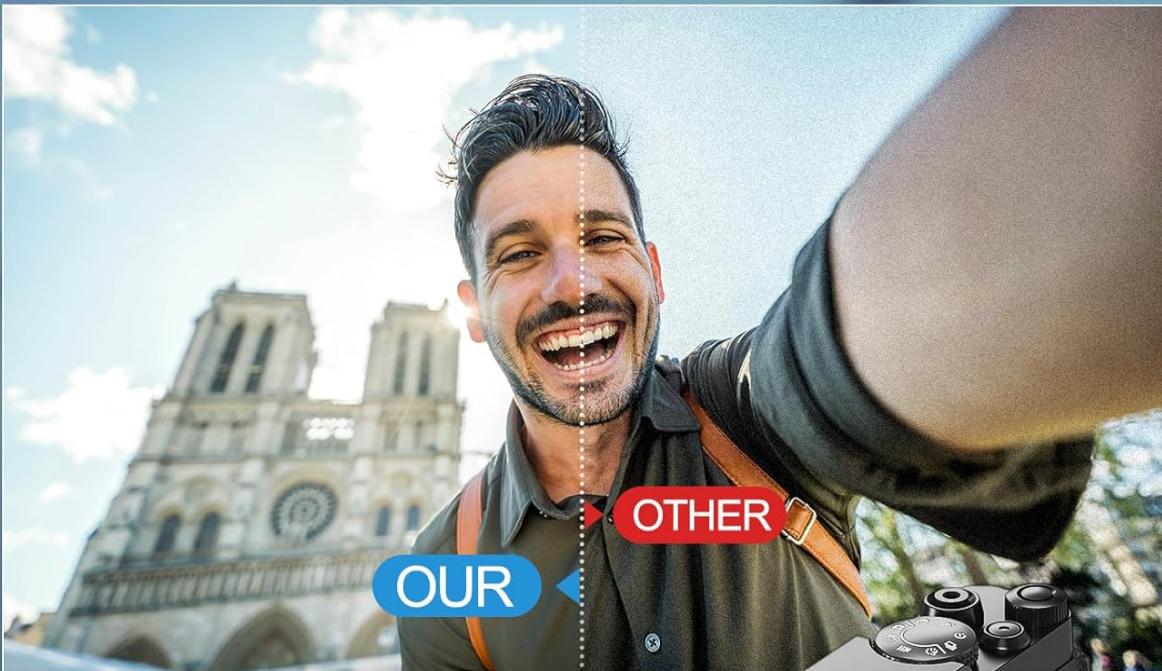


Image: The NBD Digital Camera demonstrating its 180-degree rotatable screen, ideal for self-recording and vlogging.

3. Special Features

- Built-in Flash:** Activate the flash for improved lighting in dark environments.
- Recording While Charging:** The camera supports operation while connected to a power source.
- Face Detection:** The camera can automatically detect and focus on faces in the frame.
- Continuous Shooting:** Capture a rapid sequence of photos by holding down the shutter button.
- Self-Timer:** Set a delay (e.g., 3s, 5s, 10s) before a photo is taken, allowing you to be in the shot.
- Fill Light:** Use the integrated fill light for additional illumination during photo or video capture.
- Slow-Motion:** Record videos in slow motion by selecting the appropriate mode.
- Time-lapse:** Capture a series of images over time to create a time-lapse video.

ON


BUILT-IN FLASH

OFF



RECORDING WHILE CHARGING

FACE DETECTION

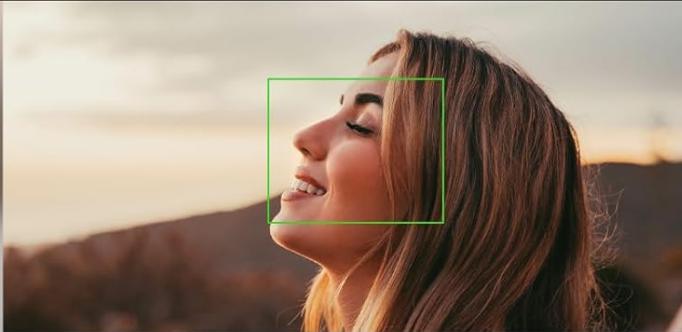

CONTINUOUS SHOOTING

SELF-TIMER



Image: A collage illustrating various camera functions including the built-in flash, ability to record while charging, face detection, continuous shooting, and self-timer options.

4. Webcam Functionality

- Connect the camera to your computer using the USB cable.
- Select 'Webcam Mode' on the camera screen (if prompted).
- Your computer should recognize the camera as a webcam, allowing its use for live streaming or video calls.



WEBCAM FOR LIVE STREAM



VIDEO CHAT VIDEO LOG

Image: The NBD Digital Camera connected to a laptop, demonstrating its functionality as a webcam for live streaming and video conferencing.

MAINTENANCE

1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Ensure the camera is powered off before cleaning.

2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- Do not expose batteries to extreme temperatures.

3. Storage

- When storing the camera for extended periods, remove the battery.
- Keep the camera in a protective bag or case to prevent dust and scratches.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is dead or incorrectly inserted.	Charge the battery or re-insert it correctly.
Cannot take photos/videos.	SD card is full, locked, or not inserted.	Insert a new/unlocked SD card, or free up space.
Images are blurry.	Autofocus failed, camera shake, or dirty lens.	Ensure autofocus engages, hold camera steady, clean the lens.
Flash not working.	Flash is disabled or battery is low.	Enable flash in settings, charge battery.
Camera freezes.	Software glitch.	Remove and re-insert the battery to reset.

SPECIFICATIONS

Feature	Detail
Model	NBD-G700-UK
Effective Still Resolution	64 Megapixels
Video Resolution	5K (2880p)
Sensor Technology	CMOS
Screen	3-inch OLED, 180-degree flip
Digital Zoom	18x
Optical Zoom	12x
Minimum Shutter Speed	1/4000 seconds
Connectivity Technology	USB
Battery Type	Lithium-ion (x2 included)
Included Memory	32GB SD Card
Weight	280g (camera body only) / 595g (package weight)
Color	Black

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or visit the official NBD website. Keep your proof of purchase for warranty claims.

For further assistance, contact NBD customer service through the contact details available on their official support page.

© 2025 NBD. All rights reserved.

Related Documents - NBD-G700-UK

<p>User Manual for S210</p> 	<p>NBD S210 Digital Camera User Manual</p> <p>Comprehensive user manual for the NBD S210 digital camera, covering setup, features, shooting modes, settings, and connectivity.</p>
<p>User Manual for D100 Video Camera</p> 	<p>D100 PRO 5K Ultra HD Video Camera User Manual</p> <p>Comprehensive user manual for the D100 PRO 5K Ultra HD Video Camera, covering setup, operation, troubleshooting, and maintenance. Learn how to charge the battery, insert memory cards, connect to devices, and utilize various camera features.</p>
<p>User Manual</p> 	<p>NBDair Air Purifier User Manual</p> <p>Comprehensive user manual for the NBDair NBD-AFU0 air purifier, covering essential safety instructions, setup procedures, operational guidance, filter replacement, maintenance, troubleshooting, technical specifications, packing details, and FCC compliance information.</p>
	<p>Huawei MateBook D14/D15 Quick Start Guide</p> <p>This document provides a quick start guide for the Huawei MateBook D14 and D15 laptops, covering powering on, charging, safety information, disposal and recycling, RF exposure, and regulatory compliance. It is available in multiple languages.</p>
 <p>NBD</p> <ul style="list-style-type: none">■ QUICKSTART GUIDE■ GUÍA DE POCO RAPIDO■ GUIDE DE POCO RAPIDO■ KURZEN RÜCKE■ KURZANLEITUNG	<p>Tern NBD Electric Bike Quickstart Guide: Setup, Features, and Riding</p> <p>Get started with your Tern NBD urban e-bike. This quickstart guide covers setup, intended use, weight limits, riding instructions, lighting, locking, parking, and folding. Learn about assistance levels and key features.</p>

User Manual for S210



[NBD S210 Digital Camera User Manual](#)

Comprehensive user manual for the NBD S210 digital camera, covering setup, features, shooting modes, settings, and connectivity.