

OWAAE 1500W Portable Electric Space Heater

OWAAE 1500W Portable Electric Space Heater
Instruction Manual

Model: 1500W Portable Electric Space Heater

	Safety Instructions	Product Overview	Setup	Operating
Instructions	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using this electric space heater. Failure to follow these instructions may result in fire, electric shock, or injury.

General Safety Precautions

- Always plug the heater directly into a wall outlet. Never use with an extension cord or relocatable power tap.
- Do not place the heater near curtains, furniture, bedding, or other combustible materials. Maintain a minimum distance of 3 feet (0.9 meters) from all sides.
- Do not use the heater in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Supervise children and pets when the heater is in operation.
- Unplug the heater when not in use.

Built-in Safety Features

This OWAAE space heater is equipped with multiple safety features for user protection:

- **Tip-Over Protection:** The heater automatically shuts off if it is accidentally tipped over.
- **Overheat Protection:** The heater will automatically turn off if it detects an internal temperature that is too high.
- **V-0 Flame Retardant Material:** Constructed with materials designed to resist and prevent the spread of fire.
- **Enhanced Safety Plug:** Designed for secure and safe electrical connection.

Multiple Safeguards for Your Peace of Mind



Image: OWAAE Electric Space Heater highlighting multiple safety features including tip-over protection, V-0 flame retardant material, PTC ceramic heating, overheat protection, enhanced safety plug, and ETL listing.

2. PRODUCT OVERVIEW

The OWAAE 1500W Portable Electric Space Heater is designed to provide efficient and comfortable heating for indoor spaces. It features advanced PTC ceramic heating technology, multiple operating modes, and user-friendly controls.

Key Features

- **1500W PTC Ceramic Heating:** Provides rapid and efficient heat distribution.
- **60° Oscillation:** Distributes warmth evenly across a wider area.
- **3 Heating Levels:** Offers versatile heating options (Low, High, ECO).
- **Adjustable Thermostat:** Allows precise temperature control from 41°F to 95°F in 1-degree increments.
- **12-Hour Timer:** For convenient automatic shut-off.
- **Quiet Operation:** Operates at approximately 36dB, suitable for bedrooms and offices.

- **Touch Control Panel & Remote Control:** Easy operation from the unit or at a distance.
- **Portable Design:** Compact and lightweight for easy relocation.



Image: Top-down view of the OWAEE Electric Space Heater showing the touch control panel with buttons for oscillation, timer, thermostat adjustment, mode selection, and power. Dimensions of 15.7 inches height and 5.9 inches width are indicated.

3. SETUP

Setting up your OWAEE Electric Space Heater is quick and easy.

Unpacking and Placement

1. Carefully remove the heater from its packaging.
2. Place the heater on a firm, level surface. Ensure it is not placed on soft surfaces like rugs or carpets that could block the air intake.
3. Ensure there is at least 3 feet (0.9 meters) of clear space around the heater to allow for proper airflow and prevent fire hazards.

4. Plug the heater directly into a 120V AC electrical outlet. Do not use extension cords or power strips.



Image: The OWAAE Electric Space Heater positioned on a wooden floor in a room, demonstrating its compact size and showing the digital display with temperature settings and an arrow indicating 1-degree increments for the adjustable thermostat.

4. OPERATING INSTRUCTIONS

Your OWAAE Electric Space Heater can be operated using the touch control panel on the top of the unit or the included remote control.

Power On/Off

- Press the **Power** button (power symbol) on the control panel or remote to turn the heater on or off.
- When turning off, the heater will count down from 30 seconds to allow the internal components to cool down before fully shutting off.

Temperature Adjustment

- Use the **+** and **-** buttons on the control panel or remote to set your desired temperature.
- The temperature can be set between 41°F and 95°F in 1-degree increments.

Mode Selection

- Press the **Mode (M)** button on the control panel or remote to cycle through the available heating modes:
 - **High Heat (1500W):** Provides maximum warmth.
 - **Low Heat (900W):** Provides moderate warmth.
 - **ECO Mode:** Automatically adjusts heating power to maintain the set temperature, optimizing energy consumption.



Image: The OWAAE Electric Space Heater in a living room setting, illustrating the energy-saving ECO Mode with a graph showing reduced energy consumption compared to other heaters.

Oscillation Function

- Press the **Oscillation (circular arrow)** button on the control panel or remote to activate or deactivate the 60°

oscillation feature.

- Oscillation helps distribute heat more broadly across the room.



Image: The OWAAE Electric Space Heater on a wooden floor, showing heat radiating in a 60-degree arc across a living room towards a person relaxing on a sofa, illustrating its quick heating and wide-angle oscillation.

Timer Function

- Press the **Timer (clock symbol)** button on the control panel or remote to set an automatic shut-off time.
- The timer can be set for up to 12 hours. Each press increases the timer by one hour.

Quiet Operation

The heater is designed to operate quietly, producing approximately 36dB of sound, making it suitable for use in quiet environments like bedrooms or offices.

Quietly Warming Frigid Winter Nights



Image: The OWAEE Electric Space Heater in a bedroom at night, showing a digital display and a sound level indicator at 36dB, emphasizing its quiet operation for undisturbed sleep.

Video Demonstration: Product Features

Video: A demonstration of the OWAEE Electric Space Heater's features, including its heating capabilities and design. This video is provided by Culanta Store.

Video Demonstration: Portability and Remote Control

Video: A short demonstration highlighting the portability of the OWAEE Electric Space Heater and the convenience of its remote control. This video is provided by Brittany Vogt.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

Cleaning

- 1. Always unplug the heater and allow it to cool completely before cleaning.
- 2. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- 3. Use a vacuum cleaner with a brush attachment to gently remove dust and lint from the air intake and exhaust grilles.
- 4. Ensure no water or other liquids enter the interior of the heater.

Storage

When storing the heater, keep it in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

6. TROUBLESHOOTING

If you encounter issues with your OWAAE Electric Space Heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in, power outlet issue, power button not pressed, safety feature activated.	Ensure the heater is securely plugged into a working 120V outlet. Press the power button. Check if the tip-over or overheat protection has been activated (reposition or allow to cool).
Heater turns off unexpectedly.	Tip-over protection activated, overheat protection activated, timer set.	Ensure the heater is on a stable, level surface. Check for obstructions around the heater that might cause overheating; allow it to cool down. Verify if the timer function is active.
Heater is not producing enough heat.	Low heat mode selected, thermostat set too low, room size too large.	Switch to High Heat mode (1500W). Increase the thermostat setting. Ensure the heater is appropriate for the room size (rated for up to 200 sq ft).
Oscillation is not working.	Oscillation function not activated.	Press the Oscillation button on the control panel or remote to activate.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- Brand: OWAAE
- Special Feature: Overheat Protection
- Form Factor: Tower
- Indoor/Outdoor Usage: Indoor
- Recommended Uses For Product: Office, Bedroom, Home Office, Study Room
- Mounting Type: Tabletop Mount
- Heating Coverage: 200 square feet
- Burner type: Radiant
- Fuel Type: Electric
- Number of Speeds: 3 (Low, High, ECO)
- Voltage: 120 Volts (AC)
- Package Dimensions: 16.93 x 7.24 x 7.17 inches
- Item Weight: 4.4 pounds
- ASIN: B0DFLP55B8

Date First Available: August 29, 2024

Power Source: Electric

8. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official OWAAE website. Keep your purchase receipt for warranty claims.

© 2024 OWAAE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DFLP55B8>

More documents and user manuals: <https://manuals.plus/>