

[manuals.plus](#) /› [AIYAPLAY](#) /› [AIYAPLAY 5-in-1 Kids Adjustable Basketball Hoop Instruction Manual](#)**AIYAPLAY 331-050V00MX**

AIYAPLAY 5-in-1 Kids Adjustable Basketball Hoop Instruction Manual

Model: 331-050V00MX

1. INTRODUCTION AND PRODUCT OVERVIEW

Thank you for choosing the AIYAPLAY 5-in-1 Kids Adjustable Basketball Hoop. This versatile play set is designed to provide children aged 3 to 6 years with multiple sports activities, promoting physical coordination, strength, and social skills. It features a fun goldfish-themed hoop and offers five different play modes: basketball, golf, ring toss, ball toss, and soccer. The adjustable height ensures it grows with your child, providing years of enjoyment.



Image 1.1: Child enjoying the basketball hoop feature.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembly and use.

- **Adult Supervision Required:** This product must be used under direct adult supervision.
- **Age Recommendation:** Suitable for children aged 36 months to 6 years.
- **Stable Placement:** Ensure the base is filled with sand or water for maximum stability before use.
- **Check for Damage:** Regularly inspect all components for wear or damage. Discontinue use if any part is broken or compromised.
- **Clear Play Area:** Ensure the play area is clear of obstacles to prevent accidents.
- **Indoor/Outdoor Use:** Designed for both indoor and outdoor use. If used outdoors, protect from extreme weather conditions to prolong product life.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts listed below are present and undamaged.

- 1 x Basketball Hoop (main unit with goldfish backboard and net)

- 1 x Soccer Ball
- 1 x Hook (for ring toss)
- Assembly hardware (screws, nuts, etc. - typically included for assembly)
- Colorful stickers (for customization)



Image 3.1: Illustration of all components included in the package.

4. SETUP AND ASSEMBLY

Assembly is required for this product. Please follow these steps carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Refer to the package contents list to ensure everything is present.
2. **Assemble Base:** Connect the base components according to the diagrams provided in the separate assembly sheet. Ensure all connections are secure.
3. **Fill Base for Stability:** The triangular base is designed to be filled with sand or water to enhance stability. Locate the fill opening and add your chosen stabilizing material. Close the opening securely.



BASE ESTABLE

 **Agujero de Inyección de Agua para Aumentar el Peso**



Estructura Triangular

Image 4.1: Detail of the stable base with fill hole for water or sand.

4. **Attach Upright Pole:** Securely attach the upright pole to the assembled base using the provided hardware.
5. **Attach Basketball Hoop:** Mount the goldfish-themed basketball backboard and hoop to the top of the upright pole. Ensure it is firmly attached.

CANASTA DE BALONCESTO INFANTIL



Ejercicio

Coordinación

Habilidades Sociales

Image 4.2: The 5-in-1 design, including the basketball hoop.

6. **Install Additional Play Elements:** Attach the golf hole, ring toss hook, and ball toss mechanism to the pole as indicated in the assembly instructions.
7. **Adjust Height:** The pole features an adjustable height mechanism. Loosen the locking knob, slide the pole to the desired height (between 95 cm and 130 cm), and tighten the knob securely.

ALTURA AJUSTABLE

95-130 cm, crece con niños a partir de 3 años



Viene con pegatinas para que los niños puedan hacer su propio soporte de baloncesto

Image 4.3: The adjustable height mechanism, allowing the hoop to grow with your child.

8. **Apply Stickers:** Personalize the play set with the included colorful stickers.
9. **Final Check:** Before allowing children to play, double-check all connections and ensure the unit is stable and secure.

5. OPERATING INSTRUCTIONS (5-IN-1 PLAY MODES)

This play set offers five engaging activities. Ensure the product is assembled correctly and the base is stable before use.

• Basketball:

Adjust the hoop height to suit the child's age and skill level (95-130 cm). Use a lightweight basketball (not included, unless specified in package contents) to shoot hoops. This activity helps develop hand-eye coordination and gross motor skills.



Image 5.1: A child actively playing basketball with the adjustable hoop.

- **Soccer:**

The base of the unit includes a soccer goal. Use the included soccer ball to practice kicking and scoring goals. This promotes leg strength and coordination.

- **Golf:**

A golf hole is integrated into the base. Use a child-safe golf club (not included) and lightweight golf balls (not included) to practice putting. This enhances precision and fine motor skills.

- **Ring Toss:**

Attach the hook to the designated spot on the pole. Use lightweight rings (not included) to toss and hook onto the target. This improves aim and dexterity.



Image 5.2: Detail of the ring toss attachment.

- **Ball Toss:**

Utilize the ball toss mechanism on the pole. Use small, soft balls (not included) to practice throwing and catching. This helps develop throwing accuracy and hand-eye coordination.

6. MAINTENANCE

Regular maintenance will help ensure the longevity and safety of your AIYAPLAY 5-in-1 Kids Adjustable Basketball Hoop.

- **Cleaning:** Wipe down all surfaces with a damp cloth and mild soap as needed. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight and secure. Tighten any loose fasteners.
- **Base Stability:** Regularly check the water or sand level in the base and refill if necessary to maintain stability.
- **Storage:** If storing outdoors, consider covering the unit or moving it indoors during harsh weather to prevent material degradation.
- **Stickers:** If stickers begin to peel, re-adhere them or remove them to prevent choking hazards for younger children.

7. TROUBLESHOOTING

If you encounter any issues with your product, please refer to the following common solutions.

- **Unit is Unstable:**

Ensure the base is adequately filled with water or sand. Check that all screws and connections are tightened securely. Verify the unit is placed on a flat, level surface.

- **Parts Missing or Damaged:**

Refer to the "Package Contents" section and your assembly sheet. If parts are missing or damaged upon arrival, contact customer support immediately.

- **Difficulty Adjusting Height:**

Ensure the locking knob is fully loosened before attempting to adjust the pole height. Do not force the adjustment; if it's stiff, check for any obstructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	331-050V00MX
Overall Dimensions (L x W x H)	46 x 51 x 134-152 cm (18.1 x 20.1 x 52.8-59.8 inches)
Adjustable Height Range (Hoop)	95 cm - 130 cm (37.4 - 51.2 inches)
Recommended Age	36 months - 6 years
Material	High-Density Polyethylene (HDPE)
Product Weight	2.55 kg (5.6 lbs)
Assembly Required	Yes
Batteries Required	No

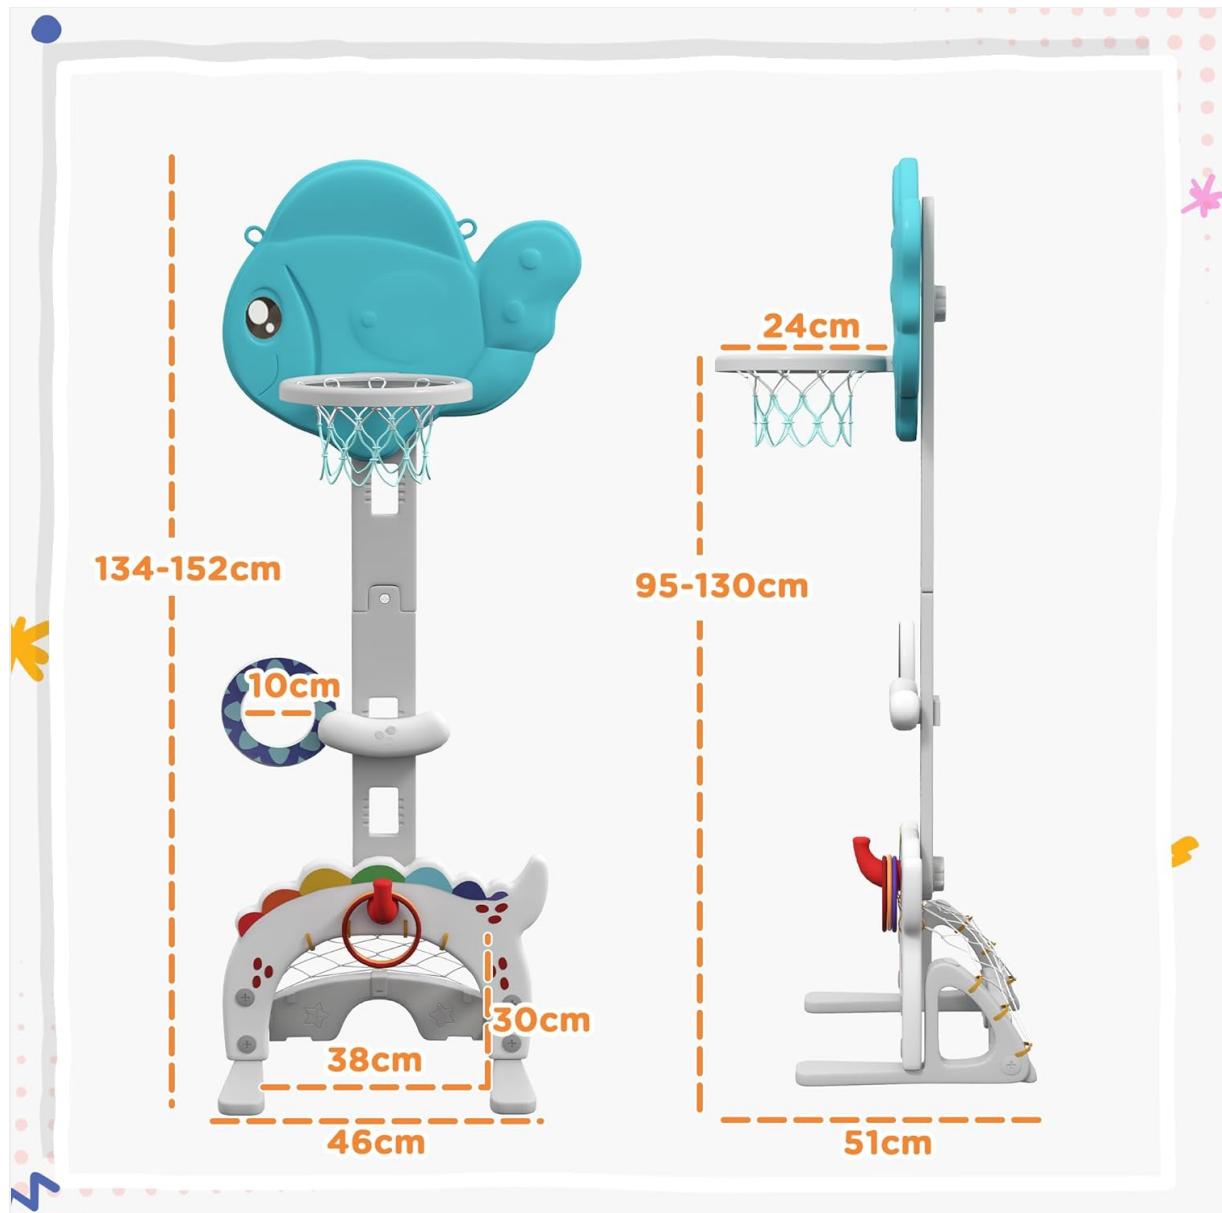


Image 8.1: Dimensional drawing of the product.

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact the seller directly through the platform where the product was purchased. Please have your model number (331-050V00MX) and purchase date ready when contacting support.