

Vacmaster CA0701EU

Vacmaster Carpet Cleaner CA0701EU Instruction Manual

Model: CA0701EU

INTRODUCTION

Thank you for choosing the Vacmaster Carpet Cleaner CA0701EU. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new carpet cleaner. Please read it thoroughly before first use and keep it for future reference.

The Vacmaster Carpet Cleaner CA0701EU is designed to refresh carpets, remove pet stains, and clean upholstery, stairs, and car interiors with its powerful 750W suction motor, high-pressure spray nozzle, and dual high-speed brush rollers.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Do not use with a damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Unplug from outlet when not in use and before cleaning or servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Vacmaster Carpet Cleaner Main Unit
- Flexible Hose (2.6m long)
- Hand Tools (interchangeable spray, brush, or vacuum tools)
- Spot & Pet Carpet Solution (sample size)
- Instruction Manual



Image: The Vacmaster Carpet Cleaner CA0701EU with its main unit, flexible hose, various hand tools, and a bottle of cleaning solution.


SETUP

1. Assembly

1. Carefully remove all components from the packaging.
2. Attach the handle to the main unit until it clicks securely into place.
3. Ensure the clean water tank and dirty water tank are correctly seated.

2. Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Unscrew the cap and fill the tank with warm tap water (max 40°C).
3. Add the recommended amount of Vacmaster cleaning solution to the tank. Do not overfill.
4. Securely replace the cap and reinsert the tank into the unit.

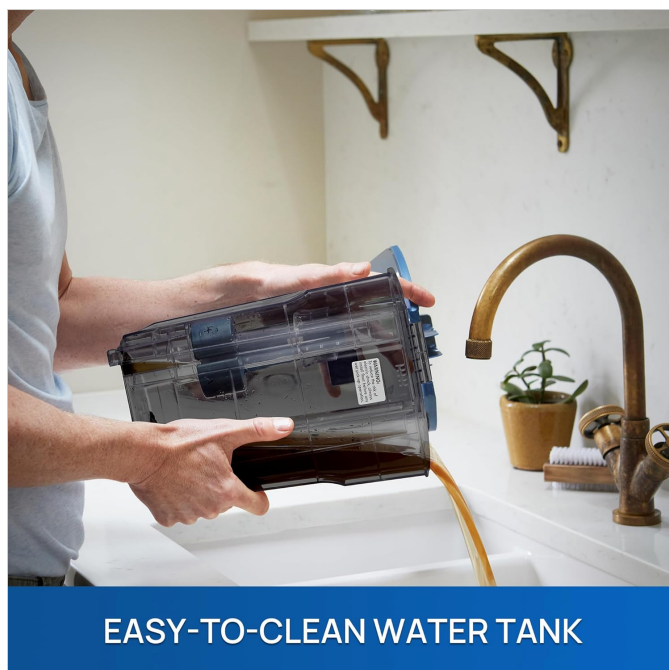

EASY-TO-CLEAN WATER TANK

Image: A person emptying the dirty water tank, demonstrating the easy-to-clean design. This image also shows the clean water tank on the other side of the unit.

OPERATING INSTRUCTIONS

1. Cleaning Carpets and Rugs

1. Plug the carpet cleaner into a suitable power outlet.
2. Turn on the power switch.
3. Press the trigger on the handle to dispense cleaning solution while pushing the unit forward slowly.
4. Release the trigger and pull the unit backward slowly to vacuum up the dirty solution. This helps accelerate drying time.
5. Repeat passes over the area until the water being vacuumed up appears clean.



Image: A person using the Vacmaster Carpet Cleaner on a carpet, demonstrating its upright operation.

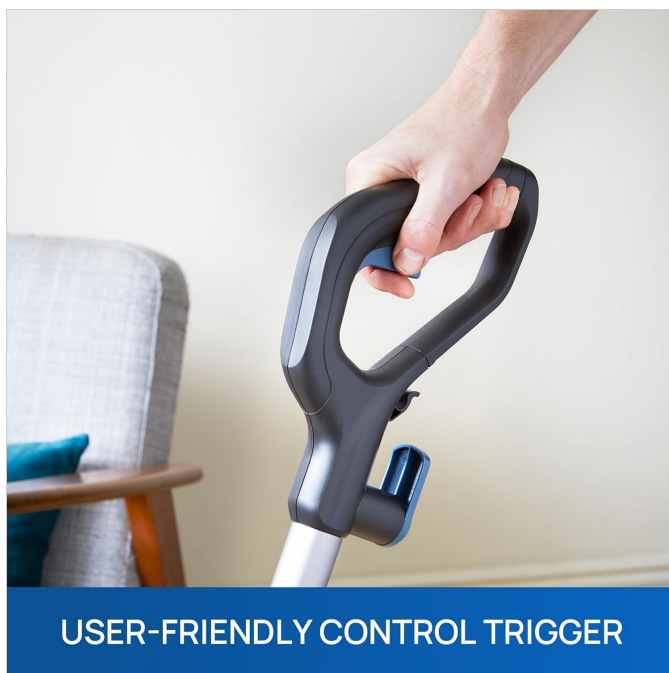


Image: A hand pressing the user-friendly control trigger located on the handle, which dispenses the cleaning solution.

2. Using the Flexible Hose and Hand Tools


1. Attach the 2.6m flexible hose to the designated port on the main unit.
2. Select the appropriate hand tool (spray, brush, or vacuum) for the surface you are cleaning (e.g., upholstery, stairs, car interior).

3. Turn on the power. Press the trigger on the hand tool to spray solution onto the stained area.
4. Gently scrub the area with the brush attachment if necessary.
5. Release the trigger and use the vacuum function of the hand tool to extract the dirty solution.



HOSE WITH EXTENDED REACH

Image: A person using the flexible hose with a hand tool to clean a sofa, highlighting the extended reach for upholstery.

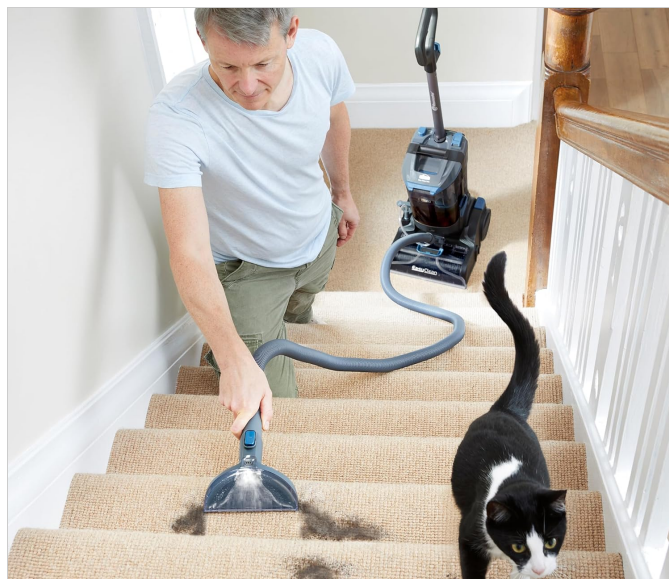

CLEAN ANYWHERE WITH EASE

Image: A person cleaning carpeted stairs using the flexible hose and hand tool, demonstrating versatility for hard-to-reach areas.

MAINTENANCE

1. Emptying and Cleaning the Dirty Water Tank

1. Turn off and unplug the appliance.
2. Remove the dirty water tank from the main unit.
3. Carefully empty the dirty water into a sink or drain.
4. Rinse the tank thoroughly with clean water.
5. Allow the tank to air dry before reassembling.

2. Cleaning Brush Rollers and Nozzle

1. After each use, inspect the brush rollers for any tangled hair or debris.
2. Remove the brush cover (refer to diagram in full manual for specific steps) and clean the rollers.
3. Rinse the spray nozzle to prevent clogging.
4. Ensure all parts are dry before reassembly and storage.



Image: Hands demonstrating the removal of the brush cover for cleaning and maintenance of the brush rollers.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Not plugged in; circuit breaker tripped.	Ensure plug is securely in outlet; check circuit breaker.
No spray	Clean water tank empty; spray nozzle clogged; trigger not pressed.	Refill clean water tank; clean spray nozzle; ensure trigger is fully pressed.
Poor suction	Dirty water tank full; dirty water tank not properly seated; hose/nozzle clogged.	Empty dirty water tank; re-seat tank securely; clear any blockages in hose or nozzle.
Unit leaks	Tanks not properly sealed; damaged tank.	Check tank caps and seals; ensure tanks are correctly installed. Contact support if damaged.

SPECIFICATIONS

Feature	Detail
Brand	Vacmaster
Model Number	CA0701EU
Color	Blue
Product Dimensions	39.4 x 35.5 x 57 cm (L x W x H)
Product Weight	11 kg
Clean Water Tank Capacity	3.2 Liters
Power Source	Corded Electric
Motor Power	750 W

Feature	Detail
Hose Length	2.6 m

WARRANTY AND SUPPORT

Warranty Information

The Vacmaster Carpet Cleaner CA0701EU comes with a **two-year warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact Vacmaster customer support. Refer to the contact information provided on the Vacmaster official website or your purchase documentation.

For more information, visit the official Vacmaster store: [Vacmaster Store](#)

