

TIATUA M9

TIATUA M9 Instant Print Kids Camera User Manual

INTRODUCTION

This manual provides comprehensive instructions for the TIATUA M9 Instant Print Kids Camera. Please read this manual carefully before using the camera to ensure proper operation and to maximize your experience.

PRODUCT OVERVIEW

Key Features

- **3.0-inch IPS Screen:** A larger, soft IPS screen for comfortable viewing and navigation.
- **48 MP Photo Resolution:** Capture high-quality images with a 48-megapixel lens.
- **1080p HD Video Recording:** Record clear high-definition videos.
- **Instant Printing:** Print black and white photos directly from the camera without ink or toner.
- **Multifunctional:** Includes photography, video recording, instant printing, fun frames, music playback, games, and a flashlight.
- **Long Battery Life:** Equipped with a 1000 mAh battery, providing up to 4 hours of continuous use.
- **32GB Memory Card Included:** Ample storage for photos and videos.
- **Creative Tools:** Comes with 5 colorful pens for customizing printed photos.

Multi-function Camera

Gifts for kids ages **3-14**

Instant Printing

1080P Video

MP3 Player

Puzzle Games

3.0 inch Screen

10 x Zoom

Fun Frames

32GB Card

Image: The TIATUA M9 Instant Print Kids Camera highlighting its various functions like instant printing, 1080P video, MP3 player, puzzle games, 3.0-inch screen, 10x zoom, fun frames, and 32GB card.

GETTING STARTED

Package Contents

Please check the package to ensure all items are present:

- TIATUA M9 Instant Print Kids Camera
- 32GB Micro SD Card
- Printing Paper Rolls (typically 3 rolls)
- USB Charging Cable

- Lanyard/Strap
- Colorful Pens (5 pieces)
- User Manual (this document)



Image: The TIATUA M9 Instant Print Kids Camera in dark blue, displayed with its accessories including a 32GB memory card, colorful pens, three rolls of printing paper, a USB charging cable, and a decorative lanyard.

Charging the Camera

Before first use, fully charge the camera. Connect the included USB cable to the camera's charging port and to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

Inserting the Micro SD Card

Locate the Micro SD card slot on the side of the camera. Insert the 32GB Micro SD card (included) into the slot until it clicks into place. Ensure the camera is powered off before inserting or removing the card.

Loading Print Paper

Follow these steps to load the thermal printing paper:

1. **Open the Paper Slot:** Gently push the latch or button to open the paper compartment cover.
2. **Insert the Paper Roll:** Place a new roll of thermal paper into the compartment. Ensure the paper feeds from the bottom of the roll and the end of the paper is facing outwards, ready to be pulled

through the printing mechanism.

3. **Pull Paper Out:** Pull approximately 1 inch (2.5 cm) of paper out of the slot, ensuring it is straight.
4. **Close the Cover:** Close the paper compartment cover firmly until it clicks.

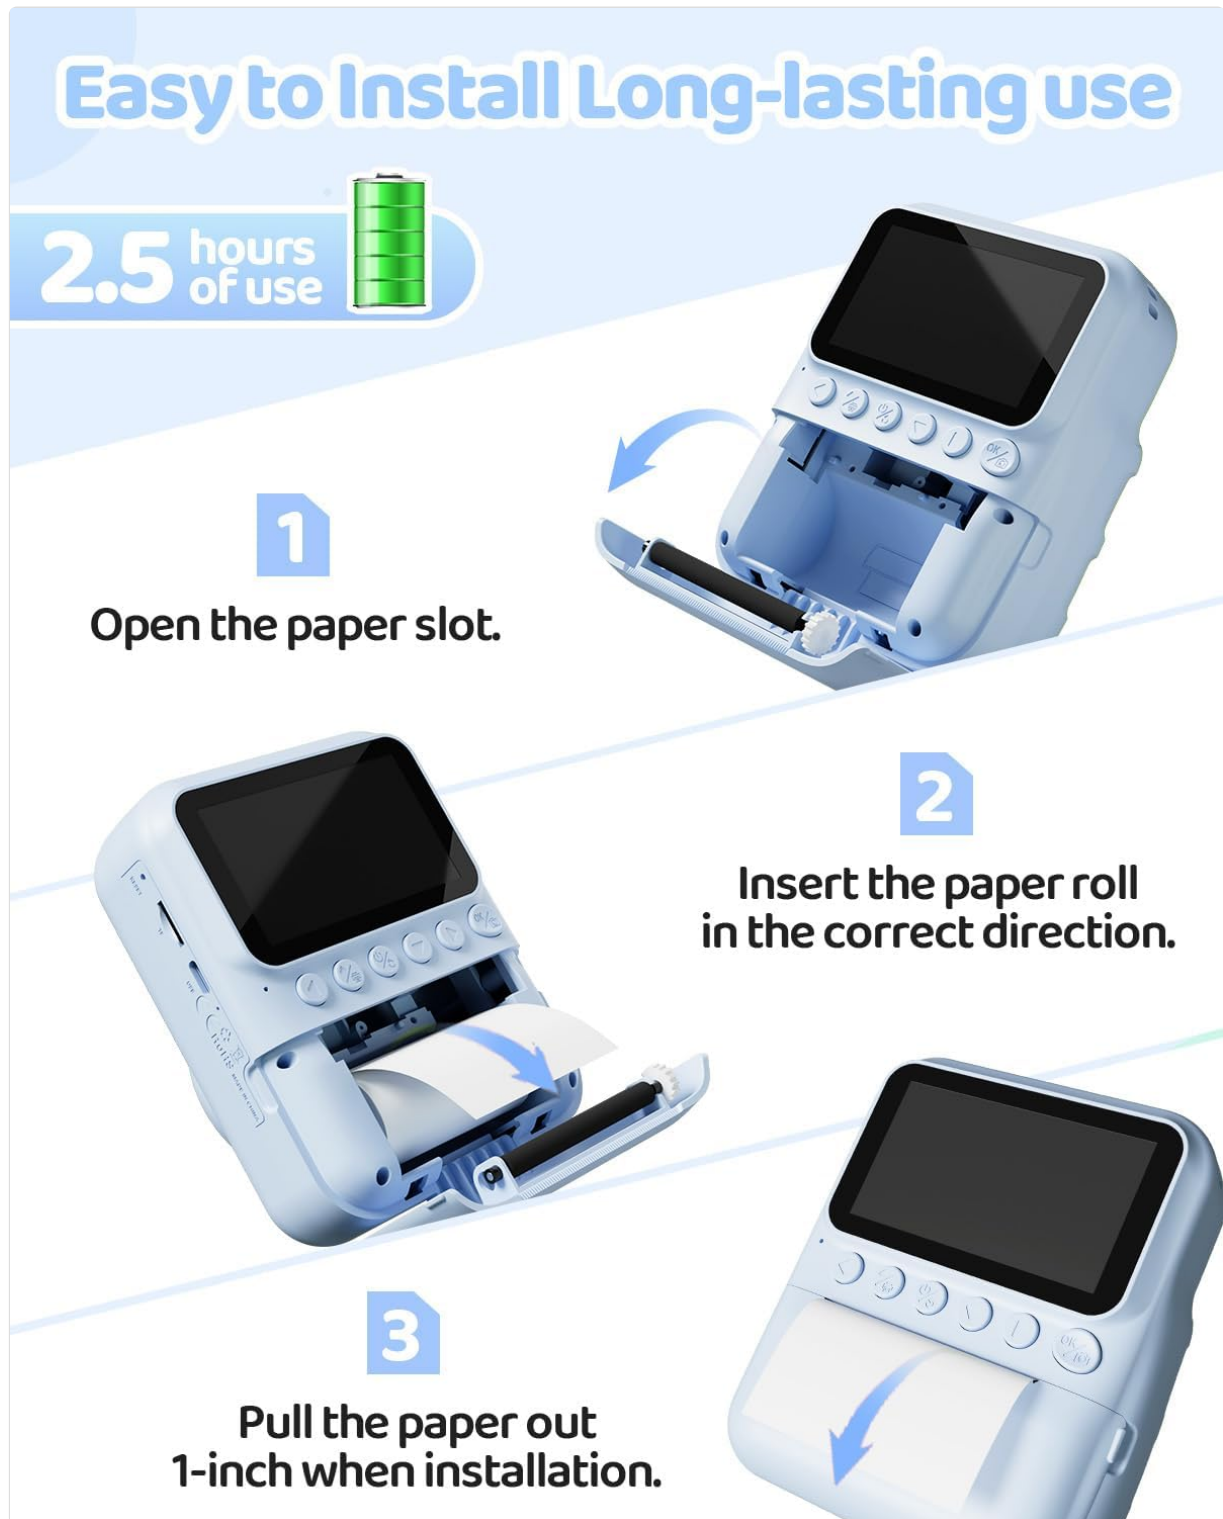


Image: A three-step visual guide demonstrating how to load the thermal printing paper into the TIATUA M9 Instant Print Kids Camera. Step 1 shows opening the paper slot, Step 2 shows inserting the paper roll in the correct direction, and Step 3 shows pulling out approximately 1 inch of paper before closing the compartment.

OPERATING INSTRUCTIONS

Basic Controls

The camera features intuitive buttons for easy navigation:

- **Power Button:** Press and hold to turn the camera ON/OFF. Short press to switch modes or confirm selections.
- **Shutter Button:** Press to take a photo or start/stop video recording.
- **Navigation Buttons (Up/Down/Left/Right):** Used to navigate menus, zoom in/out, or select options.
- **OK/Confirm Button:** Confirms selections in menus.
- **Menu Button:** Accesses camera settings and options.

Taking Photos

To take a photo:

1. Turn on the camera.
2. Select the photo mode from the main menu.
3. Frame your shot using the 3.0-inch IPS screen.
4. (Optional) Use the navigation buttons to zoom in or out (up to 10x digital zoom).
5. Press the Shutter button to capture the image.

Image: The TIATUA M9 Instant Print Kids Camera's 3.0-inch screen displaying a live view, demonstrating 1080P HD video recording capability and 10x digital zoom functionality with examples of zoomed-in images.

Recording Videos

To record a video:

1. Turn on the camera.
2. Select the video recording mode from the main menu.
3. Press the Shutter button once to start recording. A timer will appear on the screen.
4. Press the Shutter button again to stop recording. The video will be saved to the Micro SD card.

Instant Printing

After taking a photo, you can instantly print it in black and white. The camera offers different printing

densities:

- **Low (1-3):** Lighter print.
- **Medium (4-5):** Standard print.
- **High (6-7):** Darker print.

Select your desired density in the print settings before initiating the print. The camera uses thermal printing technology, requiring no ink cartridges.



Image: An illustration demonstrating the two printing modes (Grayscale Matrix and Grayscale Levels) and three printing densities (Low, Medium, High) available on the TIATUA M9 Instant Print Kids Camera, showing how image clarity changes with density settings.

Photo Frames and Filters

Enhance your photos with various built-in frames and filters. Access these options through the camera's menu while in photo mode. Select a frame or filter before taking a picture to apply it directly to the image and print.



Image: The TIATUA M9 Instant Print Kids Camera displaying various fun photo stickers and frames that can be applied to images, encouraging creative expression.

Playing Games

The camera includes several pre-installed puzzle games for entertainment. Navigate to the "Games" option in the main menu to select and play. Use the navigation buttons to control the games.



Image: A child interacting with the TIATUA M9 Instant Print Kids Camera, which displays various puzzle games on its screen, alongside icons for a music player and other interesting features.

Playback and Review

To view your captured photos and videos, enter the "Playback" mode from the main menu. Use the navigation buttons to scroll through your media. Press the OK button to view a photo or play a video.

MAINTENANCE

Cleaning the Camera

To clean the camera body, use a soft, dry cloth. For the lens, use a specialized lens cleaning cloth. Do not use liquid cleaners or abrasive materials, as they may damage the camera.

Storage

Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. When not in use for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.

TROUBLESHOOTING

Common Issues and Solutions

- **Camera does not turn on:**
 - Ensure the battery is charged. Connect the camera to a power source using the USB cable.
 - Press and hold the power button for a few seconds.
- **Cannot take photos/videos:**
 - Check if the Micro SD card is inserted correctly and has sufficient free space.
 - Ensure the camera is in the correct mode (photo or video).
- **Print quality is poor or no print:**
 - Verify that the thermal paper is loaded correctly and not upside down.
 - Check if there is enough paper in the compartment.
 - Adjust the printing density settings in the camera menu.
 - Ensure the print head is clean (refer to cleaning instructions).
- **Screen is frozen:**

- Try restarting the camera by holding the power button. If unresponsive, use a thin object to press the reset button (if available, usually a small pinhole).






SPECIFICATIONS

Feature	Detail
Brand	TIATUA
Model Name	M9
Color	Dark Blue
Screen	3.0 inch LCD
Special Feature	Instant Photo
Connectivity Technology	USB
Battery Composition	Lithium-polymer (1000 mAh)
Video Resolution	1080p
Effective Still Resolution	48 Megapixels
Max Shutter Speed	1/2000s
Focus Type	Auto Focus
Zoom Type	Optical Zoom
ISO Range	100-6400
Water Resistance Level	Not Waterproof
Dimensions (L x W x H)	16.7 x 13.4 x 6.2 cm
Weight	420 grams

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official TIATUA website. Keep your proof of purchase for any warranty claims.

Related Documents - M9

 <p>Walkie Talkie User Guide</p> <p>US WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.</p>	<p>Wishouse Walkie Talkie User Guide</p> <p>Comprehensive user guide for the Wishouse Walkie Talkie, detailing features, operation, safety precautions, and FCC compliance. Learn how to use your two-way radio for clear communication.</p>
	<p>Comply Premium Earphone Tips Compatibility Guide</p> <p>Find the perfect Comply Premium Earphone Tips for your audio devices. This guide lists compatible earphone models for Comply tip sizes 100, 200, 400, and 500.</p>
	<p>T-Mobile Protection<360>® Deductible and Fee Schedule</p> <p>Find T-Mobile Protection<360>® plan fees, deductibles, and device tier information for hardware service, accidental damage, and loss/theft claims. Includes a comprehensive list of T-Mobile compatible device models and their associated tiers.</p>
	<p>Filterlogic UKF8001 Water Filter Compatibility Guide & Model Numbers</p> <p>Find compatible refrigerator models for the Filterlogic UKF8001 water filter. Includes Whirlpool, Maytag, EveryDrop, KitchenAid, Pur, and other brands with their model numbers.</p>
	<p>LV-M9 Pro Smart Glasses User Manual</p> <p>Comprehensive user manual for LV-M9 Pro Smart Glasses, covering product specifications, operating instructions, Bluetooth pairing, safety information, charging, and FCC compliance details.</p>
	<p>Lenovo Tab M9 Quick Start Guide</p> <p>A quick start guide for the Lenovo Tab M9, covering setup, overview of features, card installation, and compliance information.</p>