

domi outdoor living LPBD0131-BE

Domi 9'x9' Cantilever Patio Umbrella Instruction Manual

Model: LPBD0131-BE

1. IMPORTANT SAFETY INFORMATION

- Always ensure the umbrella base is adequately weighted to prevent tipping, especially in windy conditions.
Note: A weighted base is NOT included with this umbrella.
- Close the umbrella when not in use, during strong winds, heavy rain, or other severe weather conditions to prevent damage to the umbrella and potential injury.
- Keep children and pets away from the umbrella during opening and closing operations.
- Do not hang objects from the umbrella frame or ribs.
- Regularly inspect all components for wear and tear. Replace damaged parts immediately.

2. PRODUCT OVERVIEW

The Domi 9'x9' Cantilever Patio Umbrella is designed for outdoor use, providing shade and protection. It features a robust aluminum frame, a durable polyester canopy, and adjustable mechanisms for optimal sun coverage.

- **Large Coverage:** 9'x9' square canopy suitable for various outdoor spaces.
- **360° Rotation:** Foot pedal allows for effortless rotation to adjust shade throughout the day.
- **Tilt Adjustable:** Convenient crank system and handle design for smooth canopy raising, lowering, and tilting.
- **Durable Construction:** Features 8 heavy-duty ribs, an aluminum pole, and a triangular top for enhanced stability and wind resistance.
- **High-Quality Fabric:** Crafted from 250/gsm yarn-dyed polyester with a PU coating, offering fade, tear, and weather resistance.



Image 2.1: The Domi 9'x9' Cantilever Patio Umbrella providing shade over an outdoor dining area.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- Umbrella Canopy (1)
- Main Pole Assembly (1)
- Cantilever Arm (1)
- Crank Handle (1)
- Foot Pedal (pre-attached to base plate) (1)
- Ribs (8, pre-attached to canopy)
- Hardware Pack (bolts, nuts, washers, tools) (1)

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires two adults. Ensure you have sufficient space and a stable, level surface for

assembly. **A weighted base is required for stability and is NOT included.**

1. **Prepare the Base:** Place your weighted umbrella base (not included) in the desired location. Ensure it is stable and level.
2. **Attach Main Pole:** Insert the main pole assembly into the weighted base. Secure it according to your base's instructions.
3. **Attach Cantilever Arm:** Connect the cantilever arm to the main pole. Align the pre-drilled holes and secure with the provided bolts and nuts from the hardware pack. Ensure all connections are tightened securely.
4. **Attach Canopy:** Carefully attach the umbrella canopy to the cantilever arm. The canopy's central hub should align with the attachment point on the arm. Secure it using the designated pins or bolts.
5. **Final Check:** Verify all connections are tight and the umbrella is securely mounted to the base.



8 Heavy-duty Ribs

Make the umbrella more stable
Anti-Rust; Windproof; Reliable&Durable



Image 4.1: Detail of the 8 heavy-duty ribs and central hub, illustrating the robust internal structure.

5. OPERATING INSTRUCTIONS

This umbrella offers multiple adjustment options for optimal shade positioning.

- **Opening and Closing:** Use the crank handle located on the main pole to smoothly raise or lower the

canopy. Turn the handle clockwise to open and counter-clockwise to close.

- **Tilting the Canopy:** The umbrella features a unique handle design for tilting. Once the canopy is open, use the tilt handle to adjust the angle of the canopy, providing shade as the sun moves. There are multiple tilt positions available.
- **360° Rotation:** To rotate the entire umbrella, locate the foot pedal at the base of the main pole. Press down on the foot pedal to unlock the rotation mechanism, then gently rotate the umbrella to the desired position. Release the foot pedal to lock it in place.



Image 5.1: The tilt adjustment mechanism, allowing for multiple canopy angles.

Effortless 360° Rotation

Adjust with the Movement of the Sun
Experience Total Sun Coverage




 **Notice:** Umbrella base is **NOT** included

Image 5.2: The foot pedal at the base enables 360-degree rotation of the umbrella.

6. MAINTENANCE

Proper maintenance will extend the life of your Domi patio umbrella.

- **Canopy Cleaning:** The 250/gsm yarn-dyed polyester fabric with PU coating is designed to resist fading and weathering. Clean the canopy regularly with mild soap and water. Rinse thoroughly and allow to air dry completely before closing or storing. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** The aluminum pole and ribs are rust and corrosion-resistant. Wipe down the frame with a damp cloth periodically to remove dirt and debris.
- **Rib Replacement:** In case of damage, individual umbrella ribs can be replaced. The ribs and disc are secured with screws and nuts, allowing for quick replacement without disassembling the entire disc. Contact customer support for replacement parts.
- **Storage:** When not in use for extended periods, or during off-season, it is recommended to close the umbrella and cover it with a protective cover (not included) or store it indoors to protect it from the elements.

YARN DYED POLYESTER FABRIC



Image 6.1: The yarn-dyed polyester fabric is designed for fade resistance, water resistance, and UV protection.



Image 6.2: The double-layer canopy design enhances breathability and UV protection.

7. TROUBLESHOOTING

If you encounter issues with your umbrella, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Umbrella will not open/close smoothly.	Mechanism obstructed or dirty; crank system damaged.	Check for obstructions. Clean and lubricate moving parts. If damaged, contact support.
Umbrella is unstable or tips over.	Insufficiently weighted base; uneven surface; strong winds.	Ensure base is adequately weighted (e.g., with sandbags or water-filled weights). Place on a level surface. Close umbrella in windy conditions.
Canopy fabric appears faded or torn.	Prolonged exposure to harsh sun; physical damage.	While fabric is fade-resistant, extreme conditions can still affect it over time. Consider a protective cover. Replace canopy if severely damaged.

Problem	Possible Cause	Solution
360° rotation is stiff or not locking.	Foot pedal mechanism dirty or damaged.	Clean around the foot pedal. Ensure no debris is obstructing the locking mechanism. If damaged, contact support.

8. SPECIFICATIONS

Feature	Detail
Model Name	LPBD0131-BE
Size	9'x9' (Square)
Color	Beige
Brand	domi outdoor living
Material	Aluminum (Frame), 250/gsm Yarn-Dyed Polyester with PU Coating (Canopy)
Special Features	Adjustable Height, UV Resistant, Water Resistant, 360° Rotation, Tilt Function
Water Resistance Level	Water Resistant
Number of Items	1 (Umbrella unit)



Image 8.1: Product dimensions, illustrating the 9'x9' canopy and 8.5' height.

9. WARRANTY AND SUPPORT

For warranty information, specific replacement parts, or further assistance, please contact Domi Outdoor Living customer support. Refer to your purchase documentation for contact details or visit the official Domi Outdoor Living website.

Manufacturer: domi outdoor living

ASIN: B0DFM35FDD