

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [joliker](#) /

› [joliker X58 MP3 Player User Manual](#)

### joliker X58-silvery-US

# joliker X58 MP3 Player User Manual

Model: X58-silvery-US

## INTRODUCTION

---

Thank you for choosing the joliker X58 MP3 Player. This device is designed to provide a versatile and high-quality audio experience, featuring Bluetooth 5.3 for seamless connectivity, a generous 128GB of internal storage expandable via SD card, a built-in HD speaker, and a user-friendly 2.4-inch touchscreen. It supports various functions including music playback, FM radio, voice recording, e-books, and video playback. Please read this manual carefully to ensure proper use and maintenance of your device.



The joliker X58 MP3 Player, showcasing its intuitive touchscreen interface and compact design.


## SETUP

### What's in the Box

- 1x joliker X58 MP3 Player
- 1x Type-C Charging Cable
- 1x Wired Headset
- 1x User Manual

### Charging the Device

Before first use, fully charge the MP3 player. Connect the provided Type-C charging cable to the device's Type-C port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

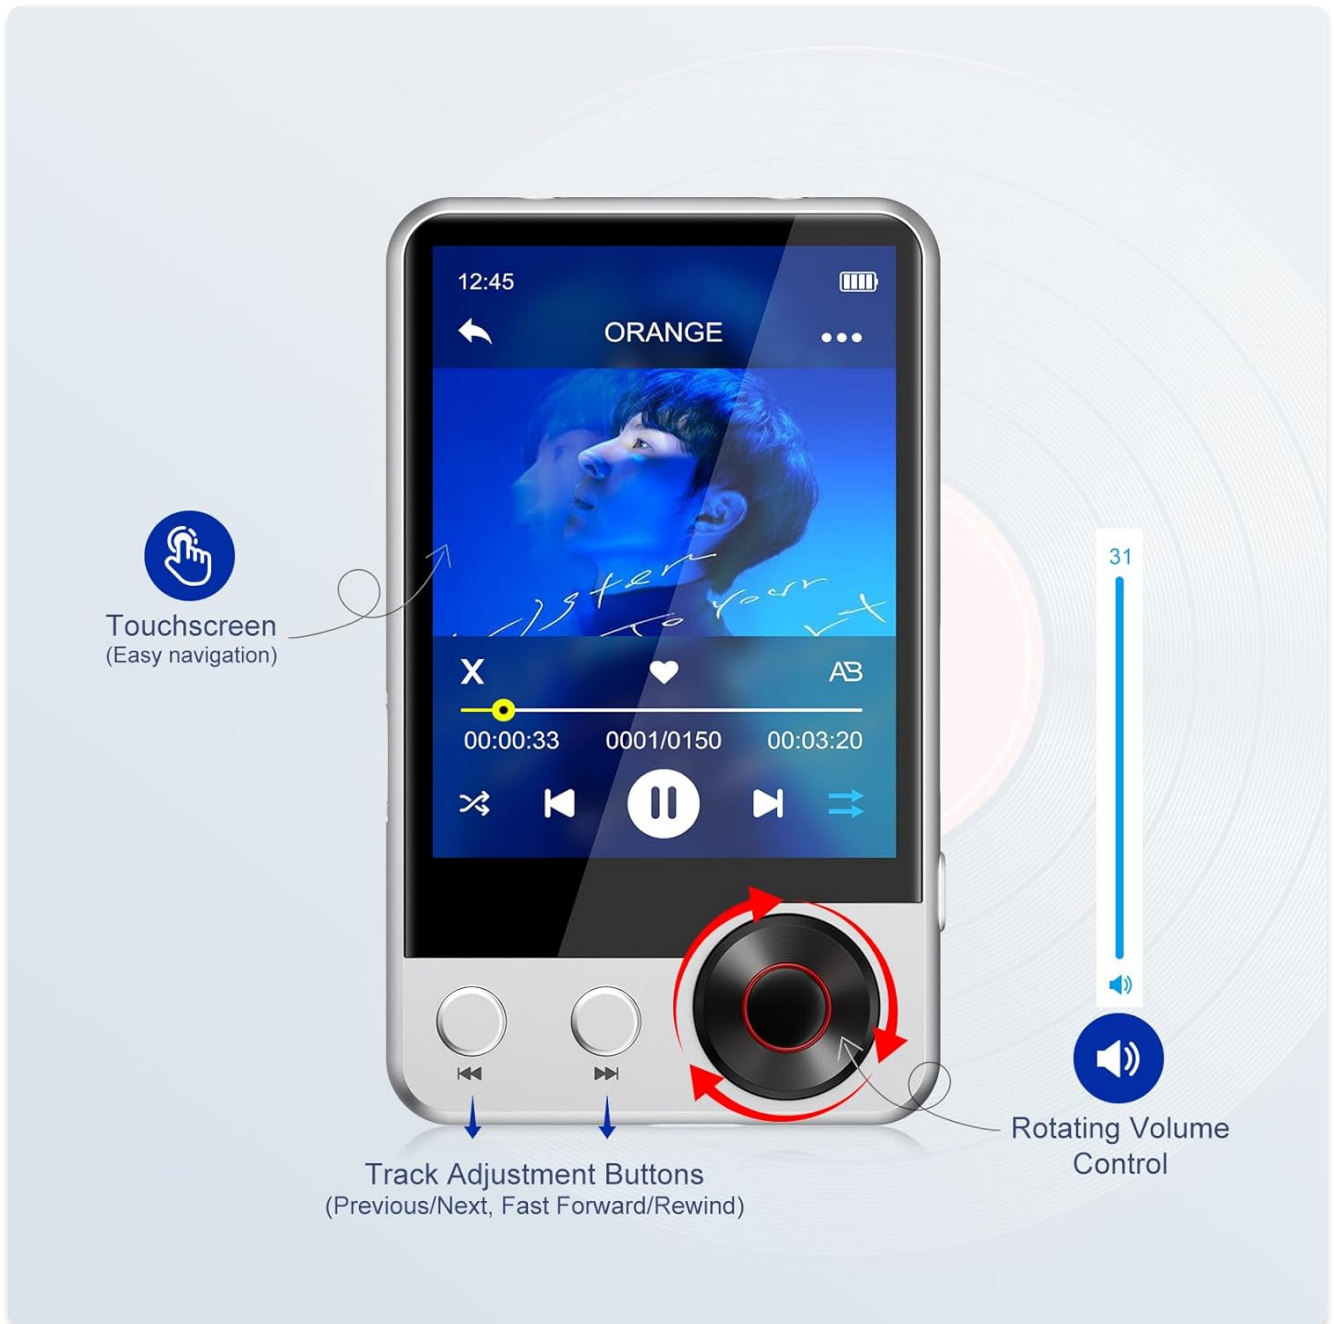

The Type-C port for charging and data transfer, alongside the dual audio jacks.

## Powering On/Off

To power on, press and hold the power button located on the side of the device until the screen lights up. To power off, press and hold the power button until the power-off prompt appears, then confirm on the touchscreen.

## OPERATING INSTRUCTIONS

### Basic Navigation

The X58 MP3 player features a 2.4-inch touchscreen for easy navigation. Tap icons to open applications. Swipe left or right to browse through menus. Use the physical buttons below the screen for play/pause and track adjustment (previous/next,

fast forward/rewind). The rotating knob on the side allows for volume control.

## Dual Audio Jacks

### Dual Headphone Connection

Share your music or FM with a friend

### Professional Audio Compatibility

Connect to mixers and DJ equipment

FM radio



3.5mm audio port



Built-in speaker allows you to enjoy music without headphones.

The 2.4-inch touchscreen and intuitive controls for easy operation.

### Music Playback

Tap the 'Music' icon to access your audio library. You can browse by artist, album, genre, or all songs. The player supports various audio formats. Use the on-screen controls or physical buttons to play, pause, skip tracks, and adjust volume. The device features HIFI sound quality for a superior listening experience.

# Superior HIFI Audio Quality



Experience superior HIFI audio quality with your joliker X58 MP3 Player.

## Bluetooth Connection

The X58 MP3 player is equipped with Bluetooth 5.3 for stable and efficient wireless audio. To connect to Bluetooth headphones or speakers:

1. Go to 'Settings' and select 'Bluetooth'.
2. Turn Bluetooth 'On'.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices to pair.

# Bluetooth 5.3 Connectivity


Equipped with the latest Bluetooth 5.3 chip, X58 mp3 player has a faster and more stable transmission with Bluetooth headphones or speakers.



Bluetooth 5.3 connectivity for seamless audio streaming to headphones or speakers.

## FM Radio

To use the FM radio function, you must connect wired headphones, as they serve as the antenna. Tap the 'FM Radio' icon, then use the on-screen controls to scan for stations or manually tune to a frequency.

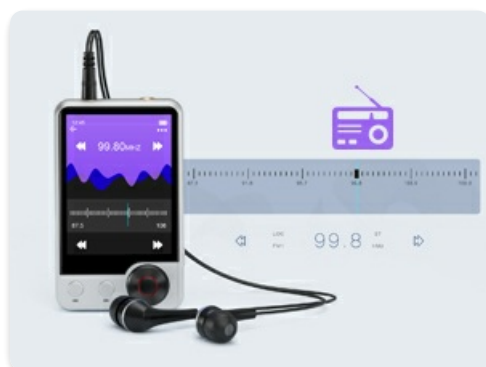

FM Radio function, requiring wired headphones to act as an antenna.

## Voice Recording

Tap the 'Recordings' icon to access the voice recorder. Press the record button to start and stop recording. Recordings are saved internally and can be managed through the 'Folder view' or 'Recordings' menu.



Voice Recorder feature for capturing audio moments.

## E-Book Reader

The device supports e-book reading. Tap the 'EBook' icon to open your text files. Note that only plain text (.txt) files are supported for e-books. You can adjust font size and navigate pages using the touchscreen.



E-book reader for reading text files on the go.

## Video Playback

Tap the 'Video' icon to play supported video files. Ensure your video files are in a compatible format for optimal playback. The device's 2.4-inch screen provides a compact viewing experience.



Video playback feature for enjoying multimedia content.

## File Management

Use the 'Folder view' icon to browse and manage files stored on the device's internal 128GB memory or an inserted Micro SD card (up to 256GB). You can transfer files to and from the device by connecting it to a computer using the Type-C cable.

# 128GB Internal Memory

Buit-in **128GB** memory,  
also support TF card up to **256GB**



The MP3 player features 128GB of internal memory, expandable with a Micro SD card.

## Built-in Speaker

The X58 MP3 player includes a built-in HD speaker, allowing you to enjoy music without headphones. This is ideal for sharing audio or for situations where earphones are not preferred.

# Built-in speaker

allows you to enjoy music without headphones.



Enjoy music freely with the built-in HD speaker.

## Official Product Video

Your browser does not support the video tag.

This video provides an overview of the joliker X58 MP3 Player's features, including its design, Bluetooth 5.3 connectivity, touchscreen interface, dual audio jacks, 128GB memory, built-in speaker, HIFI sound, FM radio, and voice recorder functions.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

- **Avoid Impact:** Protect the device from drops and impacts, which can damage internal components or the screen.

## TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes of charging before it can power on.
Cannot connect via Bluetooth.	Ensure Bluetooth is enabled on both the MP3 player and the target device. Make sure the target device is in pairing mode and within range. Try restarting both devices.
Volume knob is unresponsive or erratic.	This may indicate a hardware issue. Try adjusting volume via the touchscreen if available. If the problem persists, contact customer support.
Lag or slow response from touchscreen.	Close any background applications. Restart the device. Ensure the device's memory is not completely full.
Cannot play MP4 videos or certain image files.	The device supports specific file formats. For e-books, only plain text (.txt) files are supported. For videos, ensure they are converted to a compatible format. Refer to specifications for supported media types.
Music stops when opening another application.	This device is designed to focus on one primary function at a time. Some applications may pause music playback when opened.
Device not recognized by computer.	Try a different USB port or cable. Ensure the device is powered on. On the device, select 'File Transfer' mode if prompted. Restart both the device and the computer.

## SPECIFICATIONS

Feature	Detail
Brand	joliker
Model Name	X58-silvery-US
Memory Storage Capacity	128 GB (Expandable via Micro SD card up to 256GB)
Screen Size	2.4 Inches

Feature	Detail
Connectivity Technology	Bluetooth 5.3, USB (Type-C), Aux (3.5mm)
Special Features	Built-In Speaker, Voice Recorder, Touch Screen, Equalizer, FM Radio, Dual Headphone Ports
Item Weight	2.97 ounces
Batteries	1 Lithium Polymer battery (included)
Package Dimensions	5.83 x 5.79 x 0.87 inches

## WARRANTY AND SUPPORT

The joliker X58 MP3 Player comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact joliker customer service through the retailer's platform or visit the official joliker website for contact information.

We are committed to providing high-quality products and excellent customer service. If you encounter any issues or have questions, do not hesitate to reach out to us.