

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [joliker](#) /

› [User Manual for joliker X58 MP3 Player](#)

joliker X58

User Manual for joliker X58 MP3 Player

Model: X58-silvery-US

1. INTRODUCTION

Thank you for purchasing the joliker X58 MP3 Player. This device is designed to provide a versatile and high-quality audio experience with its advanced features, including Bluetooth 5.3, a 2.4-inch touchscreen, and extensive storage capabilities. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.

2. WHAT'S IN THE BOX

- 1x joliker X58 MP3 Player
- 1x Type-C Charging Cable
- 1x Wired Headset
- 1x User Manual (this document)

3. PRODUCT OVERVIEW AND FEATURES

The joliker X58 MP3 Player is equipped with a range of features for an enhanced user experience.



Figure 3.1: Front and back view of the Joliker X58 MP3 Player, highlighting its compact design and dual headphone ports.

- **Bluetooth 5.3:** Offers stable and energy-efficient wireless connectivity for headphones and speakers.

Bluetooth 5.3 Connectivity

Equipped with the latest Bluetooth 5.3 chip, X58 mp3 player has a faster and more stable transmission with Bluetooth headphones or speakers.



Figure 3.2: The MP3 player displaying a music interface, with two white wireless earbuds nearby, illustrating Bluetooth 5.3 connectivity.

- **128GB Internal Memory:** Provides ample space for music, videos, and other files, expandable via SD card.

128GB Internal Memory

Built-in **128GB** memory,
also support TF card up to **256GB**



Figure 3.3: The MP3 player screen showing various app icons, with a graphic indicating 128GB internal memory and support for up to 256GB TF card expansion.

- **2.4-inch Touchscreen & Intuitive Controls:** Easy navigation and volume adjustment with a responsive touchscreen and physical buttons.

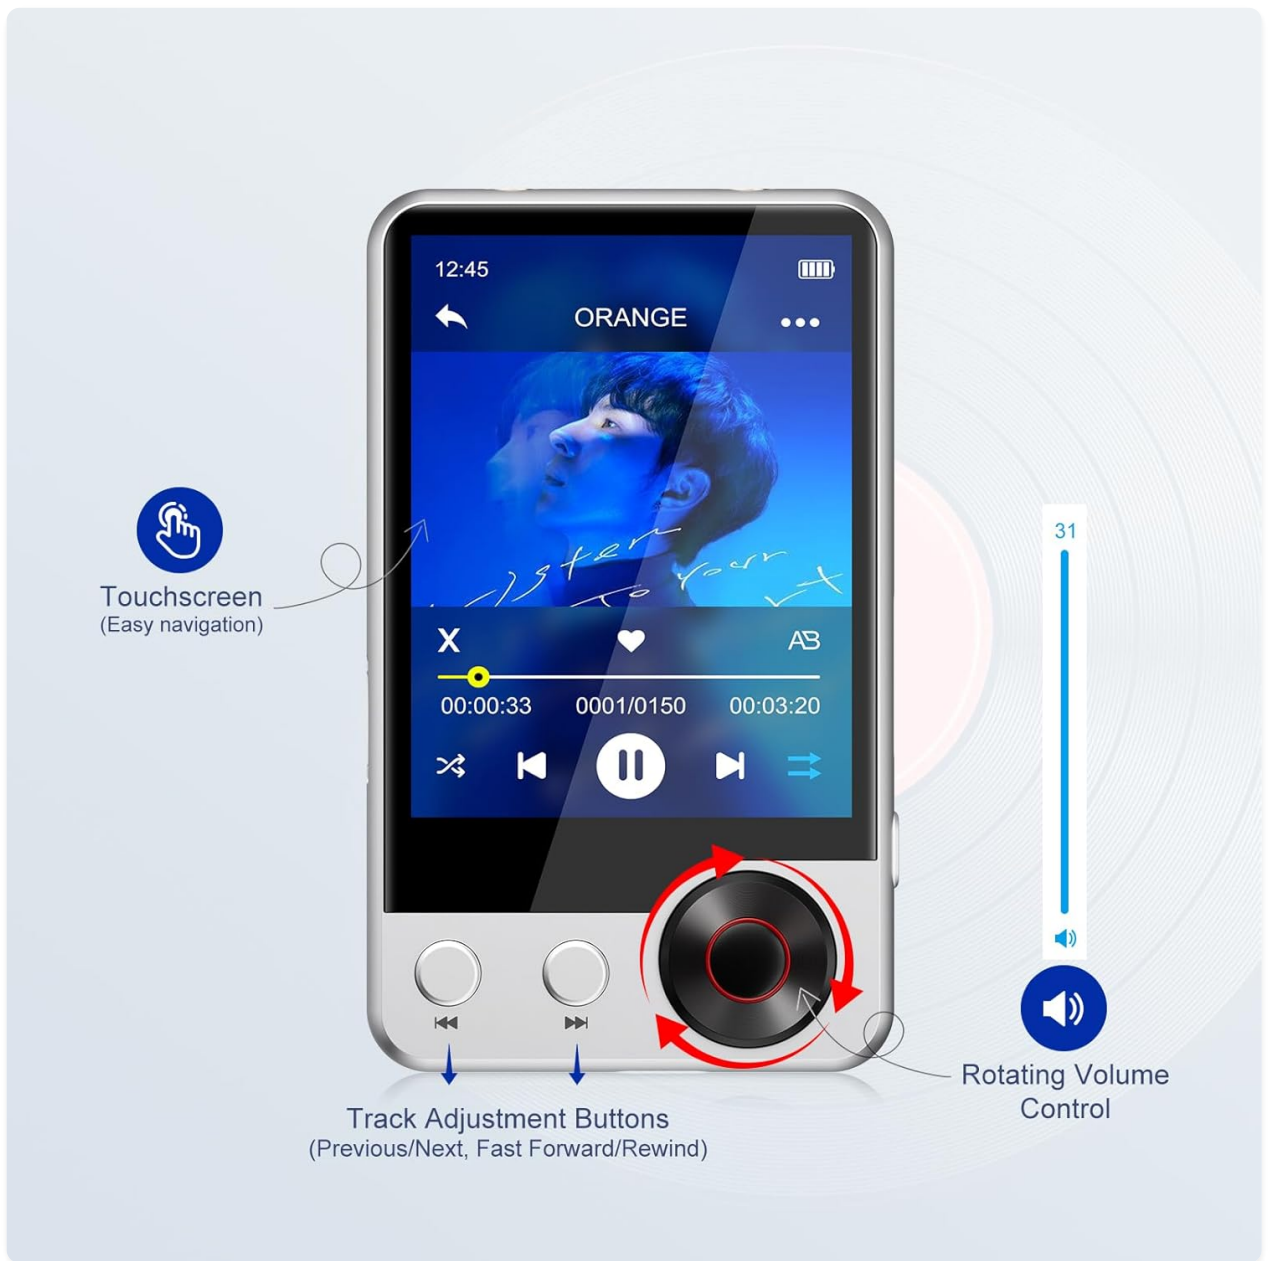


Figure 3.4: A close-up of the MP3 player's touchscreen and physical controls, including the rotating volume knob and track adjustment buttons, with labels for easy navigation.

- **Dual Audio Jacks:** Features both an FM out port and an earphone out port for flexible listening options.

Dual Audio Jacks

Dual Headphone Connection

Share your music or FM with a friend

Professional Audio Compatibility

Connect to mixers and DJ equipment

FM radio



Built-in speaker allows you to enjoy music without headphones.

Figure 3.5: A detailed view of the top of the MP3 player, showing the FM radio output and 3.5mm audio port, indicating dual headphone connection capability.

- **Built-in HD Speaker:** Allows for music playback without the need for headphones.



Figure 3.6: A father and daughter dancing in a living room, with the MP3 player on the floor emitting sound, demonstrating the built-in speaker feature.

- **Multifunctional:** Supports music playback, FM radio, voice recording, e-books, picture viewing, video playback, and an alarm clock.

Your browser does not support the video tag.

Video 3.1: An overview of the joliker X58 MP3 Player, showcasing its design, Bluetooth 5.3, touchscreen, dual audio jacks, 128GB memory, built-in speaker, HIFI sound, FM radio, voice recorder, and e-book functions.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided Type-C charging cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the screen lights up.

- **To Power Off:** Press and hold the Power button until the power-off options appear on the screen, then select "Power Off".

4.3 Initial Setup

Upon first power-on, you may be prompted to select your preferred language. Follow the on-screen instructions to complete the initial setup.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

1. **Transferring Music:** Connect the MP3 player to your computer using the Type-C cable. The device will appear as a removable disk. Drag and drop your music files (e.g., MP3, WMA, WAV, FLAC, APE) into the "Music" folder on the device.
2. **Playing Music:** From the main menu, tap the "Music" icon. You can browse by Artist, Album, Songs, Playlists, etc. Tap a song to begin playback.
3. **Controls:**
 - **Play/Pause:** Tap the play/pause icon on the touchscreen.
 - **Next/Previous Track:** Use the physical buttons below the screen or swipe on the touchscreen.
 - **Volume Adjustment:** Rotate the physical volume knob on the side of the device.

5.2 Bluetooth Connectivity

To connect to Bluetooth headphones or speakers:

1. From the main menu, tap the "Bluetooth" icon.
2. Ensure your Bluetooth device is in pairing mode.
3. The MP3 player will scan for available devices. Select your device from the list to pair.
4. Once paired, audio will be routed through the connected Bluetooth device.

5.3 FM Radio

To use the FM Radio function, you must connect wired headphones to the earphone port, as they serve as the antenna.

1. Connect wired headphones.
2. From the main menu, tap the "FM Radio" icon.
3. Use the on-screen controls to scan for stations or manually tune to a frequency.

5.4 Voice Recorder

To record audio:

1. From the main menu, tap the "Recordings" icon.
2. Tap the record button to start recording.
3. Tap the stop button to end and save the recording.

5.5 E-Book Function

The device supports plain text (.TXT) files for e-books.

1. Transfer .TXT files to the "Ebook" folder on the device.
2. From the main menu, tap the "EBook" icon.
3. Select the desired book to open.
4. Swipe from the bottom of the screen to turn the page. Be aware that swiping from the right may close the book.

5.6 Video Playback

The device supports certain video formats. Transfer video files to the "Video" folder.

1. From the main menu, tap the "Video" icon.
2. Select a video to play.

6. MAINTENANCE

- Keep the device dry. Avoid exposure to moisture or liquids.
- Clean the screen and body with a soft, dry cloth. Do not use abrasive cleaners.
- Avoid extreme temperatures.
- Do not attempt to disassemble the device, as this will void the warranty.
- Charge the device regularly, even if not in use, to maintain battery health.

7. TROUBLESHOOTING

Problem	Possible Cause / Solution
Device does not power on.	Battery may be depleted. Charge the device for at least 30 minutes. If unresponsive, try resetting by pressing the reset button (if available, usually a small pinhole) or holding the power button for an extended period.
Cannot connect to Bluetooth device.	Ensure Bluetooth is enabled on both devices. Make sure the other device is in pairing mode. Move closer to the MP3 player. Try unpairing and re-pairing.
No sound from speaker/headphones.	Check volume level. Ensure headphones are properly plugged in. If using Bluetooth, ensure it's connected. Test with different headphones.
Cannot transfer files to device.	Ensure the device is properly connected to the computer and recognized as a storage device. Try a different USB port or cable. Restart both the computer and the MP3 player.
FM Radio not working.	Wired headphones must be connected to act as an antenna. Ensure they are fully inserted.
Volume knob is unresponsive or erratic.	This may indicate a hardware issue. Ensure no debris is obstructing the knob. If the problem persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	joliker
Model Name	X58-silvery-US
Memory Storage Capacity	128 GB (Expandable via Micro SD)
Screen Size	2.4 Inches
Connectivity Technology	Bluetooth 5.3, USB, Aux
Special Features	Built-In Speaker, Voice Recorder, Touch Screen, Equalizer, FM Radio

Feature	Detail
Compatible Devices	Headphone, Speaker
Media Type	Micro SD
Item Weight	2.97 ounces
Batteries	1 Lithium Polymer battery (included)
Country of Origin	China

9. WARRANTY AND SUPPORT

The joliker X58 MP3 Player comes with a standard manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact joliker customer service through the retailer's platform or the official joliker website.

Keep your purchase receipt as proof of purchase for warranty purposes.