

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LOGICOM](#) /

› [Logicom Tab 134 Tablet User Manual](#)

LOGICOM Tab 134

Logicom Tab 134 Tablet User Manual

Model: Tab 134

INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Logicom Tab 134 tablet. Please read this guide thoroughly before using your device to ensure proper function and longevity.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Logicom Tab 134 Tablet
- USB-C Charging Cable
- Quick Start Guide (This manual serves as a detailed guide)

Note: A power adapter is not included and must be purchased separately. Use a compatible USB power adapter.

DEVICE LAYOUT

Familiarize yourself with the physical features and ports of your Logicom Tab 134 tablet.



Image: Top view of the Logicom Tab 134 tablet. From left to right, it shows a USB-C port, a 3.5mm headphone jack, volume buttons (+ and -), and the power button.



Image: Back view of the Logicom Tab 134 tablet. It features the rear camera at the top center and two speaker grilles at the bottom corners.



Image: Front view of the Logicom Tab 134 tablet with the screen displaying the Android home interface. The front camera is visible at the top center bezel.

- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** Connect external headphones.
- **Volume Buttons:** Adjust audio volume.
- **Power Button:** Press and hold to power on/off or restart. Press briefly to turn the screen on/off.
- **Front Camera:** Located on the front bezel for video calls and selfies.
- **Rear Camera:** Located on the back panel for photos and videos.
- **Speakers:** Two speakers located on the back for audio output.

- **MicroSD Card Slot:** For expanding storage.

SETUP

1. Charging the Tablet

Before first use, fully charge your tablet. Connect the USB-C cable to the tablet's USB-C port and the other end to a compatible USB power adapter (not included) plugged into a wall outlet. The battery indicator on the screen will show charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power button until the Logicom logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select "Power off" and confirm.
- **To Restart:** Press and hold the Power button until the power options menu appears. Select "Restart" and confirm.

3. Initial Setup

Upon first power-on, the tablet will guide you through the initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Accept the terms and conditions.
4. Sign in with your Google Account or create a new one. This is necessary to download apps from the Google Play Store.
5. Set up screen lock (PIN, pattern, or password) for security.
6. Review and adjust other settings as prompted.

4. Inserting a MicroSD Card

To expand storage, you can insert a MicroSDXC card (up to 64 GB, not included).

1. Locate the MicroSD card slot (usually on the side or top edge, often covered by a small flap).
2. Carefully insert the MicroSD card into the slot with the gold contacts facing down until it clicks into place.
3. The tablet will detect the card, and you may be prompted to format it for use as portable or internal storage.

OPERATING THE TABLET

1. Basic Navigation

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Navigate through screens, scroll lists, or dismiss notifications.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.
- **Home Button:** Return to the home screen.
- **Back Button:** Go back to the previous screen.
- **Recent Apps Button:** View and switch between recently used applications.

2. Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.

2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

3. Bluetooth Pairing

Connect your tablet to Bluetooth devices like headphones or speakers.

1. Go to **Settings > Connected devices > Connection preferences > Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select your device from the list of available devices and follow any on-screen prompts to complete pairing.

4. Managing Storage

Your tablet has 64 GB of internal storage, expandable with a MicroSD card.

- To check storage usage: Go to **Settings > Storage**.
- To free up space: Uninstall unused apps, delete old photos/videos, or move files to your MicroSD card.

5. Battery Management

To optimize battery life:

- Reduce screen brightness.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close background applications.
- Enable Battery Saver mode in **Settings > Battery**.

6. Using the Camera

Open the Camera app from the home screen or app drawer. Tap the shutter button to take photos or switch to video mode to record videos. Use the front/rear camera toggle to switch between cameras.

MAINTENANCE

1. Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Do not use abrasive cleaners or solvents. Avoid getting moisture into ports.

2. Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to **Settings > System > System update**.

3. Storage Optimization

Periodically review your installed applications and files. Uninstall apps you no longer use and delete unnecessary data to maintain smooth operation.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Tablet won't turn on.	Ensure the tablet is charged. Connect it to a power source for at least 30 minutes, then try powering it on again.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect.
Tablet is slow or unresponsive.	Close unused apps. Clear cache for problematic apps. Restart the tablet. Check for available storage space.
Apps are crashing.	Clear the app's cache and data in Settings > Apps . Reinstall the app if the issue persists. Ensure the tablet's software is up to date.
Battery drains quickly.	Reduce screen brightness. Disable unnecessary features like GPS, Bluetooth, and Wi-Fi when not in use. Limit background app activity.

SPECIFICATIONS

Feature	Detail
Model	Logicom Tab 134
Operating System	Android 13
Processor	Octa Core 2 GHz AllWinner A523
RAM	4 GB
Internal Storage (ROM)	64 GB
Expandable Storage	MicroSDXC up to 64 GB (card not included)
Display	10.1 inch HD (1280 x 800 pixels)
Battery	5000 mAh / 3.7 V (Up to 24 hours usage)
Connectivity	Wi-Fi (802.11g), Bluetooth V5.0
Ports	USB-C, 3.5mm Headphone Jack
Dimensions (L x W x H)	28 x 3.2 x 21.1 cm
Weight	810 grams

WARRANTY AND SUPPORT

Logicom products are covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Logicom website.

For technical support, troubleshooting assistance, or service inquiries, please contact Logicom Customer Service. Contact details can typically be found on the official Logicom website or in the product packaging.

Note: The provided product information mentions "Logicom is always close to its customers. If you are not satisfied with our product, do not hesitate to contact our After-Sales Service, we will find a suitable solution with you to remedy the situation." This indicates direct support.

SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to severe impacts.
- Do not attempt to disassemble or repair the tablet yourself. This will void the warranty.
- Use only approved chargers and accessories.
- Keep the tablet away from water and other liquids.
- Dispose of the tablet and its battery responsibly according to local regulations.

