

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KAISUPJX](#) /

› [KAISUPJX Mop Cloth User Manual for Deerma DEM ZQ100, ZQ600, ZQ610 Handheld Steam Vacuum Cleaners](#)

KAISUPJX mei0203jb

KAISUPJX Mop Cloth User Manual

Compatible with Deerma DEM ZQ100, ZQ600, ZQ610 Handheld Steam Vacuum Cleaners

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your KAISUPJX Mop Cloths, designed as replacement accessories for Deerma DEM ZQ100, ZQ600, and ZQ610 handheld steam vacuum cleaners. These mop cloths are engineered for effective cleaning, strong water absorption, and durability.

2. COMPATIBILITY

These mop cloths are specifically designed to be compatible with the following Deerma handheld steam vacuum cleaner models:

- Deerma DEM ZQ100
- Deerma DEM ZQ600
- Deerma DEM ZQ610

3. PRODUCT FEATURES

- **Strong Water Absorption:** Designed to lock in water effectively, minimizing water stains.
- **Efficient Cleaning:** Wide cleaning area to improve overall cleaning efficiency.
- **Dust and Hair Removal:** Effectively removes dust and hair from various floor surfaces.
- **Multi-functional:** Suitable for wood floors, tiles, carpets, and other ground materials.
- **Dual Functionality:** Enables simultaneous cleaning and mopping for quicker results.

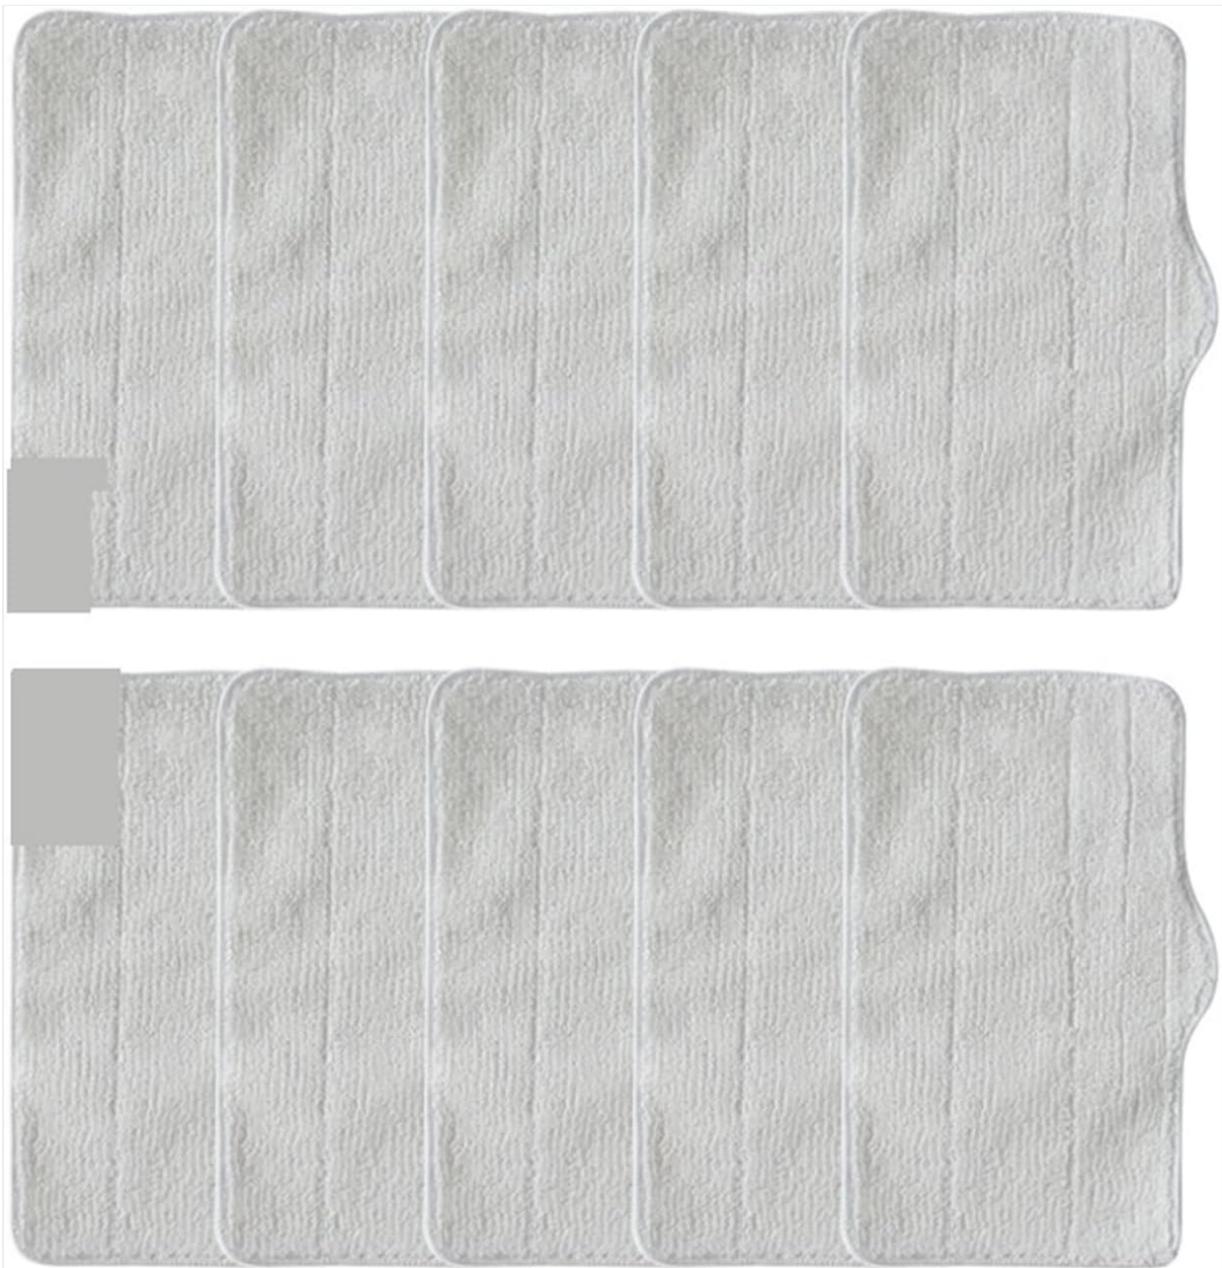


Image 1: A pack of eight KAISUPJX replacement mop cloths, showing their rectangular shape and white microfiber material.

4. SETUP AND INSTALLATION

1. **Prepare the Mop Cloth:** Ensure the mop cloth is clean and free from debris before attachment.
2. **Locate Attachment Area:** Identify the mop head attachment area on your Deerma steam vacuum cleaner. This is typically a flat surface with hook-and-loop fasteners or clips.
3. **Attach the Mop Cloth:** Align the mop cloth with the mop head. Press firmly to secure the cloth to the hook-and-loop fasteners or slide it into the clips until it is snug and evenly spread across the mop head.
4. **Verify Attachment:** Gently tug on the edges of the mop cloth to ensure it is securely attached and will not detach during use.



Image 2: A single white KAISUPJX mop cloth shown at an angle, highlighting its textured surface and contoured edge for proper fit.

5. OPERATING INSTRUCTIONS

Once the mop cloth is securely attached to your Deerma steam vacuum cleaner, you can proceed with cleaning:

1. **Fill Water Tank:** Ensure your steam vacuum cleaner's water tank is filled according to its specific instructions.
2. **Power On:** Turn on your steam vacuum cleaner and allow it to heat up to generate steam.
3. **Begin Cleaning:** Guide the steam vacuum cleaner across the floor surface. The mop cloth will absorb dirt and moisture as the steam cleans.
4. **Monitor Mop Cloth Condition:** If the mop cloth becomes saturated or visibly dirty, replace it with a clean one to maintain cleaning effectiveness.



Image 3: A KAISUPJX mop cloth positioned in the foreground, with a blurred image of a vacuum cleaner head on a floor in the background, illustrating its intended use.



Image 4: A mop cloth attached to a white mop head, being used to clean a wooden floor, with a foot in a slipper visible, indicating ease of use.

6. CARE AND MAINTENANCE

Proper care of your mop cloths will extend their lifespan and maintain cleaning performance:

- **After Each Use:** Remove the mop cloth from the steam cleaner.
- **Washing:** Hand wash or machine wash the mop cloths with similar colors in warm water. Do not use bleach or fabric softeners, as these can degrade the microfiber material and reduce absorption.
- **Drying:** Air dry or tumble dry on low heat. Avoid high heat, which can damage the fibers.
- **Storage:** Store clean, dry mop cloths in a clean, dry place until next use.
- **Replacement:** Replace mop cloths when they show signs of wear, tear, or reduced cleaning effectiveness.



Image 5: A close-up view of the white microfiber texture and stitched edge of a KAISUPJX mop cloth, illustrating its material quality.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mop cloth not cleaning effectively.	Mop cloth is dirty or saturated.	Replace with a clean mop cloth.
Mop cloth detaches during use.	Mop cloth not securely attached.	Ensure the mop cloth is firmly pressed onto the mop head's fasteners.
Excessive water streaks left on floor.	Mop cloth is oversaturated or worn out.	Replace with a fresh, clean mop cloth. Ensure the steam cleaner is not dispensing too much water.

8. PRODUCT SPECIFICATIONS

Specification	Detail
Package Dimensions	1.18 x 0.79 x 0.39 inches
Item Weight	1.76 ounces
Manufacturer	mei0203jb

Specification	Detail
Item Model Number	mei0203jb
Number of Pieces	1 (This refers to the product unit, which is an 8-pack of cloths)
Assembly Required	No



Image 6: A single KAISUPJX mop cloth displayed with its dimensions, indicating a length of 270mm and a width of 155mm.

KAISUPJX Mop Cloth User Manual - Version 1.0

For further assistance, please refer to your Deerma steam vacuum cleaner's original manual or contact the manufacturer.