

Fockety Fockety6fkzy1coi0-11

Fockety 68GB MP3 MP4 Player User Manual

Model: Fockety6fkzy1coi0-11

1. INTRODUCTION

This manual provides instructions for the Fockety 68GB MP3 MP4 Player. This device features a 1.8-inch color display, a built-in voice recorder, HiFi audio capabilities, and supports various media formats for music, videos, photos, and e-books. It comes with 64GB of internal storage, expandable up to 128GB via a small memory card.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Fockety MP3 MP4 Player
- 1 x USB Data Cable
- 1 x Earphones



Image: The Fockety MP3 MP4 Player shown alongside its included USB data cable and earphones.

3. PRODUCT OVERVIEW

Familiarize yourself with the device's components and controls.



Image: An angled view of the MP3 MP4 Player, highlighting the headphone jack and USB port on the bottom edge.

Controls:

- **MENU Button:** Access the main menu or go back to the previous screen.
- **Directional Buttons (Left/Right):** Navigate through menu options or skip tracks.
- **Center Button:** Select an option or play/pause media.
- **VOL Button:** Adjust the volume level.

Ports:

- **USB 2.0 Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For connecting earphones.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the player. Connect the included USB data cable to the device's USB port and the other end to a computer's USB port or a compatible USB wall adapter (not included). A full charge typically takes 1-2 hours.

Your Music Partner With Long Using Time



Image: The MP3 MP4 Player in use, illustrating its battery performance with 1 hour charging time and 9 hours music playback.

4.2 Power On/Off

To power on the device, press and hold the power button (location may vary, typically on the side or top edge) until the screen illuminates. To power off, press and hold the power button again until the device shuts down.

4.3 Memory Expansion

The player includes a built-in 64GB small memory card. For additional storage, you can insert a small memory card (up to 128GB, not included) into the designated slot.

4.4 Connecting to a Computer

Connect the player to your computer using the USB data cable. The device will function as a storage card reader or a file storage device, allowing you to transfer music, videos, photos, and e-book files.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

Use the directional buttons to move through menu options. Press the center button to select an item. Use

the MENU button to return to the previous screen or the main menu.

5.2 Music Playback

From the main menu, select 'Music'. Browse your stored audio files. The player supports MP3, WMA, APE, FLAC, WAV, and OGG formats. Select a track and press the center button to play. Use the VOL button to adjust the volume.

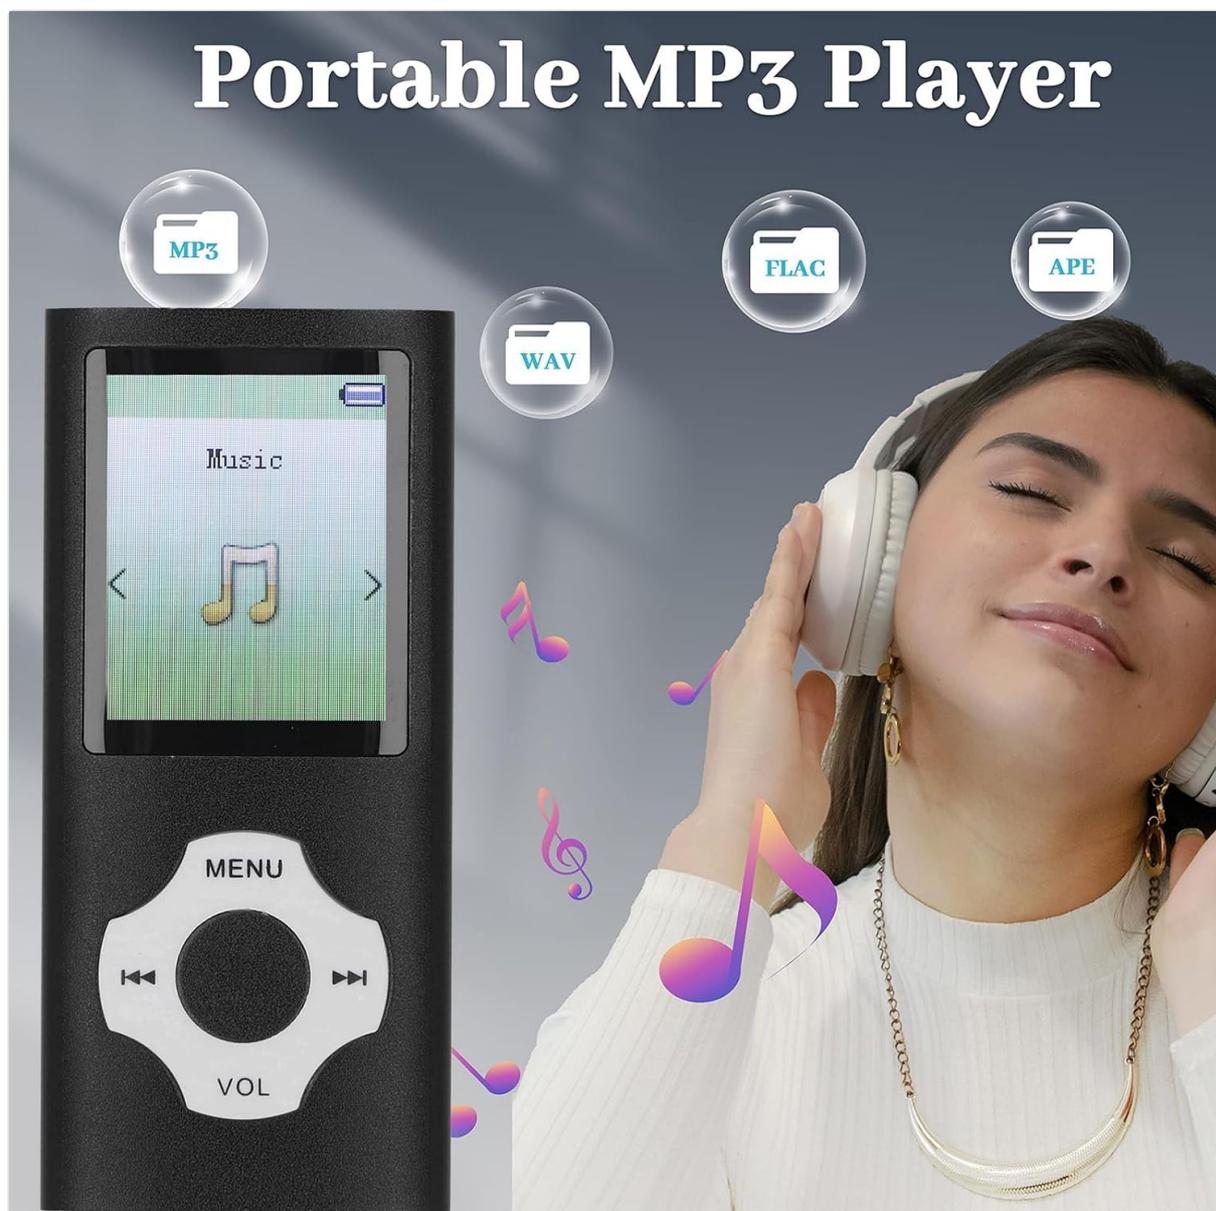


Image: The MP3 MP4 Player screen showing a music interface, with icons representing supported formats like MP3, FLAC, WAV, and APE.

5.3 Voice Recorder

Navigate to the 'Voice Recorder' function from the main menu. Press the center button to start recording. Press it again to pause/stop. The device features a noise-canceling recorder. Recordings are saved automatically and can be accessed through the 'Recordings' folder.



Voice Record



Image: A child interacting with the MP3 MP4 Player, demonstrating its voice recording capability with a sound wave graphic.

5.4 E-Book Reader

Select 'E-Book' from the main menu. The player supports TXT format. Transfer your TXT files to the device via USB. Select a file to begin reading.

5.5 Video Playback

Access 'Video' from the main menu. The player supports AMV format (converted video). Ensure your video files are converted to AMV format before transferring them to the device for playback.

5.6 Photo Viewing

Select 'Photos' from the main menu. The device supports JPG, JPEG, BMP, and GIF formats. Browse and view your images on the 1.8-inch color screen.

5.7 FM Radio

From the main menu, select 'FM Radio'. Use the directional buttons to scan for stations or manually tune to a frequency. Ensure earphones are connected as they often act as the antenna.



Image: The MP3 MP4 Player screen showing an FM radio interface with various frequencies indicated.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or high humidity.

7. TROUBLESHOOTING

- **Device does not power on:**
 - Ensure the battery is charged. Connect the player to a power source and try again.
 - If the battery is charged, try resetting the device (if a reset button is available, or by holding the power button for an extended period).
- **Cannot play music/video files:**
 - Check if the file format is supported (MP3/WMA/APE/FLAC/WAV/OGG for music; AMV for video).
 - Ensure the files are not corrupted.

- Verify that the files are stored in the correct folders on the device.
- **No sound from earphones:**
 - Check if the earphones are properly plugged into the 3.5mm jack.
 - Ensure the volume is not set to minimum or muted.
 - Test with a different pair of earphones to rule out faulty earphones.
- **Device not recognized by computer:**
 - Ensure the USB cable is securely connected to both the player and the computer.
 - Try a different USB port on your computer or a different USB cable.
 - Restart your computer and the player.

8. SPECIFICATIONS

Item Type	MP3 Player
Material	Aluminum alloy
Battery Type	Built-in 180mAh lithium-ion battery
Internal Memory	64GB (built-in small memory card)
Expandable Memory	Up to 128GB (small memory card, not included)
Screen Size	1.8 inch color screen
Music Formats	MP3, WMA, OGG, APE, FLAC, WAV
Video Format	AMV (converted video)
Image Formats	JPG, JPEG, BMP, GIF
E-book Format	TXT
Product Dimensions	6.69 x 3.15 x 0.79 inches
Item Weight	3 ounces
Model Number	Fockety6fkzy1coi0-11

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Specific warranty terms and support channels are not detailed in this manual.