

[Manuals.plus](#) /

› [PHILIPS](#) /

› PHILIPS Electric Shaver Series 3000 User Manual

PHILIPS Shaver 3800

PHILIPS Electric Shavers for Men, Series 3000

USER MANUAL

[Introduction](#) [Safety Information](#) [Product Overview](#) [Setup](#) [Operating Instructions](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. Introduction

This manual provides comprehensive instructions for the safe and effective use of your PHILIPS Electric Shaver Series 3000. Designed for both wet and dry shaving, this cordless, rechargeable shaver features a 5-directional pivot head, ComfortCut blades, and a pop-up trimmer for precise grooming. Please read this manual thoroughly before first use and retain it for future reference.



Image: The PHILIPS Series 3000 Electric Shaver shown alongside its included travel case. The shaver is black and silver with three rotary shaving heads and a power button with battery indicators. The travel case is grey with a blue zipper.

2. Safety Information

It is crucial to adhere to the following safety guidelines to prevent injury and ensure proper operation of your shaver:

- **Handling:** Handle the shaver with care to avoid cuts, especially when cleaning or replacing shaving heads.
- **Cleaning and Drying:** Always clean and dry the shaver properly after wet use to prevent water damage and maintain hygiene.
- **Water and Charging:** Do not use the shaver near water while it is charging. Ensure the shaver is completely dry before connecting it to the power cord for charging.
- **Power Source:** Only use the original power cord and adapter provided with the shaver.
- **Children:** Keep the appliance out of reach of children.
- **Damage:** Do not use the shaver if it is damaged. Contact customer support for assistance.

Note: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This product is for personal grooming and not for medical use.

3. Product Overview

The PHILIPS Series 3000 Electric Shaver is engineered for a comfortable and efficient shaving experience. Key features include:

- **5-Directional Pivot & Flex Heads:** The shaver head moves in five directions to follow the contours of your face and neck, ensuring close contact and a smooth shave.
- **ComfortCut Blades:** Equipped with 27 self-sharpening blades with rounded caps that gently cut hair just above skin level, reducing irritation.
- **Wet & Dry Use:** Designed for convenient dry shaving or a refreshing wet shave with gel or foam, even in the shower.
- **Pop-up Trimmer:** An integrated trimmer for precise detailing of mustaches and sideburns.
- **Cordless Operation:** Powered by a Li-ion battery, offering up to 60 minutes of cordless shaving on a 1-hour charge.



Image: Graphic illustrating the shaver's wet and dry capabilities, showing icons for dry/wet shaving with foam/gel and showerproof use. A man is shown shaving with foam.



Image: Close-up of the shaver's three rotary heads, highlighting the 5D Pivot & Flex technology with glowing lines indicating movement.

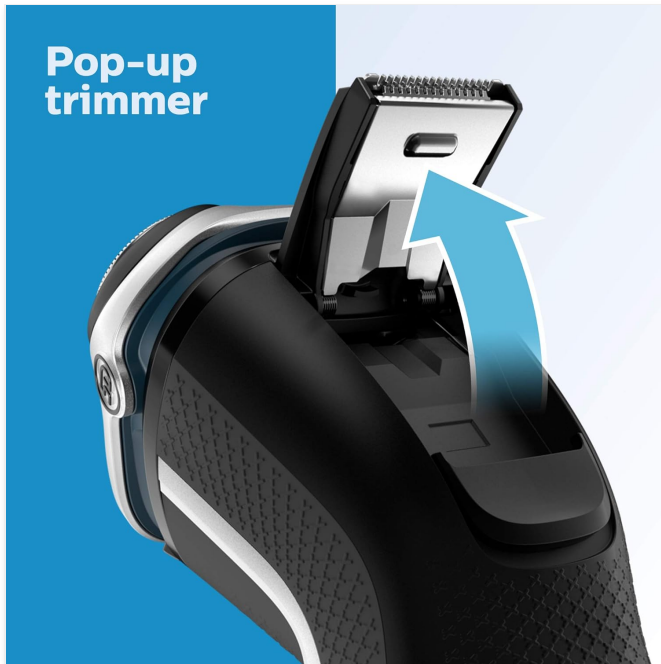


Image: Close-up of the shaver's pop-up trimmer in the extended position, ready for use.

4. Setup

4.1. Initial Charging

1. Before first use, fully charge the shaver. Connect the power cord to the shaver and plug the adapter into a wall outlet.
2. The battery indicator lights will show the charging progress. A full charge takes approximately 1 hour and provides up to 60 minutes of cordless shaving.
3. A 5-minute quick charge provides enough power for one shave.
4. Ensure the shaver is dry before charging.

4.2. Attaching/Detaching Shaving Head

The shaving head comes pre-attached. To detach for cleaning or replacement, gently pull it upwards from the shaver body. To reattach, align the head with the body and press down until it clicks into place.

5. Operating Instructions

5.1. Shaving

The shaver operates in cordless mode only.

1. **Power On:** Press the power button to turn on the shaver.
2. **Dry Shave:** For a dry shave, ensure your skin is clean and dry. Move the shaver in small, circular motions over your face and neck.
3. **Wet Shave:** For a wet shave, apply shaving gel or foam to your skin. You can use the shaver in the shower. Move the shaver in small, circular motions. Rinse the shaving head under running water during and after shaving to prevent clogging.

4. **Optimal Results:** Apply light pressure and stretch your skin with your free hand to ensure hairs stand upright for a closer shave.
5. **Power Off:** Press the power button again to turn off the shaver.



Image: A man performing a dry shave with the PHILIPS Series 3000 Electric Shaver, demonstrating proper handling.



Image: A man performing a wet shave with the PHILIPS Series 3000 Electric Shaver, with shaving foam visible on his face.

5.2. Using the Pop-up Trimmer

1. To activate the pop-up trimmer, slide the trimmer release button located on the back of the shaver upwards.
2. Use the trimmer to shape sideburns, trim mustaches, or define beard lines.
3. After use, push the trimmer back down until it locks into place.

6. Maintenance

6.1. Cleaning the Shaver

Regular cleaning ensures optimal performance and hygiene.

1. **Daily Cleaning (Quick Rinse):** After each shave, press the one-touch open button to flip open the shaver head. Rinse the shaving unit thoroughly under warm running water. Shake off excess water and leave the shaving head open to air dry.
2. **Thorough Cleaning (Weekly):**
 - Turn off the shaver and unplug it from the power outlet.
 - Open the shaving head by pressing the release button.
 - Remove the shaving head from the shaver body.
 - Carefully remove the retaining frame by turning the lock counter-clockwise.
 - Remove the cutters and guards. Clean each part under running water. Do not mix cutters and guards, as they are a matched set.

- Allow all parts to air dry completely before reassembling.
- Reassemble the cutters and guards, place the retaining frame back, and turn the lock clockwise. Reattach the shaving head to the shaver body.

6.2. Blade Replacement

For best shaving performance, it is recommended to replace the shaving heads approximately every 12 months. Replacement heads can be purchased from authorized PHILIPS retailers or the PHILIPS website. Refer to the product packaging or PHILIPS website for the correct replacement head model number for your shaver.

7. Troubleshooting

If you encounter issues with your PHILIPS Series 3000 Electric Shaver, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is empty or not charged.	Charge the shaver for at least 5 minutes for a quick shave, or 1 hour for a full charge.
Shaver does not shave effectively.	Shaving heads are dirty or clogged. Blades are worn out.	Clean the shaving heads thoroughly. If performance does not improve, replace the shaving heads.
Shaver pulls hairs or causes irritation.	Shaving heads are worn or damaged. Incorrect shaving technique.	Replace shaving heads. Ensure you are using small, circular motions with light pressure. Consider wet shaving with foam/gel.
Battery life is shorter than expected.	Battery degradation over time.	This is normal for rechargeable batteries. Ensure full charges and avoid frequent deep discharges. If significantly reduced, contact support.

If the problem persists after trying these solutions, please contact PHILIPS customer support.

8. Specifications

Feature	Detail
Model Name	Shaver 3800
Brand	PHILIPS
Power Source	Battery Powered (Li-ion)
Special Feature	Cordless, Wet & Dry Use, Pop-up Trimmer, 5-Directional Pivot Heads
Recommended Uses	Face
Battery Life	Up to 60 minutes cordless shaving on 1-hour charge
Quick Charge	5-minute charge for one shave
Cleaning	One-touch open, fully washable

Feature	Detail
Package Dimensions	9.76 x 4.96 x 3.58 inches
Item Weight	1.12 Pounds

9. Warranty & Support

9.1. Warranty Information

This PHILIPS Electric Shaver Series 3000 comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Retain your proof of purchase for warranty claims.

9.2. Customer Support

For product registration, frequently asked questions, troubleshooting assistance, or to purchase replacement parts and accessories, please visit the official PHILIPS website or contact PHILIPS customer service directly. Contact details can typically be found on the PHILIPS website or in your product packaging.

PHILIPS Official Website: www.philips.com

