

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Grundig](#) /

› [Grundig Wireless Bluetooth Open-Ear Earbuds - Instruction Manual](#)

Grundig 8711252259871

Grundig Wireless Bluetooth Open-Ear Earbuds

Model: 8711252259871

INTRODUCTION

Thank you for choosing the Grundig Wireless Bluetooth Open-Ear Earbuds. These earbuds are designed to provide a comfortable listening experience with an open-ear design, allowing you to stay aware of your surroundings while enjoying your audio. This manual provides essential information on how to set up, operate, and maintain your earbuds.

WHAT'S IN THE BOX

- Grundig Wireless Bluetooth Open-Ear Earbuds
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the components of your earbuds:



Figure 1: Close-up of a single earbud, highlighting the speaker and flexible ear hook.

- **Earbud Unit:** Contains the speaker and internal electronics.
- **Flexible Ear Hook:** Designed to fit securely around your ear.
- **Microphone:** For hands-free calls.
- **Touch Control Area:** For managing music and calls.
- **USB-C Charging Port:** Located on one of the earbuds for power input.

SETUP

1. Charging the Earbuds

1. Connect the supplied USB-C charging cable to the charging port on the earbuds.
2. Connect the other end of the USB-C cable to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The indicator light on the earbuds will show the charging status. A full charge takes approximately 1.5 hours.
4. Once fully charged, disconnect the charging cable.

2. Pairing with a Device

To connect your earbuds to a Bluetooth-enabled device:

1. Ensure the earbuds are charged and powered off.
2. Press and hold the touch control area on one earbud until the indicator light flashes, indicating pairing mode.
3. On your device (phone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "Grundig Earbuds" (or similar name) from the list of found devices.
5. Once connected, the indicator light on the earbuds will change, usually to a slow flash or off, and you will hear an audible confirmation.
6. The earbuds will automatically attempt to reconnect to the last paired device when powered on.

3. Wearing the Earbuds

For optimal comfort and sound, wear the earbuds as shown:



Figure 2: Proper placement of the earbuds with the ear hook.

- Place the earbud unit near your ear canal, ensuring the speaker is positioned to direct sound into your ear.
- Gently hook the flexible ear hook behind your ear to secure the earbud in place.

- Adjust for a comfortable and stable fit.

OPERATING THE EARBUDS

Power On/Off

- **Power On:** Press and hold the touch control area for a few seconds until you hear a power-on prompt.
- **Power Off:** Press and hold the touch control area for a few seconds until you hear a power-off prompt.

Music Playback

- **Play/Pause:** Tap the touch control area once.
- **Next Track:** Double-tap the right earbud's touch control area.
- **Previous Track:** Double-tap the left earbud's touch control area.

Call Management

- **Answer/End Call:** Tap the touch control area once during an incoming call or an active call.
- **Reject Call:** Press and hold the touch control area for 2 seconds during an incoming call.

Volume Control

Volume control is typically managed directly from your connected device. The earbuds support media control functions for play/pause and track skipping.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the earbuds. Do not use abrasive cleaners or immerse them in water.
- **Storage:** Store the earbuds in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the earbuds regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

Problem	Solution
Earbuds do not power on.	Ensure the earbuds are fully charged. Connect them to the USB-C charging cable and allow 1.5 hours for a full charge.
Cannot pair with device.	Make sure Bluetooth is enabled on your device. Ensure the earbuds are in pairing mode (indicator light flashing). Move the earbuds closer to your device. Forget previous pairings on your device and try again.
No sound or low volume.	Check the volume level on both your connected device and the earbuds. Ensure the earbuds are properly seated on your ears. Reconnect the earbuds to your device.

Problem	Solution
Calls are unclear.	Ensure the microphone is not obstructed. Move to an area with less background noise. Check your device's call settings.
Earbuds disconnect frequently.	Ensure the earbuds are within the Bluetooth range of your device. Avoid obstacles between the earbuds and your device. Charge the earbuds if the battery is low.

SPECIFICATIONS

Model Number	8711252259871
Brand	Grundig
Connectivity Technology	Wireless (Bluetooth 5.3)
Ear Placement	Open Ear
Control Method	Touch Control
Battery Life	Up to 5 hours
Charging Time	Approximately 1.5 hours
Charging Port	USB-C
Material	Plastic and Silicone
Water Resistance Level	Not waterproof
Compatible Devices	Mobile phones, tablets, laptops, game consoles, desktop computers, smart speakers
Special Features	Fast charging, Hands-free calls

SAFETY INFORMATION

- Do not use the earbuds at high volume for extended periods to prevent hearing damage.
- Do not use the earbuds in situations where inability to hear ambient sounds could be dangerous (e.g., driving, cycling, walking in traffic).
- Keep the earbuds away from water and moisture.
- Do not attempt to disassemble or modify the earbuds.
- Keep out of reach of children.
- Dispose of the product responsibly according to local regulations.

WARRANTY AND SUPPORT

Grundig products are designed for reliability and performance. For warranty information and customer

support, please refer to the documentation provided with your purchase or visit the official Grundig website. Please retain your proof of purchase for any warranty claims.