

Dapper Supply DP-FS1104

Dapper Supply 21-Inch Push Lawn Sweeper Instruction Manual

Model: DP-FS1104

INTRODUCTION

Thank you for choosing the Dapper Supply 21-Inch Push Lawn Sweeper. This manual provides essential information for the safe and efficient operation, assembly, maintenance, and troubleshooting of your new lawn sweeper. Please read this manual thoroughly before initial use and retain it for future reference.

This hand-powered lawn sweeper is designed to effectively collect grass clippings, leaves, and other light debris from your lawn, sidewalks, and driveways. Its 21-inch sweeping width and 3.5 cubic feet hopper bag allow for efficient cleanup.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury or damage.

- Read all instructions before operating the sweeper.
- Keep children and pets away from the operating area.
- Wear appropriate personal protective equipment, such as gloves and sturdy footwear.
- Ensure all parts are securely assembled before use.
- Do not use the sweeper on steep slopes where you cannot maintain proper footing.
- Clear the area of large objects (rocks, branches, etc.) that could damage the sweeper or be thrown.
- Store the sweeper in a dry, secure location when not in use.

ASSEMBLY INSTRUCTIONS

The Dapper Supply 21-Inch Push Lawn Sweeper features an advanced storage design for simple installation and disassembly. Follow these steps for assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components listed in the packing list are present.
2. **Attach Handles:** Connect the upper handle assembly to the lower handle assembly. Ensure the quick clips on both sides facilitate easy assembly.
3. **Secure Hopper Bag Frame:** Attach the frame for the hopper bag to the main sweeper body. The bag is easily removable from this frame for disposal.

4. **Install Hopper Bag:** Slide the non-woven hopper bag onto its frame. Ensure it is securely seated to prevent debris from falling out during operation.
5. **Final Checks:** Before first use, ensure all bolts, nuts, and quick clips are tightened and secured.

DAPPER **WHERE POWER MEETS PRECISION!**

35.43"

Sweeping Width of 21"

26.38"

Comfortable Sponge Wrapped Handle

Adjustable Sweeping Height

Sturdy Tires for Effortless Moving

Figure 1: Overview of the Dapper Supply 21-Inch Push Lawn Sweeper, highlighting its dimensions and ergonomic features.

Adjustable Sweeping Height



Compact & Easy Storage



Hang Easily on Garage Wall



Convenient to Install & Use

Figure 2: Key benefits of the Dapper Supply Push Lawn Sweeper, including convenient setup and easy storage.

OPERATING INSTRUCTIONS

Operating your Dapper Supply lawn sweeper is straightforward. Follow these steps for optimal performance:

- 1. Adjust Sweeping Height:** The sweeper features an adjustable spinning brush height. Simply turn the hand-operated knob to customize the height. Adjust the brushes to just barely touch the top of the grass or surface you are sweeping. This ensures effective pickup of debris without damaging the lawn.
- 2. Begin Sweeping:** Push the sweeper forward at a steady, moderate pace. The dual spinning brushes will rotate and collect debris into the hopper bag.
- 3. Overlap Passes:** For best results, overlap each sweeping pass slightly to ensure complete coverage and prevent missed areas.
- 4. Empty Hopper Bag:** When the hopper bag is full, or its efficiency decreases, stop sweeping. The high-quality non-woven hopper bag has a spacious 3.5 cubic feet capacity. Easily remove the hopper bag from the frame and empty its contents into a compost pile or waste bin. Reattach the bag securely before continuing.

5. **Adapt to Terrain:** The adjustable height feature accommodates various surfaces, from sidewalks and driveways to yards and gardens, ensuring optimal performance on any terrain.



Figure 3: The lawn sweeper effectively collecting leaves, demonstrating its primary function.

DAPPER

FOR CLEAN & SPOTLESS LAWN



Figure 4: Adjusting the sweeping height knob for different types of debris and surfaces.

MAINTENANCE

Regular maintenance will extend the life of your Dapper Supply lawn sweeper and ensure continued optimal performance.

- **Cleaning:** After each use, clear any remaining debris from the brushes, wheels, and hopper bag. A damp cloth can be used to wipe down the exterior.
- **Brush Inspection:** Periodically inspect the thickened and reinforced brushes for wear or damage. While designed for durability, replacement may be necessary over time.
- **Wheel and Axle Check:** Ensure the durable rubber wheels spin freely and are not obstructed by debris. Check axles for any signs of wear or bending.
- **Storage:** Once your yard work is done, the sweeper can be neatly stored in a shed or hung on a garage wall. The bottom support feet provide stability against tipping when stored upright. Quick clips on both sides facilitate easy disassembly for compact storage if needed.



KEEP YOUR LAWN SPOTLESS

This heavy-duty sweeper features a sturdy thickened steel frame that ensures long-lasting use, even under rigorous conditions



Strong Rubber Wheels



Easy To Store

Smooth and easy maneuverability across various terrains

Figure 5: Demonstrating compact storage options and ease of installation.

TROUBLESHOOTING

This section addresses common issues you might encounter with your lawn sweeper.

Problem	Possible Cause	Solution
Sweeper not picking up debris effectively.	Brushes set too high. Hopper bag is full. Debris is wet or heavy. Brushes are worn.	Adjust brush height lower using the knob. Empty the hopper bag. Sweeper is designed for dry, light debris. Wait for conditions to improve or use a rake for wet/heavy material. Inspect brushes for wear; replace if necessary.
Wheels not turning smoothly.	Debris caught in wheels or axles. Wheels are damaged.	Clear any obstructions from wheels and axles. Inspect wheels for damage; contact support if replacement is needed.
Hopper bag detaches during use.	Bag not securely attached. Bag is overfilled.	Ensure the bag is fully seated on its frame. Empty the bag more frequently.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Number	DP-FS1104
Brand	Dapper Supply
Power Source	Hand-powered
Material	Plastic
Color	Gray
Style	Manual push
Item Weight	14 Pounds (6.35 kg)
Sweeping Width	21 Inches (53.5 cm)
Hopper Capacity	3.5 cubic feet
Product Dimensions (L x W x H)	40 x 21 x 39 inches (101.6 x 53.34 x 99.06 cm)
UPC	850064526004

WARRANTY AND SUPPORT

The Dapper Supply 21-Inch Push Lawn Sweeper is covered by a **1-year limited warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or replacement parts, please contact Dapper Supply customer service. Keep your proof of purchase for warranty validation.

For more information, visit the official Dapper Supply store: [Dapper Supply Store](#)

© 2025 Dapper Supply. All rights reserved.

Related Documents

 <p>DAPPER WARRANTY</p> <p>WARRANTY</p> <p>Dapper Supply, Inc. offers a limited warranty on its products. This warranty covers defects in materials and workmanship under normal use. The warranty is limited to one year from the date of purchase. For more information, please contact Dapper Supply customer service.</p>	<p>Dapper Supply Limited Warranty Information</p> <p>Details the limited warranty provided by Dapper Supply, Inc. for its products, covering manufacturing defects for one year from the date of purchase and outlining warranty exclusions and how to claim service.</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



[\[pdf\]](#) User Manual Instructions Catalog

DP FS1104 Manual Moshe Simon The wall storage bracket can be installed in your shed or garage using two screws For Wooden Walls Screw directly into the wood ensuring is strong DAPPER SUPPLY Walk Behind Outdoor Hand Push lawn Sweeper 3 5 cu ft Hopper Bag and 21 Sweeping Width Gray HD Home Depot3f2a4b23 4751 4d4e bebc 77949f5eb44c3f2a4b23 77949f5eb44cimages thdstatic catalog Images 3f 3f2a4b23 77949f5eb44c |||

Lawn Sweeper User Manual Walk-Behind Outdoor Hand Push Lawn Sweeper MODEL: **DP-FS1104** For any service-related issues, please contact us: Phone Number:718-301-8243 Email address: support@dapper-supply.com TABLE OF CONTENTS Safety

lang:en score:32 filesize: 5.21 M page_count: 8 document date: 2024-09-22