



[Manuals.plus](#) /

> [LOVENSE](#) /

> LOVENSE Lush 4 Remote Control G-spot Vibrator, Wearable Long Distance Adult Sex Toys & Games with LED Light, App Controlled Egg Vibrators for Women Couples, Powerful Vibration, Discreet, Waterproof Standard

LOVENSE Lush 4

LOVENSE Lush 4 User Manual

Model: Lush 4 | Brand: LOVENSE

INTRODUCTION

The LOVENSE Lush 4 is an advanced app-controlled G-spot vibrator designed for both solo and long-distance intimate experiences. Featuring powerful vibrations, customizable LED lighting, rapid charging, and discreet wearability, it offers enhanced pleasure and connectivity. This manual provides comprehensive instructions for setup, operation, maintenance, and troubleshooting to ensure optimal use of your device.

PRODUCT OVERVIEW

The Lush 4 is engineered for precise G-spot stimulation with its thoughtful curve design and ergonomic shape. It integrates seamlessly with the Lovense Remote App, allowing for versatile control and interactive play. Key features include:

- **Powerful G-Spot Stimulation:** Equipped with an upgraded motor and ergonomic U-shaped tail for precise and hands-free use.
- **App Control & Long-Distance Play:** Control the device and adjust intensity via the Lovense Remote App, enabling intimate experiences regardless of distance.
- **Vibrant LED Light Tail:** An innovative LED light changes intensity with vibrations, enhancing the visual experience. This feature can be enabled or disabled in the app.
- **Revolutionary Battery Technology:** Offers rapid charging (5 minutes for 1 hour of use) and extended play time (up to 50 minutes for a full charge, providing up to 350 minutes of use).
- **Discreet & Whisper Quiet:** Designed for discreet wearability with a low noise level (36dB), allowing for use in various settings.
- **IPX7 Waterproof:** Fully waterproof for easy cleaning and safe use in water.

LOVENSE Lush 4

Remote-controlled G-spot vibrator



**App
Remote Control**



**10000+
Modes**



**Intense
Vibrations**



**IPX7
Waterproof**



**Fast &
Stable Connectivity**



**Rapid
Charging**



**36 dB
Whisper Quiet**



**Dynamic
LED Light**

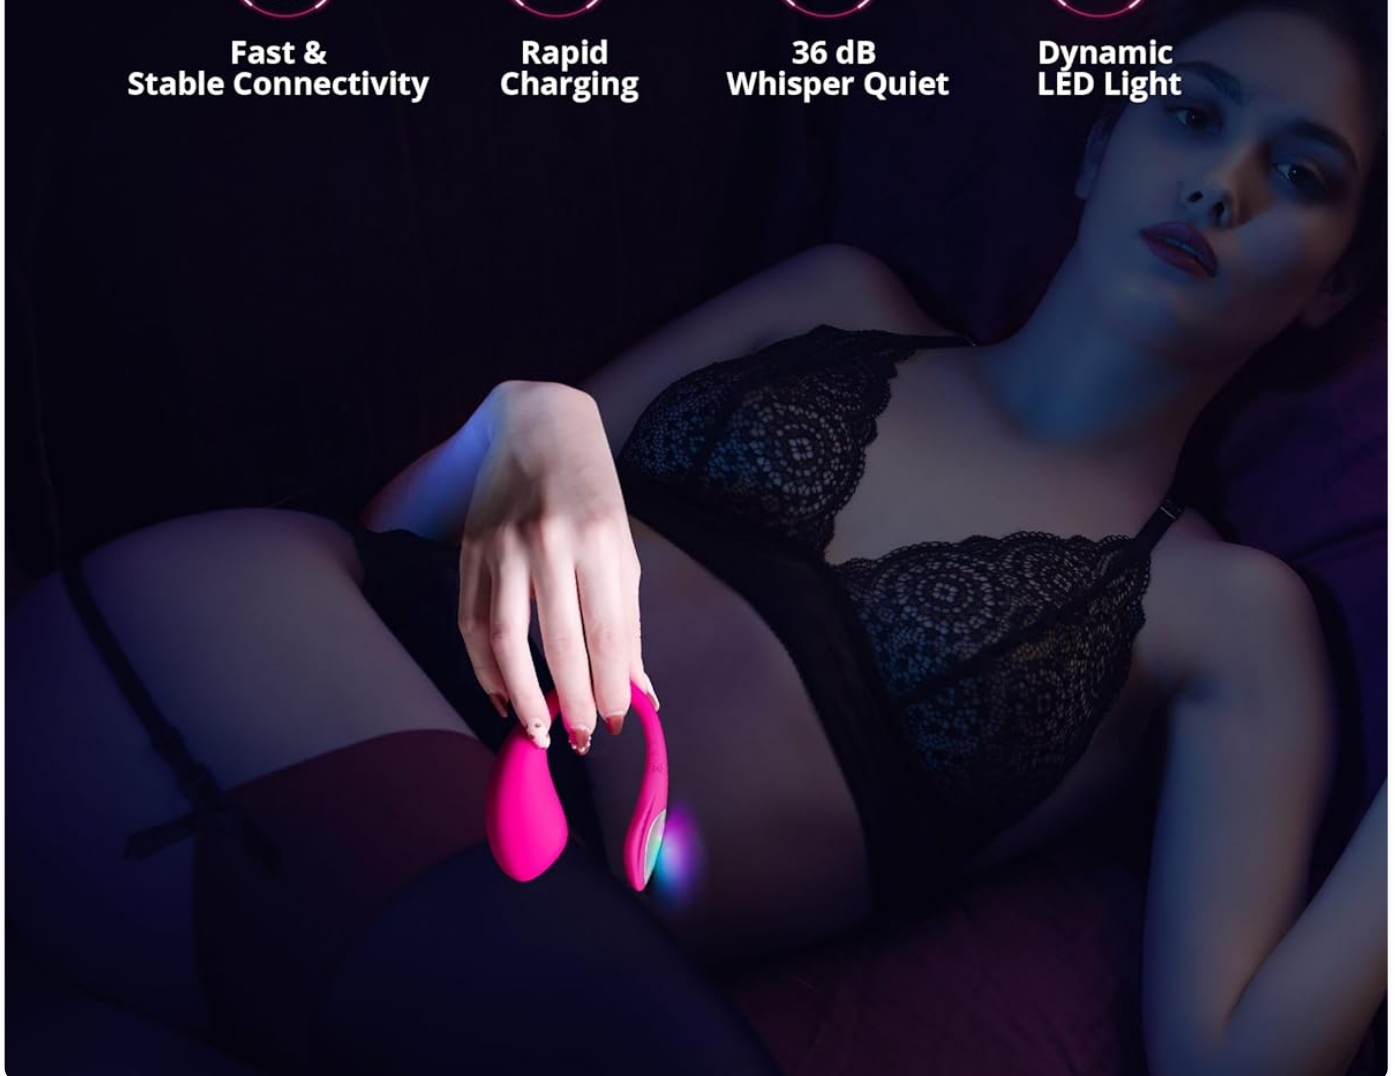


Figure 1: Key features of the LOVENSE Lush 4.

WHAT'S INCLUDED

Your LOVENSE Lush 4 package includes the following items:

- LOVENSE Lush 4 Device
- USB Charging Cable

- User Manual (this document)
- Product Box
- Discreet Packaging

Discreet Package

Protect your privacy



Figure 2: Package contents and discreet shipping.

1. Charging the Device

Before first use, fully charge your Lush 4. The device features rapid charging technology.

- Connect the USB charging cable to the charging port on the Lush 4.
- Plug the other end of the cable into a USB power source (e.g., computer, wall adapter).
- A full charge takes approximately 50 minutes.
- A 5-minute charge provides up to 1 hour of use.

Revolutionary Battery Upgrade

Uninterrupted fun with rapid charging



Charging Time: **50** minutes



Use Time: Up to **350** minutes



Figure 3: Charging the Lush 4.

2. Downloading the Lovense Remote App

The Lush 4 is primarily controlled via the Lovense Remote App. Ensure you download the official app for your smartphone.

- Search for "Lovense Remote" in your device's app store (App Store for iOS, Google Play Store for Android).
- Download and install the application.



Figure 4: Download the Lovense Remote App.

3. Connecting to the App

Once the app is installed, connect your Lush 4:

- Ensure your Lush 4 is charged and powered on.
- Enable Bluetooth on your smartphone.
- Open the Lovense Remote App. The app will automatically search for nearby Lovense devices.
- Select "Lush 4" from the list of available devices to establish a connection.

Upgraded LED Light & Bluetooth

Customize your tail lights, pair in seconds



Figure 5: Bluetooth connection and LED light customization.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press and hold the power button on the device until the LED light illuminates/extinguishes.
- **Manual Control:** The Lush 4 can be operated manually by pressing the power button to cycle through vibration modes.

Using the Lovense Remote App

The app offers extensive control and features:



- **Remote Control:** Adjust vibration intensity and patterns directly from the app.
- **My Patterns:** Create and save custom vibration patterns.
- **Control Link:** Share a link with a partner to allow them to control your device remotely, enabling long-distance play.
- **Music Sync:** Sync vibrations to the rhythm of your favorite music.
- **LED Light Customization:** Change the color and intensity of the LED tail light within the app.

Lovense Remote App

Remote control, custom patterns, sound control, music syncing... explore more!

 New York

 Berlin

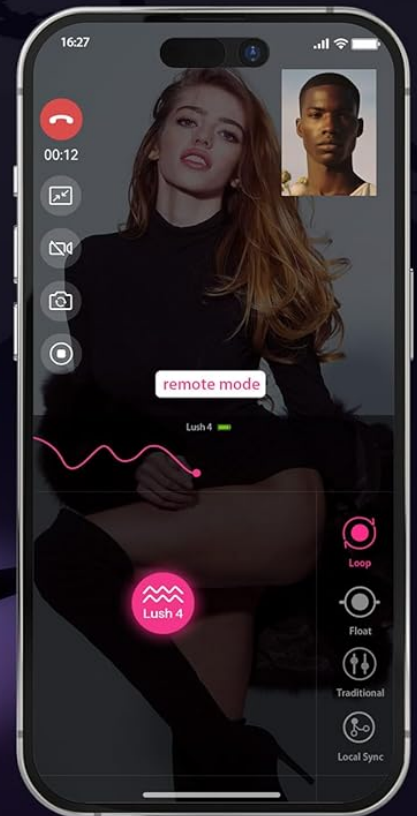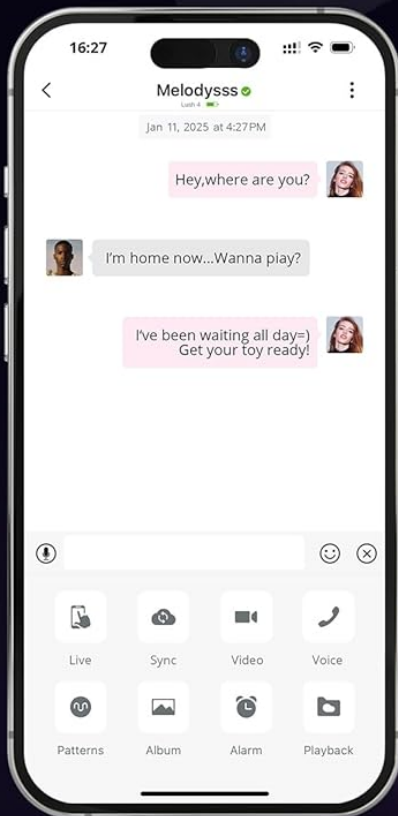


Remote


My Patterns


Control Link


Sound


Music

Figure 6: Lovense Remote App features for versatile control.



Figure 7: App control for the Lush 4.

Usage Scenarios

The Lush 4 is designed for various types of play:

- **Solo Play:** Enjoy personalized pleasure with full app control.
- **Couple Play:** Integrate the device into shared experiences.
- **Long-Distance Play:** Connect with a partner across distances using the Control Link feature.
- **Wearable Use:** The ergonomic design allows for discreet, hands-free use.

Your browser does not support the video tag.

Video 1: Demonstrates the compact design, customizable LED lights, rapid charging, strong vibrations, quick and stable Bluetooth connectivity, and various play modes (solo, couple, long-distance) of the LOVENSE Lush 4. It also highlights its IPX7 waterproof rating and smooth surface for seamless use.

Whisper Quiet

Allows you to enjoy sneaky fun without being noticed



wearable



Figure 8: The Lush 4 is designed to be whisper quiet for discreet use.

MAINTENANCE AND CARE

Proper care ensures the longevity and hygiene of your Lush 4.

- **Cleaning:** The Lush 4 is IPX7 waterproof, allowing for easy cleaning. Wash the device with warm water and mild soap after each use. Rinse thoroughly.

- **Drying:** Pat dry with a lint-free cloth. Allow to air dry completely before storing.
- **Storage:** Store in a clean, dry place away from direct sunlight and extreme temperatures.
- **Lubricant:** For optimal comfort and experience, Lovense water-based lubricant is recommended. Avoid oil-based lubricants as they may damage the silicone material.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not turning on.	Low battery.	Charge the device fully.
Cannot connect to app via Bluetooth.	Bluetooth is off; device is out of range; app issue.	Ensure Bluetooth is enabled on your phone. Bring device closer to phone. Restart the app and/or device.
No vibration or weak vibration.	Low battery; internal wiring issue (rare).	Charge the device. If the issue persists after charging, contact customer support.
LED light not working.	LED feature disabled in app; device malfunction.	Check app settings to ensure LED light is enabled. If still not working, contact support.

SPECIFICATIONS

- **Model:** Lush 4
- **Material:** Silicone
- **Color:** Pink
- **Dimensions (L x W x H):** 2.17 x 2.36 x 2.36 inches
- **Weight:** 7.41 ounces
- **Style:** Wearable
- **Waterproof Rating:** IPX7
- **Charging Time:** Approximately 50 minutes for full charge (5 minutes for 1 hour play)
- **Usage Time:** Up to 350 minutes (approx. 5.8 hours) on a full charge

WARRANTY AND SUPPORT

LOVENSE products are designed for quality and durability. For any questions or concerns regarding your Lush 4, please contact the LOVENSE Official Store directly. Our support team is available to assist you within 24 hours.

For the most up-to-date warranty information and support resources, please visit the official LOVENSE website or contact their customer service.



Figure 9: LOVENSE Official Logo.