

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BOSHIRO](#) /

› [BOSHIRO 72" Electric Fireplace with Mantel User Manual](#)

BOSHIRO SKU220095-white

BOSHIRO 72" Electric Fireplace with Mantel User Manual

Model: SKU220095-white

[Contents](#) [Assembly](#) [Introduction](#) [Safety Information](#) [Package](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your BOSHIRO 72" Electric Fireplace with Mantel. This versatile furniture piece combines a stylish farmhouse entertainment center with a functional electric fireplace insert, designed to enhance the ambiance and comfort of your living space. Please read this manual thoroughly before assembly and use to ensure safe and efficient operation.



Figure 1.1: The BOSHIO 72" Electric Fireplace with Mantel, featuring an antique white and brown finish, designed to accommodate TVs up to 80 inches.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the product.

- Read all instructions before using this appliance.
- Do not operate any fireplace with a damaged cord or plug, or if the heater malfunctions or has been dropped or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- The electric fireplace features a safety cut-off device for overheating protection, which will automatically power off the unit if it overheats.
- Ensure the product is assembled on a flat, stable surface to prevent tipping.

3. PACKAGE CONTENTS

Your BOSHIRO Electric Fireplace with Mantel will be delivered in two separate parcels, which may arrive at different times. Please ensure you have received both packages before beginning assembly. All parts are numbered and pre-drilled for ease of assembly.



Please note: Products will be sent in two parcels and may arrive at different times.

Figure 3.1: The product is shipped in two parcels: one for the electric fireplace mantel and one for the 23" insert heater. These may arrive separately.

3.1 Included Components:

- Electric Fireplace Mantel components (numbered panels, shelves, hardware)
- 23" Electric Fireplace Insert Heater

- Remote Control for Fireplace Insert
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Instruction Manual (this document)

4. ASSEMBLY INSTRUCTIONS

Assembly of the BOSHIRO Electric Fireplace with Mantel typically takes approximately 3 hours for two people. Follow the step-by-step instructions provided in the included assembly guide. A detailed assembly video is also available to assist you through the process.

4.1 Pre-Assembly Steps:

1. Unpack all components and verify against the parts list in your assembly guide.
2. Lay out all parts on a clean, soft surface (e.g., a blanket or carpet) to prevent scratches.
3. Identify all hardware and separate them into labeled groups as per the assembly guide.
4. Ensure you have the necessary tools (e.g., screwdriver, hammer).

4.2 Assembly Tips:

- It is highly recommended to assemble the unit in the room where it will be used due to its weight (approximately 108.5 lbs).
- While the instructions are primarily pictorial, they are clear for those familiar with flat-pack furniture assembly.
- For optimal cable management, note that the back panel for the shelves may not have pre-drilled holes for cables. You may need to create openings or omit the back panel on the side where media devices (e.g., modem, gaming console) will be placed.

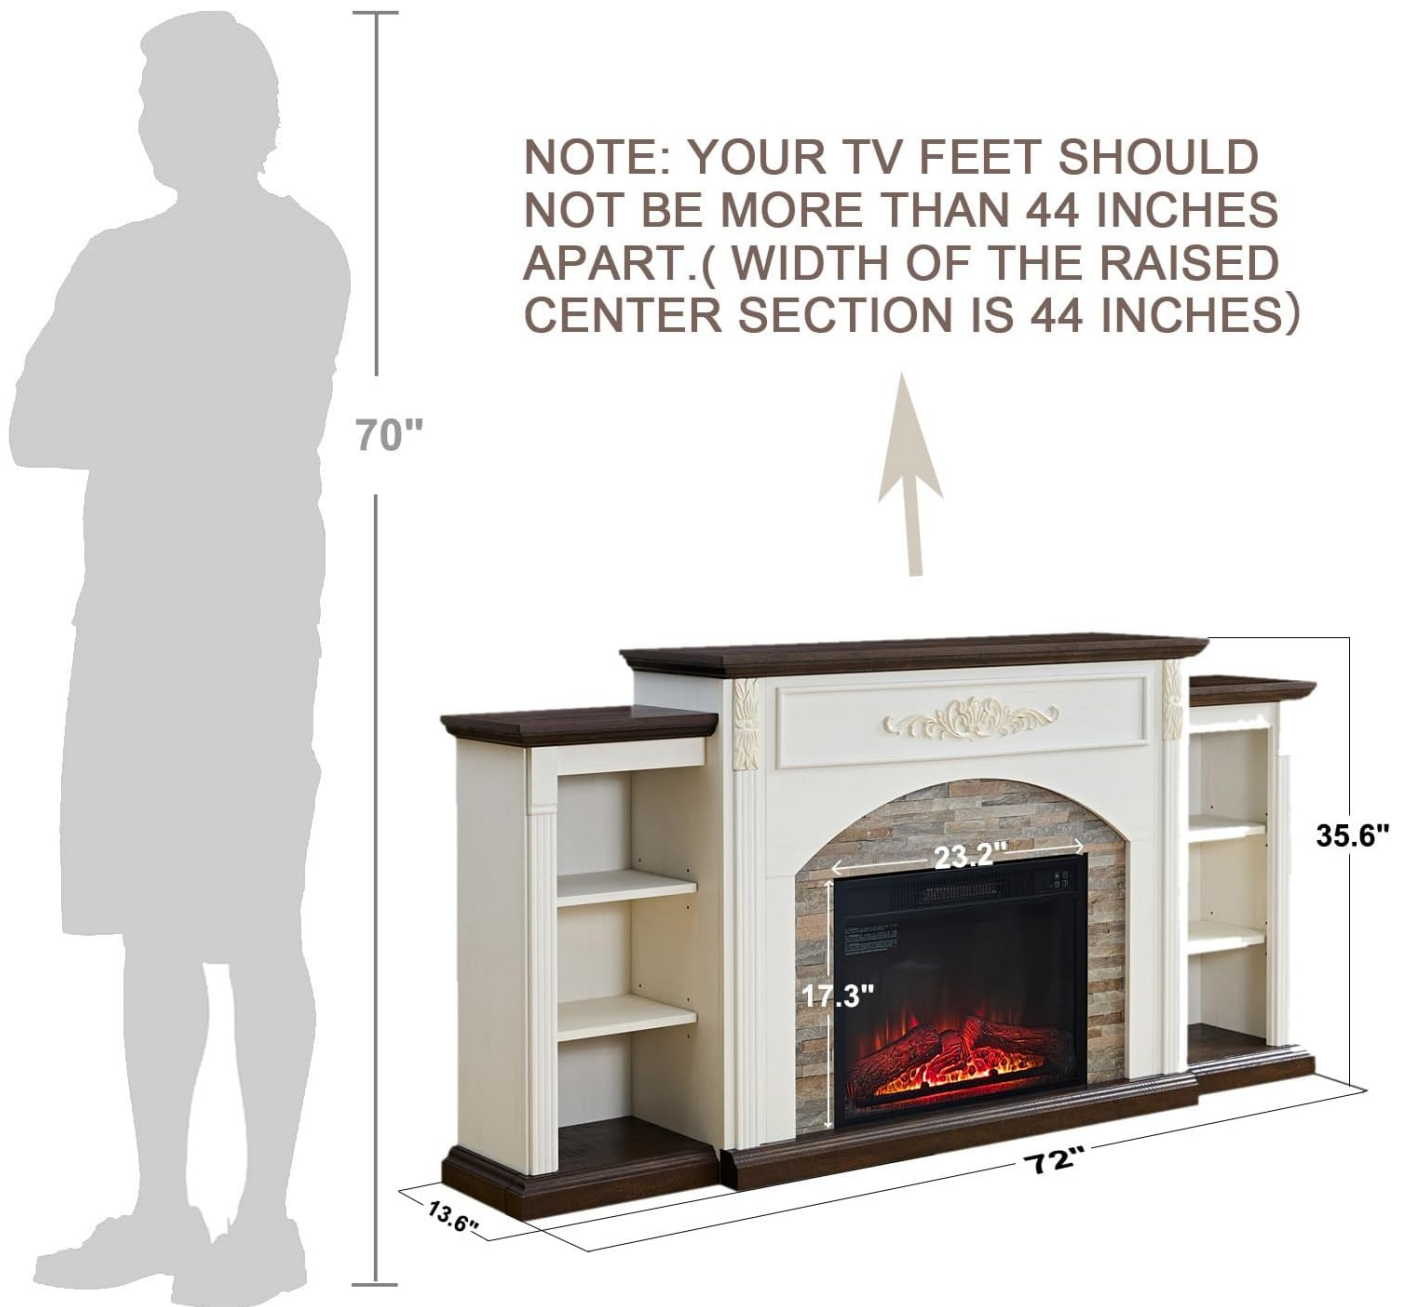


Figure 4.1: Product dimensions and TV feet spacing recommendation. The width of the raised center section is 44 inches, so TV feet should not be more than 44 inches apart.

5. OPERATING INSTRUCTIONS

5.1 Electric Fireplace Insert Operation:

The 23" electric fireplace insert offers various features for comfort and ambiance. It can be operated using the control panel on the unit or the included remote control.

23" ELECTRIC FIREPLACE

Multifunctional & Cozy Heating



Heater

750W/1500W



Timer

0.5-6H



Temperature

62°F-82°F/17°C-27°C



LOW



MEDIUM



HIGH

Figure 5.1: The 23" electric fireplace insert with its control panel and remote control, illustrating the various flame effects and heating options.

- **Power (ON/OFF):** Press the power button to turn the fireplace on or off.
- **Heater:** The heater has two settings: Low (750W) and High (1400W). Select the desired heating level based on your preference and room temperature.
- **Temperature Control:** Adjust the temperature from 62°F to 82°F (17°C to 27°C) using the temperature control buttons. There are 22 levels of adjustment.
- **Timer:** Set the built-in timer for automatic shut-off, ranging from 0.5 to 6 hours. This feature allows for peaceful sleep without needing to manually turn off the unit.
- **LED Flame Effect:** The fireplace features 3 types of realistic LED flame effects. You can also adjust the flame brightness to three levels (Low, Medium, High) to create your desired ambiance.



Figure 5.2: Illustration of the three adjustable brightness levels for the LED flame effect.

5.2 TV Stand Functionality:

The mantel is designed to function as a TV stand, accommodating televisions up to 80 inches. The side compartments offer adjustable shelves for storing media devices, books, or decorative items.



Figure 5.3: The fireplace mantel serving as an entertainment center, with a television mounted above and storage shelves on either side.

6. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Dust the mantel and fireplace insert regularly with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and mild cleaner, then dry thoroughly. Do not use abrasive cleaners or solvents.
- **Fireplace Insert:** Ensure the fireplace insert is unplugged before cleaning. Clean the air intake and exhaust vents periodically to prevent dust buildup, which can affect performance and trigger the overheating protection.
- **Inspections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary. Inspect the power cord for any signs of damage.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your electric fireplace.

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power; Overheating protection activated; Remote control battery low.	Ensure the unit is plugged into a working outlet. Check circuit breaker. Unplug the unit, wait 10-15 minutes for it to cool down, then plug back in. Replace remote control batteries.
No heat output.	Heater setting is off; Overheating protection activated.	Ensure the heater function is activated and set to 750W or 1400W. Check for obstructions around air vents. Allow unit to cool if it has overheated.
Flame effect not working.	Flame effect is turned off; LED bulb issue.	Ensure the flame effect function is turned on. If the issue persists, contact customer support.
Parts do not align during assembly.	Incorrect orientation of parts; Manufacturing tolerance.	Double-check the part numbers and orientation against the assembly instructions. If a part appears defective or misaligned, contact customer support for assistance.

8. SPECIFICATIONS

Brand: BOSHIRO

Model Name: 70dh-w

Item Model Number: SKU220095-white

Product Dimensions: 13.6"D x 72"W x 35.6"H

Material: High-density hardwood, Stone (simulated)

Color: Antique White & Brown

Power Source: Corded Electric

Heat Output: 1400 Watts (High), 750 Watts (Low)

Temperature Range: 62°F to 82°F (17°C to 27°C)

Timer Settings: 0.5 to 6 hours

Special Features: Dimmer, LED Flame, Overheat Protection, Safety Shut Off, TV Stand functionality

Installation Type: Freestanding

Item Weight: 108.5 Pounds

Room Type: Living Room, Bedroom

9. WARRANTY & SUPPORT

9.1 Limited Warranty:

This BOSHIRO product comes with a Limited Warranty. Please refer to the specific warranty documentation included with your purchase for details regarding coverage, terms, and conditions.

9.2 Return Policy:

The product is eligible for a 30-day easy return policy. For more information on returns, please consult the retailer's return policy or your purchase documentation.

9.3 Customer Support:

Should you have any questions regarding assembly, operation, or maintenance, or if you encounter any issues not covered in this manual, please contact BOSHIRO customer support. Contact information can typically be found on the product packaging or the retailer's website.

You can also visit the official BOSHIRO store for more information and support: [BOSHIRO Store on Amazon](#).