

RCA 114KZ

RCA 10.1" WiFi Digital Picture Frame (Model 114KZ) Instruction Manual

Model: **114KZ** | Brand: **RCA**

1. INTRODUCTION

This manual provides detailed instructions for setting up and operating your RCA 10.1" WiFi Digital Picture Frame, Model 114KZ. This electronic photo frame allows you to display photos and videos, share memories wirelessly, and customize your viewing experience.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x RCA 10.1" WiFi Digital Picture Frame
- 1 x Frame Stand
- 1 x Power Adapter
- 1 x User Manual (this document)
- 2 x Screws (for wall mounting)

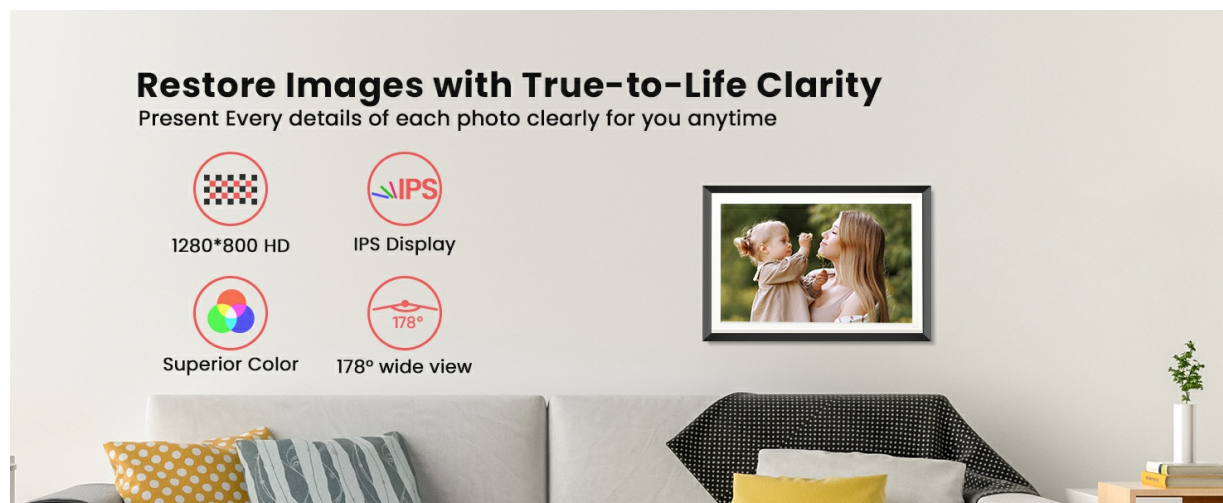 


Image: Contents of the RCA Digital Picture Frame package.

3. SETUP INSTRUCTIONS

3.1. Power Connection

1. Connect the power adapter to the DC input port on the back of the digital picture frame.
2. Plug the power adapter into a standard electrical outlet. The frame will automatically power on.

3.2. Wi-Fi Connection

1. On the frame's touchscreen, navigate to **Settings > Wi-Fi**.
2. Select your desired Wi-Fi network from the list.
3. Enter the Wi-Fi password and tap **Connect**.

3.3. Uhale App Download and Pairing

The Uhale app is required for wireless photo and video sharing.

1. Download the "Uhale" app from the App Store (iOS) or Google Play Store (Android) on your smartphone.
2. Open the Uhale app and create an account or log in.
3. On the digital picture frame, go to **Settings > My Frame** to find your unique frame ID or QR code.
4. In the Uhale app, select **Add Frame** and enter the frame ID or scan the QR code displayed on the frame.
5. Once paired, you can begin sharing photos and videos.



Image: Three steps to set up the RCA Digital Picture Frame with the Uhale app.

3.4. Adding Users

You can invite multiple users to share photos and videos to your frame via the Uhale app. There is no limit to the number of users.

1. In the Uhale app, navigate to the **Friends** section.
2. Select **Add Friend** and share your frame's unique code with family and friends.
3. Once they add your frame to their app, they can send photos and videos directly to it.



Image: Unlimited user connections for sharing photos to the digital frame.

4. OPERATING INSTRUCTIONS

4.1. Touchscreen Navigation

The frame features an HD IPS touch screen for easy navigation:

- **Swipe Left/Right:** To browse through photos and videos.
- **Tap:** To select an item or open menus.
- **Pinch-to-Zoom:** To zoom in or out on photos.



Image: Touchscreen interface and functions of the RCA Digital Picture Frame.

4.2. Photo and Video Management

From the main display, tap the screen to reveal options:

- **Favorite:** Mark a photo as a favorite.
- **Lock:** Prevent a photo from being deleted.
- **Hide Photo:** Remove a photo from the slideshow without deleting it.
- **Delete:** Permanently remove a photo or video.
- **Adjust Photo:** Crop or resize the photo to fit the frame.
- **Rotate Photo:** Change the orientation of the photo.
- **Slideshow:** Access slideshow settings (e.g., interval, order, shuffle).

Built-in 32GB Storage

Expandable with USB/SD Card(up to 32GB) for more space.



Image: On-screen menu for managing photos and videos.

4.3. Auto-Rotate Function

The frame automatically adjusts the display orientation (portrait or landscape) based on how it is positioned.

Auto Rotate & Wall Mountable

Easily switch between portrait and landscape, or mount on the wall to fit your space.



Image: Auto-rotate feature and wall-mounting options.

4.4. Adjusting Brightness and Volume

You can quickly adjust display brightness and video volume directly on the touchscreen:

- **Brightness:** Swipe up or down on the *left* side of the screen.
- **Volume:** Swipe up or down on the *right* side of the screen.



Image: Quick adjustment of brightness and volume on the touchscreen.

4.5. Sleep Mode and Clock

Configure sleep mode to save energy and display a clock:

- Navigate to **Settings > Display Settings > Sleep Mode**.
- Set the desired start and end times for sleep mode.
- You can choose to display a clock during sleep mode or turn off the screen completely.



Image: Sleep mode and clock display feature.

5. STORAGE AND EXPANSION

The RCA Digital Picture Frame comes with 32GB of built-in memory, capable of storing over 60,000 photos.

5.1. External Storage

 
 
 
You can expand storage and transfer media using:

- **SD Card:** Insert an SD card (up to 64GB) into the SD card slot on the back of the frame.
- **USB Drive:** Plug a USB drive (up to 64GB) into the USB port on the back of the frame.

The frame will detect external storage, allowing you to import, export, or view files directly.

Unlimited User Connections

Stay connected with loved ones, no matter the distance.

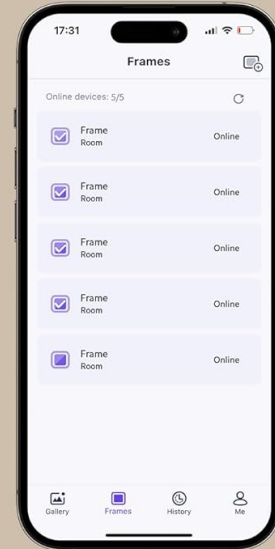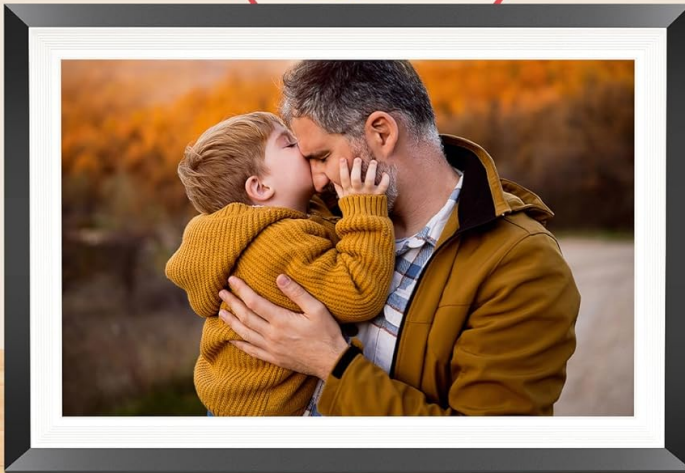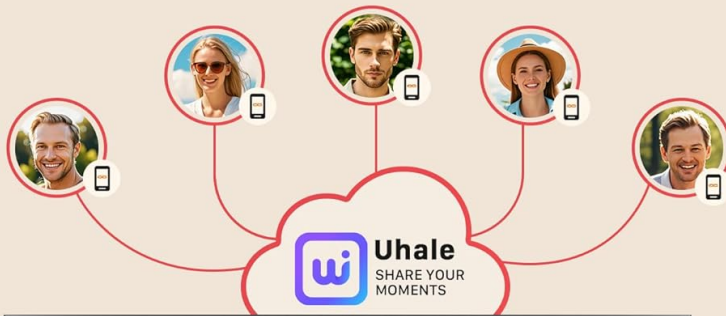

You can send pictures to multiple frames via the Uhale app.

Image: Built-in 32GB storage and external storage options (USB/SD card).

6. MOUNTING OPTIONS

The frame offers versatile placement options:

- **Desk Stand:** Attach the included detachable stand to place the frame on a desk or shelf.
- **Wall Mounted:** Use the integrated wall-mount holes and included screws to hang the frame on a wall in either portrait or landscape orientation.



Image: Versatile placement options for the digital picture frame.

7. SPECIFICATIONS

Feature	Specification
Screen Size	10.1 Inches
Resolution	1280x800 HD
Internal Storage	32GB
Expandable Storage	SD Card (up to 64GB), USB (up to 64GB)
Connectivity	WiFi
Display Type	IPS Touch Screen
Auto Rotate	Yes
Mounting Options	Desk Stand, Wall Mounted
Product Dimensions	10.08 x 6.85 x 0.99 inches
Item Weight	1.14 pounds

8. MAINTENANCE

- To ensure the longevity and optimal performance of your digital picture frame, follow these maintenance guidelines:
- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and frame. Avoid using abrasive cleaners, solvents, or aerosol sprays.
 - **Placement:** Place the frame on a stable surface or mount it securely on a wall. Avoid direct sunlight, extreme temperatures, and high humidity.

- **Power:** Use only the provided power adapter. Unplug the frame during electrical storms or when not in use for extended periods.

9. TROUBLESHOOTING

If you encounter any issues with your RCA Digital Picture Frame, refer to the following common solutions:

- **Frame not turning on:** Ensure the power adapter is securely connected to both the frame and a working electrical outlet.
- **Cannot connect to Wi-Fi:** Double-check your Wi-Fi password. Ensure the frame is within range of your Wi-Fi router. Restart the frame and your router.
- **Photos not displaying:** Verify that photos are in a supported format (e.g., JPEG, PNG). Ensure they are properly uploaded to the frame's internal storage or accessible via external storage.
- **Touchscreen unresponsive:** Restart the frame. If the issue persists, contact customer support.
- **Uhale app connection issues:** Ensure both your phone and the frame are connected to the internet. Verify the frame ID or QR code is entered correctly.



10. WARRANTY AND SUPPORT




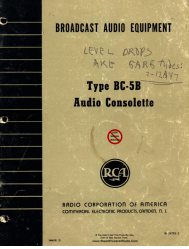 
Each RCA 10.1" Wi-Fi Digital Frame undergoes inspection to ensure high quality standards. For technical support or warranty inquiries, please contact our customer service team.

- **Customer Service:** Reach out via the Amazon Message Center or the After-Sales Mailbox provided in your product documentation.
- **Return Policy:** The product is eligible for a refund or replacement within 30 days of purchase.
- **Technical Support:** Lifetime technical support is available.

© 2025 RCA. All rights reserved.

Related Documents - 114KZ

	<p>RCA iRB24 LED TV User Manual - Setup and Operation Guide</p> <p>Get started with your RCA iRB24 LED TV. This user manual covers installation, remote control, picture and sound settings, channel tuning, and troubleshooting for your RCA television.</p>
	<p>RCA Ultra HD Smart TV Safety Precautions and Getting Started Guide</p> <p>Comprehensive safety precautions, important instructions, accessories list, and getting started guide for RCA Ultra HD Smart TVs, including remote control and battery information.</p>

 <p>IFIXIT RCA Studio II Teardown RCA Studio II home TV (1970s) Teardown Written By: Andrew Riechert</p>	<p>RCA Studio II Teardown Guide: History, Components, and Analysis</p> <p>A comprehensive teardown of the RCA Studio II home video game console, detailing its history, technical specifications, internal components, and reasons for its market failure. Includes step-by-step disassembly and analysis of its 1970s electronics.</p>
 <p>INSTRUCTION MANUAL RCA LED TV RLEDV2488A</p>	<p>RCA RLEDV2488A LED TV Instruction Manual</p> <p>Comprehensive instruction manual for the RCA RLEDV2488A LED TV, covering setup, operation, picture and sound settings, channel management, parental controls, troubleshooting, and specifications.</p>
 <p>IFIXIT RCA RCT6378W2 Power Button Replacement This guide will show you how to replace the power button on your RCA RCT6378W2 tablet. Written By: John Sudduth</p>	<p>RCA RCT6378W2 Power Button Replacement Guide</p> <p>Detailed guide to replace the power button on an RCA RCT6378W2 tablet, including tools and step-by-step instructions.</p>
 <p>BROADCAST AUDIO EQUIPMENT LEVEL GAUGE AND GAIN PRESET Type BC-5B Audio Console RCA RADIO CORPORATION OF AMERICA COMMERCIAL ELECTRONIC INDUSTRIES, N.Y.</p>	<p>RCA Type BC-5B Audio Console: Technical Manual and Installation Guide</p> <p>Comprehensive technical manual and installation guide for the RCA Type BC-5B Audio Console, detailing its specifications, operation, maintenance, and wiring.</p>