

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Seesii](#) /

› [Seesii Mini Chainsaw Cordless 6-inch and Lithium Battery Charger User Manual](#)

Seesii Mini Chainsaw 6-inch

Seesii Mini Chainsaw Cordless 6-inch and Lithium Battery Charger User Manual

Model: Mini Chainsaw 6-inch

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your Seesii Mini Chainsaw Cordless 6-inch and its accompanying Lithium Battery Charger. Please read this manual thoroughly before initial use to ensure proper handling and to prevent injury or damage.

2. SAFETY INSTRUCTIONS

Always prioritize safety when operating power tools. Failure to follow these instructions may result in serious injury or property damage.

General Safety

- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

Personal Protective Equipment (PPE)

- Always wear safety glasses or goggles to protect your eyes from flying debris.
- Wear heavy-duty gloves to protect your hands.
- Wear appropriate clothing; avoid loose clothing or jewelry that can get caught in moving parts.
- Consider hearing protection, especially during prolonged use.

Electrical Safety (Charger)

- Do not expose the charger to rain or wet conditions. Water entering a power tool or charger will increase

the risk of electric shock.

- Do not abuse the cord. Never use the cord for carrying, pulling, or unplugging the power tool or charger. Keep cord away from heat, oil, sharp edges, or moving parts.
- Ensure the charger is connected to a power outlet with the correct voltage as specified on the charger.

3. PRODUCT COMPONENTS

The Seesii Mini Chainsaw package includes the following components:

- Seesii Mini Chainsaw (6-inch)
- Lithium-ion Batteries (2x 2.0Ah)
- Battery Charger
- Replacement Chains (2x)
- Guide Bar
- Wrench
- Safety Gloves
- Safety Goggles
- Oil Bottle (empty, for lubrication)
- Storage Case



Figure 3.1: Complete package contents of the Seesii Mini Chainsaw and charger. Includes the chainsaw, two batteries, charger, spare chains, guide bar, wrench, safety gear, oil bottle, and storage case.

4. SETUP

4.1 Charging the Battery

1. Connect the battery charger to a standard 100-240V AC power outlet.
2. Insert the lithium-ion battery into the charger. Ensure it clicks securely into place.
3. The charger will indicate charging status (e.g., an indicator light changing color). Refer to the charger's specific indicators for full charge status.

4. Once fully charged, disconnect the battery from the charger and unplug the charger from the power outlet.



Figure 4.1: The Seesii battery charger features multiple protection mechanisms including over current, over voltage, over temperature, over charge, over-load, and short circuit protection.



Figure 4.2: The battery charger is UL certified, ensuring compliance with safety standards.

4.2 Chain Tension Adjustment

The chainsaw comes pre-assembled. Before each use, verify the chain tension. A properly tensioned chain should be snug against the guide bar but still allow you to pull it around the guide bar by hand with light effort.

1. Ensure the battery is removed from the chainsaw for safety.
2. Locate the chain tensioning screw or mechanism on the side of the chainsaw.
3. Use the provided wrench to adjust the tension. Turn clockwise to tighten, counter-clockwise to loosen.
4. Once adjusted, ensure all fasteners are secure.

5. OPERATING INSTRUCTIONS

5.1 Pre-Operation Checklist

- **Battery:** Ensure the battery is fully charged and securely inserted.
- **Chain Tension:** Verify the chain is properly tensioned.
- **Lubrication:** Ensure the chain is adequately lubricated (refer to Section 6.1).
- **Safety Gear:** Always wear safety glasses/goggles and gloves.

- **Work Area:** Clear the work area of any obstructions or bystanders.

5.2 Starting and Stopping

1. Insert a charged battery into the chainsaw until it locks into place.
2. Hold the chainsaw firmly with one hand on the handle.
3. Engage any safety lock button (if present) and then press the trigger to start the chainsaw.
4. To stop, release the trigger.

5.3 Cutting Guidelines

The Seesii Mini Chainsaw is designed for light-duty cutting tasks such as pruning branches and cutting small logs up to 6 inches in diameter.

- Always maintain a firm grip on the chainsaw.
- Allow the chain to reach full speed before engaging the material.
- Apply steady, moderate pressure. Do not force the chainsaw through the cut.
- Be aware of kickback. Avoid cutting with the tip of the guide bar.
- For one-handed operation, ensure the material is stable and the cut is within safe reach. This tool is lightweight (2.62 lbs) for ease of use.

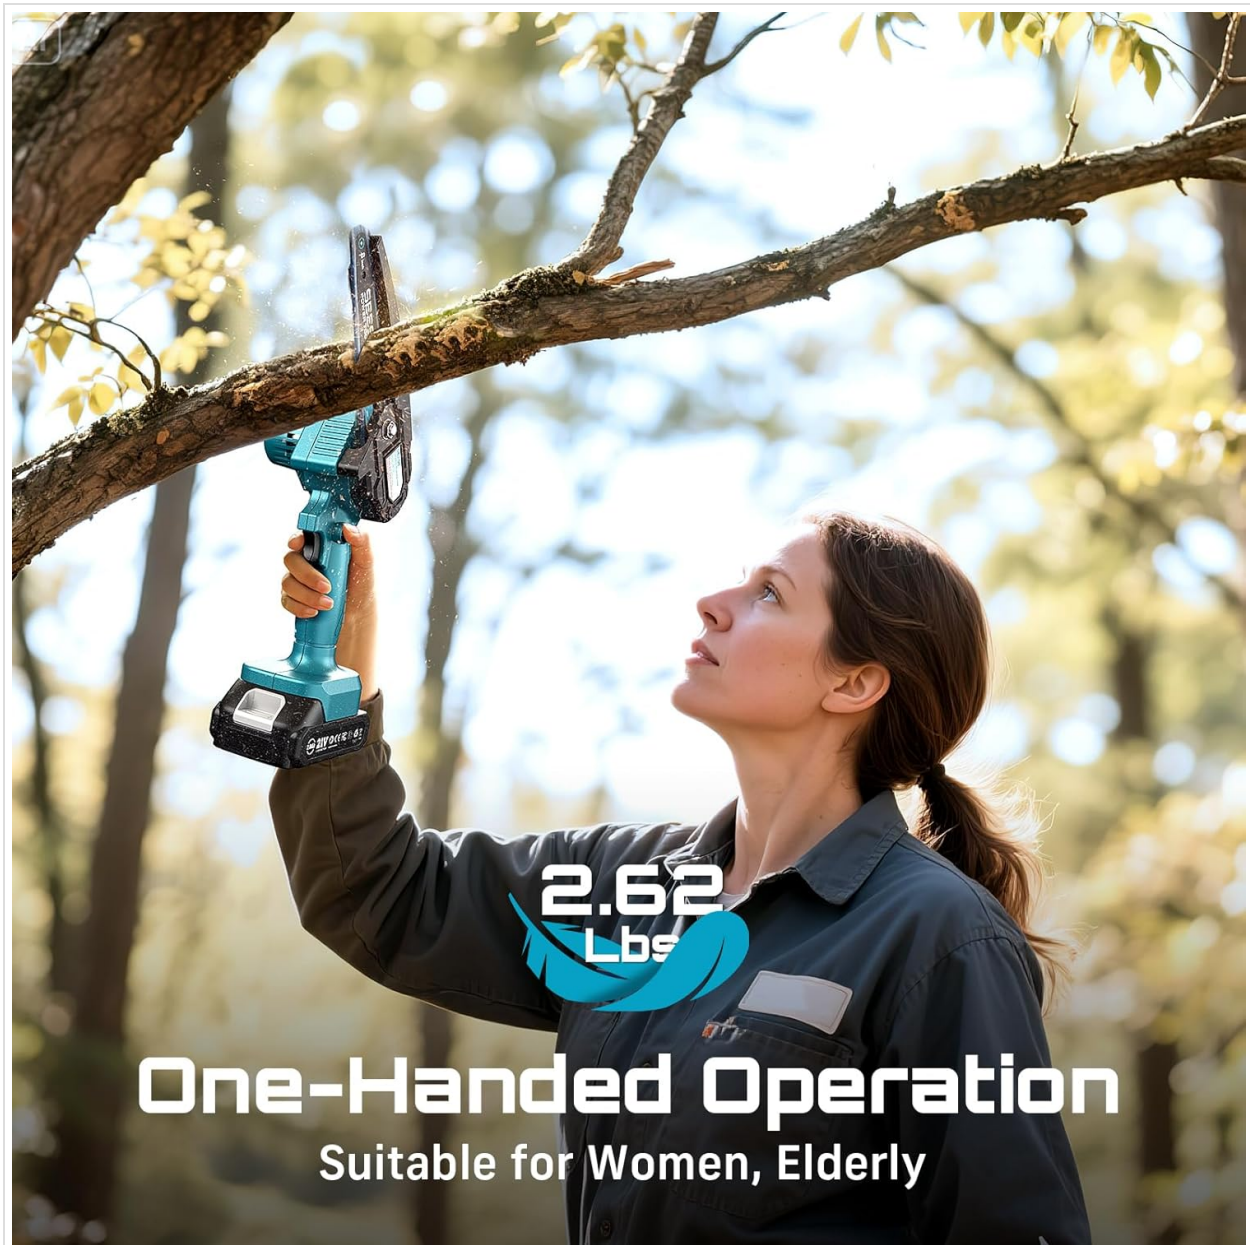


Figure 5.1: The lightweight design of the chainsaw allows for comfortable one-handed operation for light tasks.

Easy Chain Lubrication

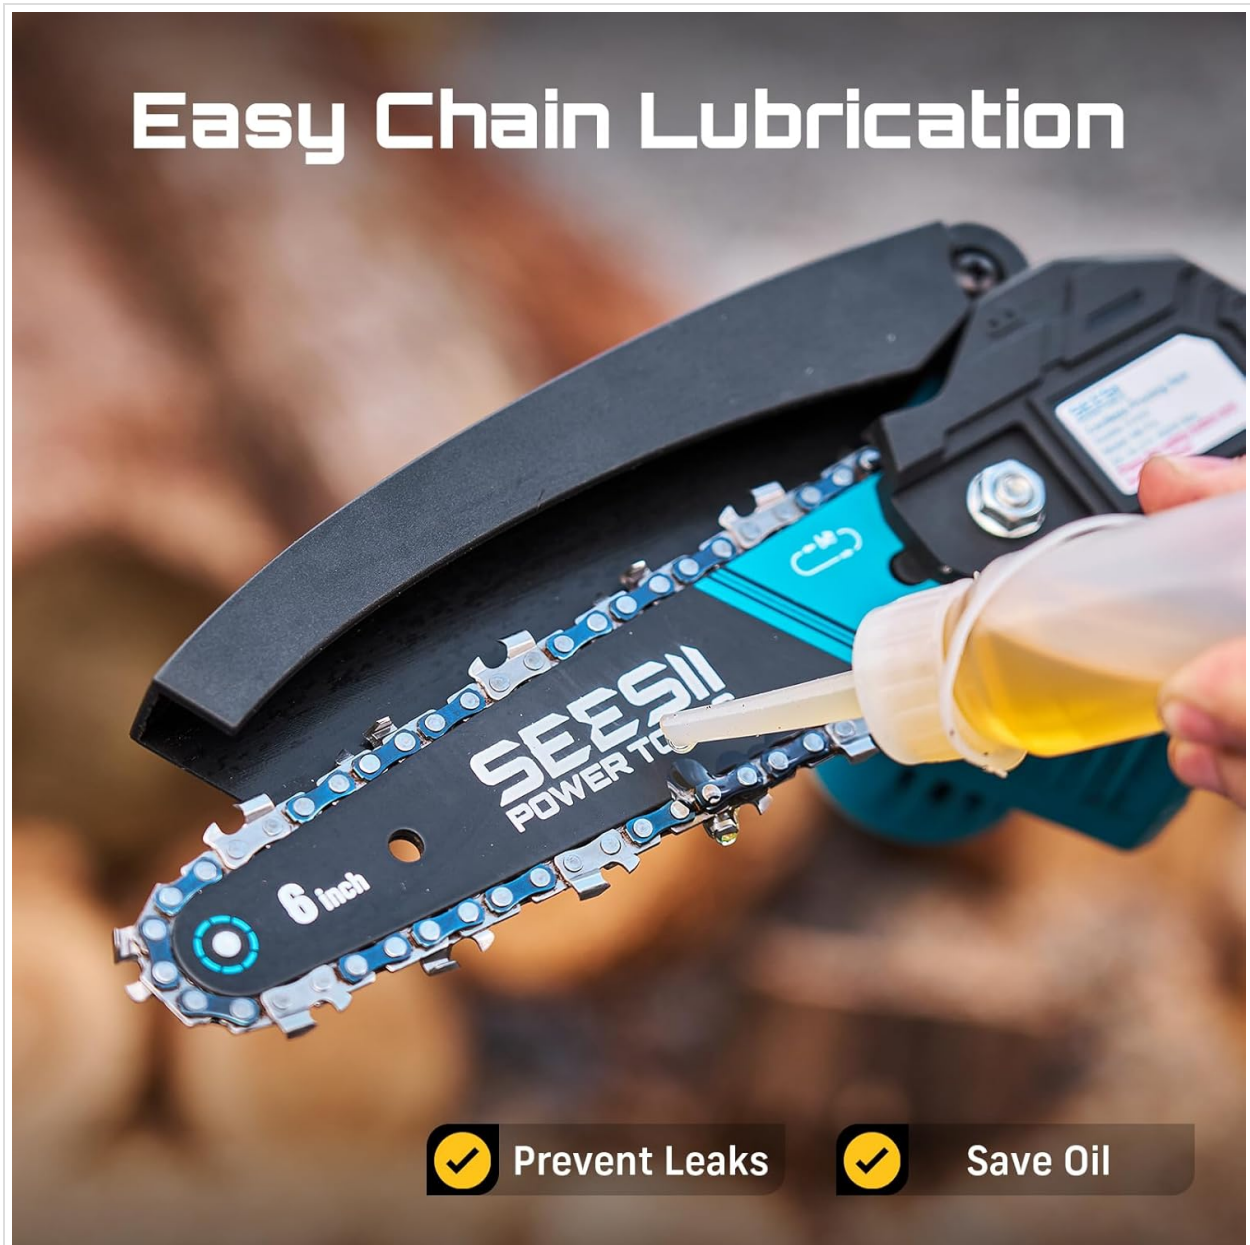


Figure 6.1: Easy chain lubrication helps prevent leaks and conserves oil while ensuring smooth operation.

6.2 Chain Sharpening and Replacement

- A dull chain will reduce cutting efficiency and increase strain on the motor. Sharpen the chain regularly or replace it with a new one when necessary.
- Refer to the included spare chains for replacement. Consult a professional if you are unsure about sharpening.

6.3 Cleaning and Storage

- After each use, remove the battery and clean the chainsaw thoroughly. Remove sawdust, debris, and sap from the guide bar, chain, and motor housing.
- Store the chainsaw and batteries in a dry, secure location, out of reach of children.
- For long-term storage, ensure batteries are partially charged (around 50%) to prolong their lifespan.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your Seesii Mini Chainsaw.

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or improperly inserted; Safety lock engaged; Faulty battery or tool.	Ensure battery is fully charged and correctly inserted. Release safety lock. Try a different charged battery. Contact customer support if issue persists.
Chain does not move or moves slowly	Chain tension too tight; Chain dull or damaged; Insufficient lubrication; Obstruction.	Adjust chain tension. Sharpen or replace chain. Lubricate chain. Remove any debris obstructing the chain.
Battery not charging	Charger not plugged in; Faulty outlet; Damaged charger or battery.	Ensure charger is securely plugged into a working outlet. Check for damage to charger or battery. Contact customer support.
Excessive vibration or noise	Loose components; Damaged chain or guide bar.	Check all fasteners for tightness. Inspect chain and guide bar for damage and replace if necessary.

8. SPECIFICATIONS

Key technical specifications for the Seesii Mini Chainsaw and Battery Charger:

Feature	Specification
Product Name	Seesii Mini Chainsaw
Model	6-inch Cordless Chainsaw
Weight	Approximately 2.62 lbs (chainsaw only)
Guide Bar Length	6 inches
Max Cutting Diameter	Up to 5.91 inches (approx. 6 inches)
Battery Type	Lithium-ion (21V, 2.0Ah x 2)
Charger Input	100-240V ~ 50/60Hz
Charger Output	21V, 0.75A
Charging Time	Refer to charger indicators for full charge.

Product Parameters

Product Name:
21V Battery Charger

Brand: **SeeSii®**

Input:
100-240V ~ 50/60HZ

Output Voltage: **21V**

Output Current: **0.75A**



Figure 8.1: Detailed product parameters for the 21V battery charger.

Charger Size



Figure 8.2: The compact size of the charger, measuring approximately 3.0 x 2.0 x 1.6 inches.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, technical assistance, or to purchase replacement parts, please contact Seesii customer support. Refer to your purchase documentation or the official Seesii website for specific warranty terms and contact details.

You can also visit the [Seesii Store on Amazon](#) for more product information and support resources.