

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [JISHO](#) /

> [JISHO Nail Drill User Manual](#)

## JISHO DX001-Pur

# JISHO Nail Drill User Manual

Model: DX001-Pur

## INTRODUCTION

---

Thank you for choosing the JISHO Electric Nail Drill. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new nail drill. Please read this manual thoroughly before use and retain it for future reference.

## IMPORTANT SAFETY INFORMATION

---

### **WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:**

- Always wear appropriate eye protection to prevent injury from flying debris or dust during operation.
- Exercise caution when handling components that may become hot during prolonged use to avoid burns.
- Keep the device away from water or other liquids. Do not use in wet conditions.
- Unplug the device when not in use and before cleaning.
- Do not operate with a damaged cord or plug. If the device is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use only attachments specified by the manufacturer.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- This appliance is for household use only.

## PACKAGE CONTENTS

---

Upon opening your JISHO Nail Drill package, please verify that all the following items are included:

- JISHO Electric Nail Drill Handpiece (Purple)
- USB Power Cord
- 5V 2A USB A Charging Adapter
- Ceramic Drill Bits (various types, including Ceramic Corn Head)

- Mandrel Bit
- Sanding Bands
- User Manual (this document)



Image: All components included in the JISHO Nail Drill package.

## PRODUCT OVERVIEW

The JISHO Electric Nail Drill is a portable and efficient tool designed for various nail care tasks. Familiarize yourself with its main components:

- **Handpiece:** The main body of the drill, housing the motor and collet for bits.
- **Speed Control & Direction Switch:** Located on the power cord, allows adjustment of rotation speed and direction (Forward/Reverse).
- **USB Power Cord:** Connects the handpiece to the power adapter or other USB power sources.
- **Charging Adapter:** 5V 2A USB A adapter for wall outlet connection.
- **Drill Bits:** Various shapes and materials for different functions (e.g., shaping, polishing, cuticle removal).

# Powerful Motor

# 25,000 RPM



Image: Detailed view of the nail drill's powerful motor and the speed/direction control on the cord.

# Selecting Superior Nail Drill Bits for Manicure



Image: Selection of superior nail drill bits for manicure, detailing their shapes and functions.

## SETUP

### 1. Connect Power:

Insert the DC plug of the USB power cord into the port at the end of the nail drill handpiece. Then, plug the USB-A end of the power cord into the provided 5V 2A USB A charging adapter, or another compatible USB power source such as a laptop, power bank, or car charger.

# Equipped with a Standard USB Port



Laptop



Adapter



Power Bank



Car Chargers



**\*Please use the included 5V/2A charger**

Image: The nail drill is equipped with a standard USB port for versatile power options.

## 2. Insert Drill Bit:

Ensure the drill is turned off. Gently push the desired drill bit into the opening at the tip of the handpiece until it is securely seated. Do not force the bit. To remove, gently pull the bit out.

## OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation of your JISHO Nail Drill:

1. **Power On:** Once connected to power, slide the ON/OFF switch on the inline controller to the 'ON' position.
2. **Adjust Speed:** Use the speed control dial on the inline controller to adjust the rotation speed. Start with a lower speed and gradually increase as needed for your task. The drill offers up to 25,000 RPM.
3. **Select Rotation Direction:** Use the FWD/REV switch on the inline controller to select the desired rotation direction (Forward or Reverse). This is useful for left-handed or right-handed use, and for different nail techniques.
4. **Begin Nail Work:** Gently apply the rotating drill bit to the nail surface. Use light pressure and keep the drill moving to avoid heat buildup or damage to the nail.

5. **Power Off:** After use, slide the ON/OFF switch to the 'OFF' position and unplug the device from the power source.



Image: High-quality salon standard application of the nail drill.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your JISHO Nail Drill:

- **Cleaning the Handpiece:** After each use, wipe the handpiece with a soft, dry cloth to remove dust and debris. Do not use harsh chemicals or immerse the handpiece in water.
- **Cleaning Drill Bits:** Clean drill bits after each use. You can use a small brush or an ultrasonic cleaner for thorough cleaning. Ensure bits are completely dry before storage.
- **Storage:** Store the nail drill and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures. Keep out of reach of children.
- **Cord Care:** Avoid bending or twisting the power cord excessively. Do not wrap the cord tightly around the handpiece.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Drill not turning on.	Not properly connected to power; power outlet issue; ON/OFF switch is off.	Ensure all connections are secure. Try a different power outlet. Slide the ON/OFF switch to 'ON'.
Drill bit wobbles or falls out.	Bit not inserted correctly; bit is incompatible.	Ensure the bit is fully and securely inserted. Use only compatible drill bits.
Excessive heat during use.	Prolonged use at high speed; excessive pressure on nail; dull bit.	Reduce speed or take breaks. Apply lighter pressure. Replace dull bits. Ensure proper ventilation.
Unusual noise or vibration.	Loose bit; internal issue.	Check if the bit is securely inserted. If the problem persists, contact customer support.

## SPECIFICATIONS

- **Model:** DX001-Pur
- **Brand:** JISHO
- **Material:** Ceramic (bits)
- **Voltage:** 5 Volts
- **Power Source:** Corded Electric
- **Input Power:** 10 Watts
- **Maximum Rotational Speed:** 25,000 RPM
- **Noise Level:** As low as 40 dB
- **Weight:** Approximately 50g (handpiece only)
- **Dimensions (Parcel):** 16.79 x 6.81 x 4.19 cm

## WARRANTY AND SUPPORT

JISHO products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the contact information provided on your product packaging or visit the official JISHO website. Please retain your proof of purchase for warranty claims. For further assistance, please contact JISHO Customer Service.